

## Contents

<b>23 - Mixture preparation - injection</b> .....	<b>1</b>
<b>1 Servicing diesel direct injection system</b> .....	<b>1</b>
1.1 Safety precautions .....	1
1.2 Rules for cleanliness .....	1
1.3 Overview of fitting locations .....	2
1.4 Air cleaner - exploded view .....	4
1.5 Removing and installing engine cover panel .....	4
1.6 Removing and installing air filter element .....	5
1.7 Removing and installing air mass meter G70 .....	7
1.8 Removing and installing intake manifold (front section) - engine code letters AKE, AYM, BAU, BCZ, BFC .....	8
1.9 Removing and installing intake manifold (front section) - engine code letters BDG, BDH ..	9
1.10 Removing and installing intake manifold (left-side) .....	10
1.11 Removing and installing intake manifold (right-side) .....	12
1.12 Removing and installing injection pump .....	14
1.13 Bleeding fuel system .....	19
1.14 Draining fuel filter .....	21
1.15 Dynamically checking and adjusting commencement of injection .....	22
1.16 Dynamic check of injectors .....	24
1.17 Checking spray pattern of injectors and checking for leaks .....	25
1.18 Removing and installing injectors .....	26
1.19 Removing and installing injector with needle lift sender G80 .....	27
1.20 Wiring and component check with adapter cable, 121-pin V.A.G 1598/31 (test box) .. .	29
1.21 Renewing diesel direct injection system control unit J248 .....	31
<b>28 - Glow plug system</b> .....	<b>34</b>
<b>1 Checking glow plug system</b> .....	<b>34</b>
1.1 Checking operation .....	34
1.2 Checking glow plugs .....	34
1.3 Removing and installing glow plugs .....	34