

Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine data	1
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Removing engine	3
1.2 Securing engine to assembly stand	20
1.3 Installing engine	21
13 - Crankshaft group	26
1 Servicing belt drive	26
1.1 Poly V-belt drive for power steering pump, alternator and viscous fan - exploded view of components	26
1.2 Removing and installing poly V-belt for power steering pump, alternator and viscous fan	28
1.3 Poly V-belt drive for air conditioner compressor - exploded view of components	30
1.4 Removing and installing poly V-belt for A/C compressor	31
1.5 Removing and installing vibration damper	35
1.6 Bracket for power steering pump and oil cooler - exploded view of components	36
1.7 Removing and installing bracket for power steering pump and oil cooler	37
1.8 Removing and installing mounting bushes on bracket for power steering pump and oil cooler	40
1.9 Toothed belt drive for camshafts - exploded view of components	47
1.10 Toothed belt drive for injection pump - exploded view of components	50
1.11 Removing and installing toothed belt	51
1.12 Removing toothed belt from camshaft sprockets	62
2 Sealing flanges and flywheel/drive plate	73
2.1 Sealing flanges and flywheel/drive plate - exploded view of components	73
2.2 Renewing crankshaft oil seal - pulley end	75
2.3 Removing and installing sealing flange (front)	77
2.4 Removing and installing dual-mass flywheel - vehicles with manual gearbox	80
2.5 Extracting and driving in needle bearing for dual-mass flywheel - vehicles with manual gearbox	81
2.6 Removing and installing flywheel - vehicles with multitronic gearbox	83
2.7 Removing and installing drive plate - vehicles with automatic gearbox 01V	84
3 Crankshaft	87
3.1 Removing and installing crankshaft	87
3.2 Crankshaft dimensions	89
3.3 Measuring axial clearance	89
3.4 Measuring radial clearance	90
3.5 Removing and installing chain sprocket	90
4 Pistons and conrods	92
4.1 Dismantling and assembling pistons and conrods	92
4.2 Checking piston projection at "TDC"	95
4.3 Piston and cylinder dimensions	96
4.4 Checking radial clearance of conrod bearings	97
15 - Cylinder head, valve gear	98
1 Removing and installing cylinder head	98
1.1 Cylinder head - exploded view of components	98
1.2 Removing and installing cylinder head cover (left-side)	100



1.3	Removing and installing cylinder head cover (right-side)	102
1.4	Removing cylinder head (left-side)	105
1.5	Removing cylinder head (right-side)	107
1.6	Installing cylinder head	111
1.7	Checking compression	115
2	Servicing valve gear - engine code letters AKE, AYM, BFC	117
2.1	Valve gear - exploded view of components	117
2.2	Checking axial clearance of camshafts	119
2.3	Renewing camshaft oil seal	120
2.4	Removing and installing camshafts	122
2.5	Removing and installing outer camshaft bearing caps	127
2.6	Renewing valve stem oil seals with cylinder head installed	128
2.7	Renewing valve stem oil seals with cylinder head removed	132
2.8	Checking hydraulic valve compensation elements	135
2.9	Valve dimensions	136
2.10	Checking valve guides	136
2.11	Checking valves	137
3	Servicing valve gear - engine code letters BAU, BCZ, BDG, BDH	138
3.1	Valve gear - exploded view of components	138
3.2	Checking axial clearance of camshafts	140
3.3	Renewing camshaft oil seal	141
3.4	Removing and installing camshafts	143
3.5	Removing and installing outer camshaft bearing caps	147
3.6	Renewing valve stem oil seals with cylinder head installed	148
3.7	Renewing valve stem oil seals with cylinder head removed	153
3.8	Checking hydraulic valve compensation elements	156
3.9	Valve dimensions	157
3.10	Checking valve guides	157
3.11	Checking valves	158
17	- Lubrication	159
1	Components of lubrication system	159
1.1	Sump, oil pump - exploded view of components	159
1.2	Removing and installing sump (bottom section)	161
1.3	Removing and installing oil pump	165
1.4	Removing and installing sump (top section)	171
1.5	Removing and installing oil cooler	182
1.6	Oil filter bracket, oil filter - exploded view of components	184
1.7	Removing and installing connecting piece with oil separator	186
1.8	Removing and installing oil filter bracket - engine code letters AKE, AYM, BAU, BCZ, BFC	189
1.9	Removing and installing oil filter bracket - engine code letters BDG, BDH	190
1.10	Renewing oil retention valves	190
1.11	Checking oil pressure and oil pressure switch	191
1.12	Engine oil	193
1.13	Checking oil level	193
19	- Cooling	194
1	Removing and installing parts of cooling system	194
1.1	Connection diagram for coolant hoses - vehicles with exhaust gas recirculation cooler and without auxiliary heater	194
1.2	Connection diagram for coolant hoses - vehicles without exhaust gas recirculation cooler and with auxiliary heater	196
1.3	Draining and filling cooling system	197
1.4	Coolant pump and thermostat - exploded view of components	203
1.5	Removing and installing coolant pump	204

1.6	Removing, installing and checking thermostat	205
1.7	Coolant pipes on vehicles with engine code letters AKE, AYM, BAU, BCZ, BFC - exploded view of components	212
1.8	Coolant pipes on vehicles with engine code letters BDG, BDH - exploded view of components	214
1.9	Removing and installing coolant pipe (front)	214
1.10	Removing and installing coolant pipe (top left and bottom left) - engine code letters AKE, AYM, BAU, BCZ, BFC	216
1.11	Removing and installing coolant pipe (top left) - engine code letters BDG, BDH	218
1.12	Removing and installing coolant pipe (bottom left) - engine code letters BDG, BDH	220
1.13	Removing and installing coolant pipe (right-side)	221
1.14	Removing and installing coolant pipe (rear) - engine code letters BDG, BDH	222
1.15	Removing and installing radiator	223
1.16	Removing and installing viscous fan	225
1.17	Removing and installing radiator cowl	227
1.18	Removing and installing radiator fan V7 with radiator fan control unit J293	229
1.19	Renewing radiator fan motor	229
1.20	Checking cooling system for leaks	230
21	Turbocharging/supercharging	232
1	Servicing charge air system with turbocharger	232
1.1	Rules for cleanliness	232
1.2	Hose connection diagram for charge pressure control	232
1.3	Turbocharger - exploded view of components	234
1.4	Removing and installing turbocharger	235
1.5	Removing and installing intermediate flange - engine code letters AKE, AYM, BAU, BCZ, BFC	237
1.6	Removing and installing intermediate flange - engine code letters BDG, BDH	239
1.7	Charge air cooling - exploded view	241
1.8	Removing and installing charge air cooler	243
1.9	Removing and installing charge air pressure sender G31	244
26	Exhaust system	246
1	Removing and installing parts of exhaust system - vehicles with front-wheel drive	246
1.1	Exhaust system - exploded view of components	246
1.2	Separating centre and rear silencers	250
1.3	Removing and installing starter catalytic converter	251
1.4	Removing and installing front exhaust pipe with main catalytic converter	254
1.5	Stress-free alignment of exhaust system	255
1.6	Checking exhaust system for leaks	256
2	Removing and installing parts of exhaust system - vehicles with four-wheel drive	257
2.1	Exhaust system - exploded view of components	257
2.2	Separating centre and rear silencers	260
2.3	Removing and installing starter catalytic converter	261
2.4	Removing and installing front exhaust pipe with main catalytic converter	264
2.5	Stress-free alignment of exhaust system	266
2.6	Checking exhaust system for leaks	267
3	Removing and installing exhaust manifold	268
3.1	Exhaust manifold with intermediate pipe - exploded view of components	268
3.2	Removing and installing exhaust manifold (left-side) with intermediate pipe	269
3.3	Removing and installing exhaust manifold (right-side) with intermediate pipe	270
4	Exhaust gas recirculation system	273
4.1	Hose connection diagram for exhaust gas recirculation	273
4.2	Exhaust gas recirculation system on vehicles with engine code letters AKE, AYM, BAU, BCZ, BFC - exploded view of components	274
4.3	Checking mechanical exhaust gas recirculation valve - vehicles with engine code letters AKE, AYM, BAU, BCZ, BFC	274



4.4	Removing and installing mechanical exhaust gas recirculation valve - engine code letters AKE, AYM, BAU, BCZ, BFC	276
4.5	Exhaust gas recirculation system on vehicles with engine code letters BDG, BDH - exploded view of components	277
4.6	Checking mechanical exhaust gas recirculation valve - engine code letters BDG, BDH ..	279
4.7	Removing and installing mechanical exhaust gas recirculation valve - engine code letters BDG, BDH	280
4.8	Removing and installing exhaust gas recirculation cooler - engine code letters BDG, BDH	280