

Contents

20 - Fuel supply system	1
1 Notes for working on fuel supply system	1
1.1 Safety precautions when working on the fuel supply system	1
1.2 Rules for cleanliness	1
1.3 Test conditions	2
2 Fuel tank - vehicles with front-wheel drive	3
2.1 Exploded view - fuel tank with components	3
2.2 Draining fuel tank	4
2.3 Removing and installing fuel tank with attached components	5
3 Fuel delivery unit, fuel gauge sender - vehicles with front-wheel drive and 4-cylinder engine	13
3.1 Exploded view - fuel delivery unit and fuel gauge sender	13
3.2 Suction-jet pump: operation	14
3.3 Checking fuel pump (electrical test)	15
3.4 Removing and installing fuel delivery unit	17
3.5 Checking fuel gauge sender G	21
3.6 Removing and installing fuel gauge sender G	24
4 Fuel delivery unit, fuel gauge sender - vehicles with front-wheel drive and 2.5 ltr. 6-cylinder engine up to 04.2002	25
4.1 Exploded view - fuel delivery unit and fuel gauge sender	25
4.2 Suction-jet pump: operation	26
4.3 Checking fuel pump (electrical test)	27
4.4 Checking low fuel level sender G210	29
4.5 Removing and installing fuel delivery unit	31
4.6 Checking fuel gauge sender G	36
4.7 Removing and installing fuel gauge sender G	39
5 Fuel delivery unit, fuel gauge sender - vehicles with front-wheel drive and 2.5 ltr. 6-cylinder engine from 05.2002 onwards	43
5.1 Exploded view - fuel delivery unit and fuel gauge sender	43
5.2 Suction-jet pump: operation	44
5.3 Checking fuel pump (electrical test)	45
5.4 Checking low fuel level sender G210	47
5.5 Removing and installing fuel delivery unit	49
5.6 Checking fuel gauge sender G	53
5.7 Removing and installing fuel gauge sender G	55
6 Fuel delivery unit, fuel gauge sender - vehicles with front-wheel drive and 2.7 ltr. 6-cylinder engine	56
6.1 Exploded view - fuel delivery unit and fuel gauge sender	56
6.2 Checking fuel pump (electrical test)	57
6.3 Removing and installing fuel delivery unit	59
6.4 Checking fuel gauge sender G	63
6.5 Removing and installing fuel gauge sender G	64
7 Fuel tank - vehicles with four-wheel drive up to 10.2004	66
7.1 Exploded view - fuel tank with components	66
7.2 Draining fuel tank	67
7.3 Removing and installing fuel tank with attached components	71
8 Fuel delivery unit, fuel gauge sender - vehicles with four-wheel drive and 4-cylinder engine up to 10.2004	77
8.1 Exploded view - fuel delivery unit and fuel gauge sender	77
8.2 Checking fuel pump (electrical test)	80
8.3 Removing and installing fuel delivery unit	82
8.4 Checking fuel gauge sender G	87
8.5 Removing and installing fuel gauge sender G	89



8.6	Checking fuel gauge sender 2 G169	92
8.7	Removing and installing fuel gauge sender 2 G169	94
8.8	Suction-jet pump: operation	97
8.9	Removing and installing suction-jet pump in left fuel tank chamber	98
9	Fuel delivery unit, fuel gauge sender - vehicles with four-wheel drive and 2.5 ltr. 6-cylinder engine up to 10.2004	107
9.1	Exploded view - fuel delivery unit and fuel gauge sender	107
9.2	Checking fuel pump (electrical test)	110
9.3	Checking low fuel level sender G210	112
9.4	Removing and installing fuel delivery unit	113
9.5	Checking fuel gauge sender G	119
9.6	Removing and installing fuel gauge sender G	121
9.7	Checking fuel gauge sender 2 G169	124
9.8	Removing and installing fuel gauge sender 2 G169	126
9.9	Suction-jet pump: operation	129
9.10	Removing and installing suction-jet pump in left fuel tank chamber	130
10	Fuel tank - vehicles with four-wheel drive from 11.2004 onwards	139
10.1	Exploded view - fuel tank with components	139
10.2	Draining fuel tank	140
10.3	Removing and installing fuel tank with attached components	143
11	Fuel delivery unit, fuel gauge sender - vehicles with four-wheel drive from 11.2004 onwards	148
11.1	Exploded view - fuel delivery unit and fuel gauge sender	148
11.2	Checking fuel pump (electrical test)	150
11.3	Removing and installing fuel delivery unit	152
11.4	Checking fuel gauge sender G	155
11.5	Removing and installing fuel gauge sender G	157
11.6	Checking fuel gauge sender 2 G169	157
11.7	Removing and installing fuel gauge sender 2 G169	159
11.8	Suction-jet pump: operation	162
11.9	Removing and installing suction-jet pump	162
12	Servicing tandem pump - vehicles with 4-cylinder engine	168
12.1	Checking tandem pump - vehicles with 1.9 ltr. and 2.0 ltr. 2V engine	168
12.2	Removing and installing tandem pump - vehicles with 1.9 ltr. and 2.0 ltr. 2V engine	170
12.3	Checking tandem pump - vehicles with 2.0 ltr. 4V engine	173
12.4	Removing and installing tandem pump - vehicles with 2.0 ltr. 4V engine	174
13	Servicing fuel cooler	177
13.1	Removing and installing fuel cooler	177
14	Servicing fuel filter	179
14.1	Exploded view - fuel filter on vehicles with 1.9 ltr. 4-cylinder engine	179
14.2	Exploded view - fuel filter on vehicles with 2.0 ltr. 4-cylinder engine	180
14.3	Exploded view - fuel filter on vehicles with 2.5 ltr. 6-cylinder engine	181
14.4	Exploded view - fuel filter on vehicles with 2.7 ltr. and 3.0 ltr. 6-cylinder engine	182
15	Bleeding fuel system	184
15.1	Vehicles with 4-cylinder or 2.7 ltr.; 3.0 ltr. 6-cylinder engine	184
15.2	Vehicles with 2.5 ltr. 6-cylinder engine	184
16	Checking fuel system for leaks	187
16.1	Checking fuel system for leaks - vehicles with 1.9 ltr. and 2.0 ltr. 2V 4-cylinder engine	187
16.2	Checking fuel system for leaks - vehicles with 2.0 ltr. 4V 4-cylinder engine	191
16.3	Checking fuel system for leaks - vehicles with 2.5 ltr. 6-cylinder engine	194
16.4	Checking fuel system for leaks - vehicles with 2.7 ltr. and 3.0 ltr. 6-cylinder engine	198
17	Servicing accelerator mechanism	201
17.1	Exploded view - accelerator pedal module	201
17.2	Removing and installing accelerator pedal module with accelerator position sender	202
17.3	Adapting kick-down function - vehicles with automatic gearbox	202