

Contents

00 - Technical data	1
1 Rear final drive identification	1
1.1 Audi A4 2001 ▶ – Code letters, allocation, transmission ratios and capacities	2
1.2 Cabriolet 2003 ▶ – Code letters, allocation, transmission ratios and capacities	2
1.3 Audi A6 2005 ▶ – Code letters, allocation, transmission ratios, capacities	3
1.4 Audi A8 2003 ▶ – Code letters, allocation, transmission ratios, capacities	4
2 Transmission layout	6
3 General repair instructions	8
3.1 Jacking mode (vehicles with pneumatic suspension)	8
3.2 Special tools	8
3.3 Components	8
39 - Final drive - rear differential	10
1 Exploded view - servicing propshaft	10
1.1 Removing and installing propshaft - Audi A4, Audi Cabriolet and Audi A6	11
1.2 Removing and installing propshaft on Audi A8	18
1.3 Detaching and attaching propshaft at rear final drive	24
2 Measuring and marking radial run-out at flange for propshaft	27
3 Checking gear oil in rear final drive	28
4 Exploded view - rear final drive on Audi A4, Audi Cabriolet and Audi A6	29
4.1 Removing and installing rear final drive on Audi A4, Audi Cabriolet and Audi A6	29
5 Exploded view - rear final drive on Audi A8	34
5.1 Removing and installing rear final drive on Audi A8	34
6 Renewing flange shaft oil seals	39
7 Renewing protective ring on flange shaft	43
8 Renewing oil seal for propshaft flange on rear final drive (rear final drive installed)	45
8.1 Renewing protective ring on flange for propshaft	51