

Contents

00 - Technical data	1
1 Identification	1
1.1 Gearbox identification	1
1.2 Identification of final drive	2
2 Technical data	5
2.1 Allocation of gearbox to engine	5
2.2 Capacities	12
3 Repair instructions	13
3.1 General repair instructions	13
4 Safety precautions	16
4.1 Safety precautions when working on vehicles with start/stop system	16
5 Electrical components	17
5.1 Overview of fitting locations - electrical components	17
30 - Clutch	18
1 Clutch mechanism	18
1.1 Exploded view - pedal cluster	18
1.2 Exploded view - clutch hydraulics	22
1.3 Exploded view - clutch release mechanism	23
1.4 Removing and installing over-centre spring	24
1.5 Removing and installing clutch pedal	26
1.6 Notes on removing and installing clutch master cylinder and slave cylinder	27
1.7 Checking clutch master cylinder and clutch slave cylinder	27
1.8 Removing and installing clutch master cylinder	28
1.9 Removing and installing clutch slave cylinder	32
1.10 Bleeding clutch hydraulics	34
2 Clutch	37
2.1 Exploded view - clutch module	37
2.2 Exploded view - clutch unit	38
2.3 Tightening sequence - clutch module to drive plate	38
34 - Controls, housing	41
1 Selector mechanism	41
1.1 Overview - selector mechanism	41
1.2 Exploded view - gear knob and cover	43
1.3 Exploded view - selector mechanism	44
1.4 Removing and installing gear knob	46
1.5 Removing and installing noise insulation	47
1.6 Removing and installing selector mechanism	48
1.7 Adjusting selector mechanism	59
1.8 Renewing selector shaft oil seal	62
1.9 Removing and installing gear detector switch F208	65
1.10 Removing and installing gear detection sensor G604	69
1.11 Removing and installing gearbox neutral position sender G701	73
2 Removing and installing gearbox	76
2.1 Removing gearbox	76
2.2 Installing gearbox	146
2.3 Tightening torques for gearbox	188
3 Transporting gearbox	194
4 Assembly mountings	195
4.1 Exploded view - assembly mountings	195
4.2 Removing and installing tunnel cross member	195



4.3	Removing and installing gearbox support with gearbox mounting	197
4.4	Removing and installing gearbox mounting	198
5	Gear oil	199
5.1	Checking gear oil level	199
6	Dismantling and assembling gearbox	200
35 - Gears, shafts		201
1	Dismantling and assembling gears and shafts	201
39 - Final drive - front differential		202
1	Oil seals	202
1.1	Overview of fitting locations - oil seals	202
1.2	Renewing oil seal (right-side)	203
2	Front differential	208
3	Centre differential	209
3.1	Exploded view - centre differential housing	209
3.2	Removing and installing centre differential housing	212
3.3	Renewing oil seal for rear splined shaft	224
3.4	Renewing oil seal for flange shaft (rear)	226