

Contents

00 - Technical data	1
1 Identification	1
1.1 Identification of gearbox	1
2 Safety information	3
2.1 Safety precautions when working on vehicle	3
2.2 Safety precautions when using testers and measuring instruments during a road test	4
2.3 Notes on tow-starting and towing	4
3 Repair instructions	5
3.1 Rules for cleanliness	5
3.2 General notes	5
3.3 General repair instructions	6
3.4 Contact corrosion	8
4 Technical data	9
4.1 Allocation of gearbox to engine	9
4.2 Capacities	10
5 Overview - power transmission	12
5.1 Overview - power transmission, all-wheel drive	12
32 - Torque converter	13
1 Torque converter	13
1.1 Assembly overview - torque converter	13
1.2 Removing and installing torque converter	13
1.3 Draining torque converter	17
1.4 Checking torque converter	17
1.5 Removing and installing torque converter oil seal	18
37 - Controls, housing	20
1 Selector mechanism	20
1.1 Assembly overview - selector mechanism	20
1.2 Assembly overview - selector lever handle	22
1.3 Assembly overview - selector lever cable	22
1.4 Checking selector mechanism	23
1.5 Manual release from position P	26
1.6 Removing and installing selector mechanism	27
1.7 Dismantling and assembling selector mechanism	33
1.8 Removing and installing selector lever handle	37
1.9 Detaching selector lever boot from selector lever handle	40
1.10 Removing and installing selector lever position display Y26	41
1.11 Removing and installing selector lever cable	42
1.12 Checking and adjusting selector lever cable	48
1.13 Adjusting selector lever cable to basic setting	49
1.14 Renewing selector shaft oil seal	55
2 Removing and installing gearbox	59
2.1 Removing gearbox	59
2.2 Installing gearbox	74
2.3 Tightening torques for gearbox	81
3 Assembly mountings	84
3.1 Assembly overview - assembly mountings	84
3.2 Removing and installing tunnel cross member	84
3.3 Removing and installing gearbox support with gearbox mounting	87
3.4 Removing and installing gearbox mounting	87
4 Transporting gearbox	89



5	Securing to engine and gearbox support	91
6	ATF	93
6.1	Assembly overview - ATF drain and inspection plugs in gearbox	93
6.2	Checking ATF level	93
6.3	Draining and filling ATF	98
7	ATF circuit	103
7.1	Assembly overview - ATF circuit	103
7.2	Removing and installing ATF filter	105
7.3	Cleaning ATF lines	107
7.4	Removing and installing ATF lines	107
38	- Gears, control	111
1	ATF system	111
1.1	Assembly overview - ATF system	111
1.2	Removing and installing oil pan	114
2	Mechatronic unit	120
2.1	Removing and installing mechatronic unit	120
39	- Final drive - front differential	126
1	Final drive	126
1.1	Assembly overview - final drive	126
1.2	Renewing O-ring on cover for front final drive	128
2	Gear oil	131
2.1	Assembly overview - gear oil drain and inspection plugs	131
2.2	Checking gear oil level	131
2.3	Draining and filling gear oil	136
3	Seals	143
3.1	Renewing left oil seal	143
3.2	Renewing right oil seal	147
4	Differential	150
4.1	Removing and installing left flange shaft	150
4.2	Removing and installing right flange shaft	152
5	Centre differential	157
5.1	Assembly overview - centre differential	157
5.2	Removing and installing centre differential	159
5.3	Renewing oil seal for rear splined shaft	166
5.4	Removing and installing rear splined shaft	172
5.5	Renewing ball bearing for rear splined shaft	175
5.6	Renewing ball bearing for centre differential	178
6	Gearbox control system	180
6.1	Overview of fitting locations - gearbox control system	180