

Contents

00 - Technical data	1
1 Identification	1
1.1 Engine identification number/engine data	1
2 Safety precautions	2
3 Repair instructions	3
10 - Removing and installing engine	4
1 Removing and installing engine	4
1.1 Removing engine	4
1.2 Securing engine to engine and gearbox support	20
1.3 Installing engine	20
2 Assembly mountings	28
2.1 Exploded view - assembly mountings	28
2.2 Supporting engine in installation position	28
2.3 Removing and installing engine mountings	29
3 Engine cover panel	31
13 - Crankshaft group	32
1 Cylinder block (pulley end)	32
1.1 Exploded view - cylinder block (pulley end)	32
1.2 Removing and installing poly V-belt	32
1.3 Removing and installing tensioner for poly V-belt	32
1.4 Removing and installing vibration damper	32
1.5 Removing and installing bracket for ancillaries	33
2 Cylinder block (gearbox end)	34
3 Crankshaft	35
4 Balance shaft	36
5 Pistons and conrods	37
15 - Cylinder head, valve gear	38
1 Timing chain cover	38
2 Chain drive	39
3 Cylinder head	40
3.1 Exploded view - cylinder head	40
3.2 Removing and installing cylinder head	40
3.3 Checking compression	43
4 Valve gear	44
4.1 Exploded view - valve gear	44
4.2 Removing and installing camshaft	44
4.3 Installing ball for slider	46
4.4 Removing and installing actuators for camshaft adjustment	46
4.5 Removing and installing camshaft control valve 1 N205	46
4.6 Removing and installing valve stem oil seals	46
5 Inlet and exhaust valves	47
17 - Lubrication	48
1 Sump/oil pump	48
1.1 Exploded view - sump/oil pump	48
1.2 Engine oil	48
1.3 Removing and installing sump (bottom section)	48
1.4 Removing and installing oil pump	49



1.5	Removing and installing sump (top section)	49
1.6	Removing and installing oil level and oil temperature sender G266	49
2	Engine oil cooler	50
3	Crankcase breather	51
4	Oil filter/oil pressure switches	52
19	Cooling	53
1	Cooling system/coolant	53
1.1	Connection diagram - coolant hoses	53
1.2	Checking cooling system for leaks	54
1.3	Draining and filling cooling system	54
2	Coolant pump/thermostat assembly	60
2.1	Exploded view - coolant pump/thermostat	60
2.2	Exploded view - coolant temperature senders	60
2.3	Exploded view - coolant valve for gearbox	62
2.4	Removing and installing coolant pump	62
2.5	Removing and installing toothed belt for coolant pump	63
2.6	Removing and installing actuator for engine temperature regulation N493	63
2.7	Removing and installing coolant temperature sender G62	64
2.8	Removing and installing radiator outlet coolant temperature sender G83	64
2.9	Removing and installing coolant valves	65
3	Coolant pipes	67
3.1	Exploded view - coolant pipes	67
3.2	Removing and installing coolant pipes	68
4	Radiator/radiator fans	71
4.1	Exploded view - radiator/radiator fans	71
4.2	Removing and installing radiator	73
4.3	Removing and installing radiator cowl	79
4.4	Removing and installing radiator fan control unit J293	84
4.5	Removing and installing radiator fans	85
21	Turbocharging/supercharging	88
1	Turbocharger	88
1.1	Exploded view - turbocharger	88
1.2	Removing and installing turbocharger	88
2	Charge air system	89
2.1	Exploded view - charge air system	89
2.2	Exploded view - hose connections for charge air system	90
2.3	Removing and installing charge air cooler	90
2.4	Removing and installing charge pressure sender G31	92
2.5	Checking charge air system for leaks	92
24	Mixture preparation - injection	94
1	Injection system	94
1.1	Overview of fitting locations - injection system	94
2	Air cleaner	102
2.1	Exploded view - air cleaner housing	102
2.2	Removing and installing air cleaner housing	103
3	Intake manifold	105
3.1	Exploded view - intake manifold	105
3.2	Removing and installing intake manifold	105
3.3	Removing and installing throttle valve module J338	108
3.4	Cleaning throttle valve module	109
3.5	Checking intake manifold change-over function	109

4	Injectors	110
4.1	Exploded view - fuel rail with injectors	110
4.2	Removing and installing fuel rail	110
4.3	Removing and installing injectors	110
4.4	Cleaning injectors	110
5	Senders and sensors	111
5.1	Removing and installing intake air temperature sender G42 / intake manifold pressure sender G71	111
5.2	Removing and installing fuel pressure sender G247	111
5.3	Checking fuel pressure sender G247	112
5.4	Removing and installing fuel pressure sender for low pressure G410	112
6	High-pressure pump	113
7	Lambda probe	114
8	Engine control unit	115
8.1	Removing and installing engine/motor control unit J623	115
26	- Exhaust system	119
1	Exhaust pipes/silencers	119
1.1	Exploded view - silencers	119
1.2	Separating exhaust pipes/silencers	121
1.3	Removing and installing front silencers	122
1.4	Renewing tailpipes	123
1.5	Stress-free alignment of exhaust system	124
1.6	Checking exhaust system for leaks	125
2	Emission control system	126
2.1	Exploded view - emission control system	126
2.2	Removing and installing catalytic converter	126
28	- Ignition system	130
1	Ignition system	130