

Contents

24 - Mixture preparation - injection	1
1 Safety precautions and rules for cleanliness	1
1.1 General notes on self-diagnosis	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Safety precautions for vehicles with start/stop system	2
1.4 Safety precautions when working on the fuel system	2
1.5 Rules for cleanliness and instructions for working on fuel system	3
1.6 Safety precautions when working on the ignition system	4
1.7 Reducing pressure in high-pressure section of injection system	4
1.8 Checking vacuum system	6
2 Injection system	8
2.1 Technical data	8
2.2 Overview of fitting locations	8
3 Air cleaner	18
3.1 Air cleaner - exploded view	18
3.2 Removing and installing engine cover panel	19
3.3 Removing and installing air filter element	19
3.4 Removing air cleaner housing	21
4 Intake manifold	24
4.1 Intake manifold - exploded view	24
4.2 Fuel rail - exploded view	25
4.3 Removing and installing intake manifold with fuel rail	26
4.4 Removing and installing fuel rail	30
5 High-pressure pump	32
5.1 High-pressure pump - exploded view	32
5.2 Removing and installing high-pressure pump	33
6 Injectors	36
6.1 Removing and installing injectors	36
6.2 Cleaning injectors	39
7 Components of injection system	41
7.1 Removing and installing fuel pressure sender G247	41
7.2 Checking fuel pressure sender G247	42
7.3 Checking residual pressure in fuel system (up to high-pressure pump)	44
7.4 Removing and installing air mass meter G70	47
7.5 Removing and installing throttle valve module J338	47
7.6 Cleaning throttle valve module J338	48
7.7 Checking intake manifold change-over function	49
7.8 Checking dual non-return valve	50
8 Lambda probes	53
8.1 Lambda probes - overview	53
8.2 Removing and installing Lambda probe G39 and Lambda probe heater Z19 before catalytic converter	53
8.3 Removing and installing Lambda probe after catalytic converter G130 and Lambda probe 1 heater after catalytic converter Z29	54
9 Engine control unit	56
9.1 Wiring and component check with test box V.A.G 1598/42	56
9.2 Renewing engine control unit J623	58
28 - Ignition system	62
1 General notes and safety precautions	62
1.1 General notes on ignition system	62
1.2 Safety precautions	62

2	Servicing ignition system	63
2.1	Test data	63
2.2	Ignition system - exploded view	63
2.3	Removing and installing ignition coils with output stages	64
2.4	Removing knock sensor 1 G61	65
2.5	Removing and installing engine speed sender G28	65