

## Contents

<b>24 - Mixture preparation - injection</b>	<b>1</b>
<b>1 Safety precautions and rules for cleanliness</b>	<b>1</b>
1.1 General notes on self-diagnosis	1
1.2 Safety precautions when using testers and measuring instruments during a road test	2
1.3 Safety precautions for vehicles with start/stop system	2
1.4 Rules for cleanliness and instructions for working on fuel system	3
1.5 Safety precautions when working on the ignition system	3
1.6 Reducing fuel pressure in high-pressure section	4
1.7 Checking vacuum system	5
<b>2 Injection system</b>	<b>6</b>
2.1 Technical data	6
2.2 Overview of fitting locations - injection system	6
<b>3 Air cleaner</b>	<b>17</b>
3.1 Exploded view - air cleaner	17
3.2 Removing and installing engine cover panel	18
3.3 Removing and installing air filter element	19
3.4 Removing air cleaner housing	20
<b>4 Intake manifold</b>	<b>21</b>
4.1 Exploded view - intake manifold	21
4.2 Exploded view - fuel rail (FSI)	23
4.3 Exploded view - fuel rail (MPI)	25
4.4 Removing and installing intake manifold	26
4.5 Removing and installing fuel rail for FSI injectors	30
4.6 Removing and installing throttle valve module J338	30
4.7 Cleaning throttle valve module J338	31
4.8 Checking intake manifold change-over function	31
<b>5 High-pressure pump</b>	<b>34</b>
5.1 Exploded view - high-pressure pump	34
5.2 Removing and installing high-pressure pump	35
<b>6 Injectors</b>	<b>39</b>
6.1 Removing and installing FSI injectors	39
6.2 Removing and installing MPI injectors	43
6.3 Cleaning FSI injectors	44
<b>7 Senders and sensors</b>	<b>46</b>
7.1 Removing and installing fuel pressure sender G247	46
7.2 Checking fuel pressure sender G247	47
7.3 Removing and installing fuel pressure sender for low pressure G410	49
7.4 Checking residual pressure in fuel system (up to high-pressure pump)	51
<b>8 Lambda probes</b>	<b>54</b>
8.1 Overview - Lambda probes	54
8.2 Removing and installing Lambda probe G39 and Lambda probe heater Z19 before catalytic converter	54
8.3 Removing and installing Lambda probe after catalytic converter G130 and Lambda probe 1 heater after catalytic converter Z29	55
<b>9 Engine control unit</b>	<b>57</b>
9.1 Wiring and component check with isolator boxes VAS 6606	57
9.2 Renewing engine control unit J623	58
<b>28 - Ignition system</b>	<b>62</b>
<b>1 General notes and safety precautions</b>	<b>62</b>
1.1 General notes on ignition system	62
1.2 Safety precautions	62



<b>2</b>	<b>Servicing ignition system</b> .....	<b>63</b>
2.1	Test data .....	63
2.2	Exploded view - ignition system .....	64
2.3	Removing and installing ignition coils with output stages .....	64
2.4	Removing knock sensor 1 G61 .....	65
2.5	Removing and installing engine speed sender G28 .....	66