



Contents

24 - Mixture preparation - injection	1
1 Safety precautions and rules for cleanliness	1
1.1 General notes on self-diagnosis	1
1.2 Safety precautions when using testers and measuring instruments during a road test	2
1.3 Safety precautions for vehicles with start/stop system	2
1.4 Safety precautions and instructions for working on the fuel system	3
1.5 Safety precautions when working on the ignition system	4
1.6 Reducing pressure in high-pressure section of injection system	4
1.7 Checking vacuum system	6
2 Injection system	8
2.1 Technical data	8
2.2 Overview of fitting locations (vehicles with engine codes CDNB, CDNC, CAEB, CDZA, CAEA and CADA)	8
2.3 Overview of fitting locations (vehicles with engine codes CFKA, CPMA)	18
3 Air cleaner	28
3.1 Air cleaner - exploded view	28
3.2 Removing and installing engine cover panel	29
3.3 Removing and installing air filter element	29
3.4 Removing air cleaner housing	31
4 Intake manifold (vehicles with engine codes CDNB, CDNC, CAEB, CDZA, CAEA and CADA)	33
4.1 Intake manifold - exploded view	33
4.2 Fuel rail - exploded view	34
4.3 Removing and installing intake manifold	35
4.4 Removing and installing fuel rail	39
5 Intake manifold (vehicles with engine codes CFKA, CPMA)	41
5.1 Intake manifold - exploded view	41
5.2 Fuel rail - exploded view	43
5.3 Removing and installing intake manifold (top section)	44
5.4 Removing and installing intake manifold (bottom section)	48
5.5 Removing and installing fuel rail	50
5.6 Removing and installing cold-start valve N17	50
6 High-pressure pump	52
6.1 High-pressure pump - exploded view	52
6.2 Removing and installing high-pressure pump	53
7 Injectors	56
7.1 Removing and installing injectors	56
7.2 Cleaning injectors	59
8 Senders and sensors	61
8.1 Removing and installing air mass meter G70	61
8.2 Removing and installing fuel pressure sender G247	62
8.3 Checking fuel pressure sender G247	63
8.4 Checking residual pressure in fuel system (up to high-pressure pump)	65
8.5 Removing and installing throttle valve module J338	68
8.6 Cleaning throttle valve module J338	68
8.7 Checking intake manifold change-over function	69
8.8 Checking dual non-return valve	71
9 Lambda probes	73
9.1 Lambda probes - overview	73
9.2 Removing and installing Lambda probe G39 and Lambda probe heater Z19 before catalytic converter	74

9.3	Removing and installing Lambda probe after catalytic converter G130 and Lambda probe 1 heater after catalytic converter Z29	75
10	Engine control unit	77
10.1	Wiring and component check with test box V.A.G 1598/42	77
10.2	Renewing engine control unit J623	79
28 - Ignition system		83
1	General notes and safety precautions	83
1.1	General notes on ignition system	83
1.2	Safety precautions	83
2	Servicing ignition system	84
2.1	Test data	84
2.2	Ignition system - exploded view	85
2.3	Removing and installing ignition coils with output stages	85
2.4	Removing knock sensor 1 G61	87
2.5	Removing and installing engine speed sender G28	87