



Contents

00 - Technical data	1
1 Identification	1
1.1 Engine number/engine data	1
2 Safety information	2
2.1 Safety precautions when working on the fuel system	2
2.2 Safety precautions when using testers and measuring instruments during a road test	3
2.3 Safety precautions when working on the cooling system	3
2.4 Safety precautions when working on vehicles with start/stop system	4
2.5 Safety precautions when working on the SCR system	4
2.6 Safety precautions when working on the exhaust system	5
3 Repair instructions	6
3.1 Rules for cleanliness	6
3.2 General notes	6
3.3 General repair instructions	7
3.4 Performing adaptations after renewing a component	8
3.5 Cleaning engine	8
3.6 Nuts, bolts	8
3.7 Identification plates	8
3.8 Use of impact wrenches	9
3.9 Foreign material in engine	9
3.10 Contact corrosion	9
3.11 Routing and attachment of pipes, hoses and wiring	10
3.12 Installing radiators and condensers	10
10 - Removing and installing engine	11
1 Removing and installing engine	11
1.1 Removing engine	11
1.2 Securing engine to engine and gearbox support	26
1.3 Installing engine	28
2 Assembly mountings	31
2.1 Assembly overview - assembly mountings	31
2.2 Supporting engine in installation position	32
2.3 Removing and installing engine mountings	34
2.4 Removing and installing torque reaction support and cross member	35
3 Engine cover panel	40
3.1 Removing and installing engine cover panel	40
13 - Crankshaft group	41
1 Cylinder block (pulley end)	41
1.1 Assembly overview - cylinder block (pulley end)	41
1.2 Assembly overview - sealing flange (pulley end)	44
1.3 Removing and installing poly V-belt	46
1.4 Removing and installing poly V-belt tensioner	47
1.5 Removing and installing vibration damper	48
1.6 Removing and installing bracket for ancillaries	51
1.7 Removing and installing sealing flange (pulley end)	52
2 Cylinder block (gearbox end)	56
2.1 Assembly overview - cylinder block (gearbox end)	56
2.2 Removing and installing drive plate	58
2.3 Renewing cylinder block cover (gearbox end)	60
2.4 Removing and installing sealing flange (gearbox end)	62
2.5 Renewing needle bearing in drive plate	71



3	Crankshaft	74
3.1	Assembly overview - crankshaft	74
3.2	Crankshaft dimensions	75
3.3	Measuring axial clearance of crankshaft	75
4	Pistons and conrods	77
4.1	Assembly overview - pistons and conrods	77
4.2	Removing and installing pistons	81
4.3	Measuring piston projection at TDC	82
4.4	Checking pistons and cylinder bores	84
4.5	Separating parts of new conrod	86
4.6	Checking radial clearance of conrod bearings	86
15	Cylinder head, valve gear	88
1	Toothed belt drive	88
1.1	Assembly overview - toothed belt guard	88
1.2	Assembly overview - toothed belt	88
1.3	Removing and installing toothed belt guard	90
1.4	Detaching toothed belt from camshaft	93
1.5	Removing and installing toothed belt	105
2	Cylinder head	119
2.1	Assembly overview - cylinder head cover	119
2.2	Assembly overview - cylinder head	121
2.3	Removing and installing cylinder head	124
2.4	Removing and installing cylinder head cover	133
2.5	Removing and installing seals for injectors	135
2.6	Removing and installing camshaft housing	135
2.7	Checking compression	140
3	Valve gear	143
3.1	Assembly overview - valve gear	143
3.2	Removing and installing camshaft oil seal	147
3.3	Removing and installing camshaft control valve 1 N205	152
3.4	Removing and installing camshaft adjuster	154
3.5	Removing and installing control valve from camshaft control valve 1 N205	158
3.6	Removing and installing valve stem oil seals	162
4	Inlet and exhaust valves	173
4.1	Checking valve guides	173
4.2	Checking valves	174
4.3	Valve dimensions	174
17	Lubrication	175
1	Sump/oil pump	175
1.1	Assembly overview - sump/oil pump	175
1.2	Engine oil	178
1.3	Removing and installing sump	178
1.4	Removing and installing oil pump	185
1.5	Removing and installing oil level and oil temperature sender G266	185
2	Engine oil cooler	187
3	Oil filter/oil pressure switches	188
3.1	Assembly overview - oil filter housing/oil pressure switches	188
3.2	Removing and installing oil pressure switch F22	190
3.3	Removing and installing oil pressure switch for reduced oil pressure F378	193
3.4	Removing and installing oil filter housing	195
3.5	Removing and installing valve for oil pressure control N428	197
3.6	Checking oil pressure	198

19 - Cooling	199
1 Cooling system/coolant	199
1.1 Connection diagram - coolant hoses	199
1.2 Draining and filling cooling system	203
1.3 Checking filling quality of cooling system	214
1.4 Checking cooling system for leaks	216
2 Coolant pump/thermostat assembly	219
2.1 Assembly overview - coolant pump/thermostat	219
2.2 Assembly overview - electric coolant pump	221
2.3 Assembly overview - coolant temperature senders	221
2.4 Removing and installing electric coolant pump	222
2.5 Removing and installing coolant pump	226
2.6 Checking thermostat	227
2.7 Removing and installing coolant valve for cylinder head N489	227
2.8 Removing and installing coolant temperature sender G62	227
3 Coolant pipes	230
3.1 Assembly overview - coolant pipes	230
3.2 Removing and installing coolant pipes	232
4 Radiators/radiator fans	247
4.1 Assembly overview - radiators/radiator fans	247
4.2 Removing and installing radiator	250
4.3 Removing and installing water radiator for charge air cooling circuit	256
4.4 Removing and installing radiator cowl	261
4.5 Removing and installing radiator fan V7	270
4.6 Removing and installing radiator fan 2 V177	271
4.7 Removing and installing radiator fan control unit	271
21 - Turbocharging/supercharging	274
1 Turbocharger	274
1.1 Assembly overview - turbocharger	274
1.2 Removing and installing turbocharger	277
1.3 Renewing vacuum unit for turbocharger	281
2 Charge air system	291
2.1 Assembly overview - charge air system	291
2.2 Removing and installing charge pressure sender G31	294
2.3 Removing and installing charge air temperature sender	294
2.4 Checking charge air system for leaks	296
23 - Mixture preparation - injection	301
1 Injection system	301
1.1 Overview of fitting locations - injection system	301
1.2 Overview - fuel system	307
1.3 Filling and bleeding fuel system	308
1.4 Checking fuel system for leaks	309
2 Vacuum system	310
2.1 Connection diagram - vacuum system	310
2.2 Checking vacuum system	310
3 Air filter	312
3.1 Assembly overview - air filter housing	312
3.2 Removing and installing air filter housing	315
4 Intake manifold	317
4.1 Assembly overview - intake manifold	317
4.2 Removing and installing throttle valve module J338	321
4.3 Removing and installing intake manifold	323



5	Injectors/high-pressure reservoir (rail)	328
5.1	Assembly overview - injectors	328
5.2	Assembly overview - high-pressure reservoir (rail)	330
5.3	Checking injectors	332
5.4	Performing adaption of correction values for injectors	332
5.5	Checking for injectors sticking open	333
5.6	Checking return flow rate of injectors with engine running	335
5.7	Checking return flow rate of injectors at starter cranking speed	339
5.8	Removing and installing injectors	340
5.9	Removing and installing high-pressure pipes	344
5.10	Removing and installing high-pressure reservoir (rail)	348
6	High-pressure pump	350
6.1	Assembly overview - high-pressure pump	350
6.2	Removing and installing high-pressure pump	352
7	Senders and sensors	358
7.1	Removing and installing fuel temperature sender G81	358
7.2	Removing and installing air mass meter G70	359
7.3	Checking fuel pressure regulating valve N276	360
7.4	Removing and installing fuel pressure regulating valve N276	361
7.5	Removing and installing fuel pressure sender G247	367
7.6	Removing and installing exhaust gas pressure sensor 1 G450	369
7.7	Removing and installing pressure differential sender G505	370
7.8	Removing and installing NOx sender G295	371
8	Lambda probe	373
8.1	Assembly overview - Lambda probe	373
8.2	Removing and installing Lambda probe	374
9	Engine control unit	377
9.1	Removing and installing engine control unit J623	377
26 - Exhaust system		386
1	Exhaust pipes/silencers	386
1.1	Assembly overview - silencers	386
1.2	Removing and installing front exhaust pipe	390
1.3	Separating exhaust pipes/silencers	395
1.4	Removing and installing silencers	398
1.5	Stress-free alignment of exhaust system	399
1.6	Checking exhaust system for leaks	402
2	Emission control system	403
2.1	Assembly overview - emission control system	403
2.2	Removing and installing catalytic converter	406
2.3	Removing and installing emission control module	407
2.4	Removing and installing exhaust flap control unit J883	430
3	SCR (selective catalytic reduction) system	432
3.1	Assembly overview - reducing agent tank	432
3.2	Assembly overview - reducing agent supply line	436
3.3	Assembly overview - delivery unit for reducing agent	437
3.4	Assembly overview - control unit for reducing agent metering system	439
3.5	Disconnecting reducing agent supply line	441
3.6	Draining reducing agent tank	444
3.7	Removing and installing delivery unit for reducing agent	447
3.8	Removing and installing injector for reducing agent N474	451
3.9	Removing and installing reducing agent tank	454
3.10	Removing and installing transfer pump for reducing agent V436	461
3.11	Removing and installing control unit for reducing agent metering system J880	464
3.12	Adapting SCR learnt values	466

4	Exhaust gas temperature regulation	468
4.1	Assembly overview - exhaust gas temperature regulation	468
4.2	Removing and installing parts of exhaust gas temperature regulation	470
5	Exhaust gas recirculation	477
5.1	Assembly overview - exhaust gas recirculation system	477
5.2	Removing and installing exhaust gas recirculation control motor V338	479
5.3	Removing and installing exhaust gas recirculation control motor 2 V339	480
5.4	Removing and installing exhaust gas recirculation cooler	482
5.5	Checking exhaust gas recirculation cooler for leaks	484
28	- Glow plug system	489
1	Glow plug system	489
1.1	Assembly overview - glow plug system	489
1.2	Removing and installing glow plug	491
1.3	Removing and installing automatic glow period control unit J179	495
1.4	Removing and installing Hall sender G40	495
1.5	Removing and installing engine speed sender G28	496