



## Contents

|   |            |
|---|------------|
| <b>00 - Technical data</b>  | <b>1</b>   |
| <b>1 Identification</b>   | <b>1</b>   |
| 1.1 Engine number/engine data   | 1          |
| <b>2 Safety precautions</b>   | <b>3</b>   |
| 2.1 Safety precautions when working on the fuel supply system                             | 3          |
| 2.2 Working on the reducing agent metering system - vehicles with SCR catalytic converter | 5          |
| 2.3 Adapting learnt value after draining reducing agent or renewing components            | 6          |
| 2.4 Safety precautions when working on vehicles with start/stop system                    | 6          |
| 2.5 Safety precautions when using testers and measuring instruments during a road test    | 6          |
| 2.6 Safety precautions when working on the cooling system                                 | 7          |
| 2.7 Safety precautions when working on the subframe                                       | 7          |
| 2.8 Safety precautions when working on the exhaust system                                 | 7          |
| <b>3 Repair instructions</b>  | <b>9</b>   |
| 3.1 Rules for cleanliness   | 9          |
| 3.2 General notes   | 9          |
| 3.3 General repair instructions   | 10         |
| 3.4 Foreign particles in engine   | 11         |
| 3.5 Contact corrosion   | 11         |
| 3.6 Routing and attachment of pipes, hoses and wiring                                     | 11         |
| 3.7 Installing radiators and condensers   | 11         |
| 3.8 Checking vacuum system  | 11         |
| <b>10 - Removing and installing engine</b>  | <b>13</b>  |
| <b>1 Removing and installing engine</b>   | <b>13</b>  |
| 1.1 Removing engine   | 13         |
| 1.2 Separating engine and gearbox   | 96         |
| 1.3 Securing engine to engine and gearbox support   | 122        |
| 1.4 Installing engine   | 126        |
| <b>2 Assembly mountings</b>   | <b>156</b> |
| 2.1 Exploded view - assembly mountings  | 156        |
| 2.2 Removing and installing engine mountings  | 157        |
| <b>3 Engine cover panel</b>   | <b>162</b> |
| 3.1 Removing and installing engine cover panel  | 162        |
| <b>13 - Crankshaft group</b>  | <b>163</b> |
| <b>1 Cylinder block (pulley end)</b>  | <b>163</b> |
| 1.1 Exploded view - poly V-belt drive   | 163        |
| 1.2 Exploded view - sealing flange (pulley end)   | 167        |
| 1.3 Removing and installing poly V-belt   | 168        |
| 1.4 Removing and installing tensioner for poly V-belt                                     | 170        |
| 1.5 Removing and installing idler roller (left-side) for poly V-belt                      | 170        |
| 1.6 Removing and installing vibration damper  | 171        |
| 1.7 Removing and installing bracket for ancillaries                                       | 171        |
| 1.8 Renewing crankshaft oil seal (pulley end)   | 171        |
| 1.9 Removing and installing sealing flange (pulley end)                                   | 173        |
| <b>2 Cylinder block (gearbox end)</b>   | <b>176</b> |
| 2.1 Exploded view - drive plate   | 176        |
| 2.2 Removing and installing drive plate   | 177        |
| 2.3 Removing and installing sender wheel  | 178        |
| 2.4 Checking sender wheel   | 179        |
| 2.5 Renewing crankshaft oil seal (gearbox end)  | 180        |



|           |   |            |
|-----------|---|------------|
| 2.6       | Renewing needle bearing in drive plate                            | 181        |
| <b>3</b>  | <b>Crankshaft</b>   | <b>184</b> |
| 3.1       | Exploded view - crankshaft  | 184        |
| 3.2       | Crankshaft dimensions   | 186        |
| 3.3       | Measuring axial clearance of crankshaft                           | 186        |
| 3.4       | Measuring radial clearance of crankshaft                          | 187        |
| <b>4</b>  | <b>Balance shaft</b>  | <b>188</b> |
| 4.1       | Removing and installing balance shaft                             | 188        |
| <b>5</b>  | <b>Pistons and conrods</b>  | <b>190</b> |
| 5.1       | Exploded view - pistons and conrods                               | 190        |
| 5.2       | Measuring piston projection at TDC                                | 193        |
| 5.3       | Checking pistons and cylinder bores                               | 195        |
| 5.4       | Checking radial clearance of conrod bearings                      | 195        |
| <b>15</b> | <b>Cylinder head, valve gear</b>                                  | <b>197</b> |
| <b>1</b>  | <b>Cylinder head</b>  | <b>197</b> |
| 1.1       | Exploded view - cylinder head                                     | 197        |
| 1.2       | Exploded view - cylinder head cover                               | 199        |
| 1.3       | Removing and installing cylinder head                             | 200        |
| 1.4       | Removing and installing cylinder head cover                       | 216        |
| 1.5       | Checking compression  | 225        |
| <b>2</b>  | <b>Timing chain cover</b>   | <b>228</b> |
| 2.1       | Exploded view - timing chain cover                                | 228        |
| 2.2       | Removing and installing timing chain cover                        | 230        |
| <b>3</b>  | <b>Chain drive</b>  | <b>237</b> |
| 3.1       | Exploded view - camshaft timing chains                            | 237        |
| 3.2       | Exploded view - drive chain for valve gear                        | 242        |
| 3.3       | Exploded view - drive chain for balance shaft and oil pump        | 245        |
| 3.4       | Exploded view - drive chain for balance shaft                     | 246        |
| 3.5       | Removing and installing camshaft timing chain                     | 247        |
| 3.6       | Removing camshaft timing chain from camshafts                     | 264        |
| 3.7       | Removing and installing drive chain for valve gear                | 282        |
| 3.8       | Removing and installing drive chain for auxiliary drive           | 285        |
| <b>4</b>  | <b>Valve gear</b>   | <b>290</b> |
| 4.1       | Exploded view - valve gear  | 290        |
| 4.2       | Measuring axial clearance of camshaft                             | 292        |
| 4.3       | Measuring radial clearance of camshaft                            | 293        |
| 4.4       | Removing and installing camshaft oil seal                         | 294        |
| 4.5       | Removing and installing camshaft                                  | 296        |
| 4.6       | Removing and installing valve stem oil seals                      | 311        |
| <b>5</b>  | <b>Inlet and exhaust valves</b>                                   | <b>318</b> |
| 5.1       | Machining valve seats   | 318        |
| 5.2       | Checking valve guides   | 318        |
| 5.3       | Checking valves   | 319        |
| 5.4       | Valve dimensions  | 320        |
| <b>17</b> | <b>Lubrication</b>  | <b>321</b> |
| <b>1</b>  | <b>Sump/oil pump</b>  | <b>321</b> |
| 1.1       | Exploded view - sump/oil pump                                     | 321        |
| 1.2       | Engine oil  | 325        |
| 1.3       | Checking oil level  | 326        |
| 1.4       | Removing and installing sump (bottom section)                     | 326        |
| 1.5       | Removing and installing sump (top section)                        | 328        |
| 1.6       | Removing and installing oil pump                                  | 331        |
| 1.7       | Removing and installing oil level and oil temperature sender G266 | 333        |



|   |   |            |
|---|---|------------|
| <b>2</b>  | <b>Engine oil cooler</b> .....  | <b>334</b> |
| 2.1   | Exploded view - engine oil cooler .....   | 334        |
| 2.2   | Removing and installing engine oil cooler .....   | 336        |
| 2.3   | Removing and installing mounting plate for engine oil cooler, pressure control valve and oil filter housing .....   | 338        |
| <b>3</b>  | <b>Crankcase breather</b> .....   | <b>340</b> |
| 3.1   | Removing and installing pressure control valve for crankcase breather system .....                                  | 340        |
| <b>4</b>  | <b>Oil filter/oil pressure switches</b> .....   | <b>341</b> |
| 4.1   | Removing and installing oil pressure switch F22 .....   | 341        |
| 4.2   | Removing and installing oil pressure switch F1 .....  | 342        |
| 4.3   | Removing and installing oil pressure switch F1 / oil pressure switch for reduced oil pressure F378 .....            | 343        |
| 4.4   | Checking oil pressure .....   | 344        |
| 4.5   | Removing and installing oil filter housing .....  | 345        |
| 4.6   | Removing and installing valve for oil pressure control N428 .....   | 347        |
| 4.7   | Checking oil pressure switch F1 / oil pressure switch F22 / oil pressure switch for reduced oil pressure F378 ..... | 348        |
| <b>19 - Cooling</b> .....                         |   | <b>349</b> |
| <b>1</b>  | <b>Cooling system/coolant</b> .....   | <b>349</b> |
| 1.1   | Connection diagram - coolant hoses .....  | 349        |
| 1.2   | Checking cooling system for leaks .....   | 352        |
| 1.3   | Draining and filling cooling system .....   | 353        |
| <b>2</b>  | <b>Coolant pump/thermostat assembly</b> .....   | <b>362</b> |
| 2.1   | Exploded view - coolant pump/thermostat .....   | 362        |
| 2.2   | Exploded view - electric coolant pump .....   | 365        |
| 2.3   | Removing and installing electric coolant pump .....   | 365        |
| 2.4   | Removing and installing coolant pump .....  | 367        |
| 2.5   | Removing and installing thermostat .....  | 368        |
| 2.6   | Removing and installing coolant temperature sender G62 .....  | 371        |
| 2.7   | Removing and installing radiator outlet coolant temperature sender G83 .....  | 373        |
| <b>3</b>  | <b>Coolant pipes</b> .....  | <b>374</b> |
| 3.1   | Exploded view - coolant pipes .....   | 374        |
| 3.2   | Removing and installing coolant pipes .....   | 380        |
| <b>4</b>  | <b>Radiator/radiator fans</b> .....   | <b>403</b> |
| 4.1   | Exploded view - radiator cowl and radiator fans .....   | 403        |
| 4.2   | Removing and installing radiator .....  | 405        |
| 4.3   | Removing and installing radiator cowl .....   | 411        |
| 4.4   | Removing and installing radiator fan control unit .....   | 417        |
| 4.5   | Removing and installing radiator fan .....  | 418        |
| <b>21 - Turbocharging/supercharging</b> .....     |   | <b>420</b> |
| <b>1</b>  | <b>Turbocharger</b> .....   | <b>420</b> |
| 1.1   | Exploded view - turbocharger .....  | 420        |
| 1.2   | Removing and installing turbocharger .....  | 422        |
| 1.3   | Removing and installing turbocharger 1 control unit J724 .....  | 428        |
| 1.4   | Removing and installing intermediate flange .....   | 440        |
| <b>2</b>  | <b>Charge air system</b> .....  | <b>441</b> |
| 2.1   | Exploded view - charge air system .....   | 441        |
| 2.2   | Removing and installing charge air cooler .....   | 442        |
| 2.3   | Removing and installing charge pressure sender G31 .....  | 445        |
| <b>23 - Mixture preparation - injection</b> ..... |   | <b>446</b> |
| <b>1</b>  | <b>Injection system</b> .....   | <b>446</b> |
| 1.1   | Overview - fuel system .....  | 446        |



|           |   |            |
|-----------|---|------------|
| 1.2       | Overview of fitting locations - injection system  | 449        |
| 1.3       | Exploded view - fuel system   | 468        |
| 1.4       | Filling and bleeding fuel system  | 474        |
| 1.5       | Checking fuel system for leaks  | 475        |
| <b>2</b>  | <b>Air cleaner</b>  | <b>476</b> |
| 2.1       | Exploded view - air cleaner housing   | 476        |
| 2.2       | Removing and installing air filter element  | 478        |
| 2.3       | Removing and installing air cleaner housing   | 479        |
| <b>3</b>  | <b>Intake manifold</b>  | <b>482</b> |
| 3.1       | Exploded view - intake manifold   | 482        |
| 3.2       | Removing and installing intake manifold (top section)   | 483        |
| 3.3       | Removing and installing intake manifold (bottom section)  | 485        |
| <b>4</b>  | <b>Injectors/high-pressure reservoir (rail)</b>   | <b>491</b> |
| 4.1       | Checking injectors  | 491        |
| 4.2       | Performing adaption of correction values for injectors  | 491        |
| 4.3       | Checking for injectors sticking open  | 492        |
| 4.4       | Checking return flow rate of injectors with engine running  | 494        |
| 4.5       | Checking return flow rate of injectors at starter cranking speed  | 497        |
| 4.6       | Checking pressure retention valve in fuel return line   | 499        |
| 4.7       | Checking restrictor in fuel return line   | 500        |
| 4.8       | Removing and installing injectors   | 501        |
| 4.9       | Removing and installing high-pressure pipes   | 507        |
| <b>5</b>  | <b>High-pressure pump</b>   | <b>510</b> |
| 5.1       | Exploded view - high-pressure pump  | 510        |
| 5.2       | Removing and installing high-pressure pump  | 519        |
| <b>6</b>  | <b>Senders and sensors</b>  | <b>538</b> |
| 6.1       | Checking fuel pressure regulating valve N276  | 538        |
| 6.2       | Removing and installing fuel pressure regulating valve N276   | 540        |
| 6.3       | Removing and installing fuel pressure sender G247   | 542        |
| 6.4       | Removing and installing air mass meter G70  | 545        |
| 6.5       | Removing and installing pressure differential sender G505   | 545        |
| 6.6       | Removing and installing exhaust gas pressure sensor 1 G450  | 546        |
| 6.7       | Removing and installing control unit for NOx sender J583 with NOx sender G295 - engine codes CAMA, CAMB, CCWA, CCWB, CGKA, CGKB, CAPA | 547        |
| 6.8       | Removing and installing control unit for NOx sender 2 J881 with NOx sender 2 G687 - engine code CCLA                                  | 548        |
| <b>7</b>  | <b>Lambda probe</b>   | <b>549</b> |
| 7.1       | Exploded view - Lambda probe  | 549        |
| 7.2       | Removing and installing Lambda probe  | 552        |
| <b>8</b>  | <b>Engine control unit</b>  | <b>555</b> |
| 8.1       | Wiring and component check with test box V.A.G 1598/42  | 555        |
| 8.2       | Removing and installing engine/motor control unit J623  | 557        |
| <b>26</b> | <b>Exhaust system</b>   | <b>561</b> |
| <b>1</b>  | <b>Exhaust pipes/silencers</b>  | <b>561</b> |
| 1.1       | Exploded view - silencers   | 561        |
| 1.2       | Removing and installing front exhaust pipe  | 567        |
| 1.3       | Separating exhaust pipes/silencers  | 571        |
| 1.4       | Stress-free alignment of exhaust system   | 574        |
| 1.5       | Checking exhaust system for leaks   | 576        |
| <b>2</b>  | <b>Emission control system</b>  | <b>577</b> |
| 2.1       | Removing and installing catalytic converter   | 577        |
| 2.2       | Removing and installing particulate filter  | 578        |
| <b>3</b>  | <b>SCR (selective catalytic reduction) system</b>   | <b>584</b> |
| 3.1       | Exploded view - reducing agent tank   | 584        |



|           |  |            |
|-----------|--|------------|
| 3.2       | Exploded view - delivery unit for reducing agent                             | 588        |
| 3.3       | Exploded view - pump for reducing agent V437                                 | 589        |
| 3.4       | Exploded view - injector for reducing agent N474                             | 591        |
| 3.5       | Exploded view - control unit for reducing agent metering system              | 592        |
| 3.6       | Removing and installing delivery unit for reducing agent                     | 592        |
| 3.7       | Removing and installing injector for reducing agent N474                     | 595        |
| 3.8       | Draining active tank for reducing agent                                      | 596        |
| 3.9       | Removing and installing active tank for reducing agent                       | 598        |
| 3.10      | Draining passive tank for reducing agent                                     | 600        |
| 3.11      | Removing and installing passive tank for reducing agent                      | 602        |
| 3.12      | Removing and installing pump for reducing agent V437                         | 604        |
| 3.13      | Removing and installing transfer pump for reducing agent V436                | 605        |
| 3.14      | Checking control unit for reducing agent metering system J880                | 607        |
| 3.15      | Removing and installing control unit for reducing agent metering system J880 | 607        |
| 3.16      | Adapting learnt value after draining reducing agent or renewing components   | 608        |
| <b>4</b>  | <b>Exhaust gas temperature control</b>                                       | <b>609</b> |
| 4.1       | Exploded view - exhaust gas temperature control                              | 609        |
| 4.2       | Removing and installing exhaust gas temperature senders                      | 612        |
| <b>5</b>  | <b>Exhaust gas recirculation</b>   | <b>616</b> |
| 5.1       | Exploded view - exhaust gas recirculation system                             | 616        |
| 5.2       | Removing and installing exhaust gas recirculation control motor V338         | 619        |
| 5.3       | Removing and installing exhaust gas recirculation cooler                     | 623        |
| 5.4       | Removing and installing exhaust gas recirculation temperature sensor G98     | 627        |
| <b>6</b>  | <b>Exhaust manifolds</b>   | <b>629</b> |
| 6.1       | Exploded view - exhaust manifold   | 629        |
| 6.2       | Removing and installing exhaust manifolds                                    | 630        |
| <b>28</b> | <b>Glow plug system</b>  | <b>634</b> |
| <b>1</b>  | <b>Glow plug system</b>  | <b>634</b> |
| 1.1       | Removing and installing glow plug  | 634        |
| 1.2       | Removing and installing engine speed sender G28                              | 637        |