

Contents

23 - Mixture preparation - injection	1
1 Safety precautions and rules for cleanliness	1
1.1 Safety precautions when using testers and measuring instruments during a road test	1
1.2 Safety precautions when working on vehicles with start/stop system	2
1.3 Safety precautions when working on the fuel system	2
1.4 Safety precautions when working on the injection and glow plug system	4
1.5 Checking vacuum system	4
2 Injection system	6
2.1 Overview of fitting locations - injection system	6
2.2 Overview - fuel system	15
2.3 Filling and bleeding fuel system	16
2.4 Vacuum system	17
3 Air cleaner	18
3.1 Exploded view - air cleaner	18
3.2 Removing and installing engine cover panel	20
3.3 Removing and installing air filter element	20
3.4 Removing and installing air cleaner housing	22
4 Intake manifold	24
4.1 Exploded view - intake manifold	24
4.2 Removing and installing intake manifold	25
4.3 Removing and installing throttle valve module J338	30
4.4 Removing and installing intake manifold flap motor V157	31
5 High-pressure pump	33
5.1 Exploded view - high-pressure pump	33
5.2 Removing and installing high-pressure pump	34
5.3 Performing first fuel filling after installing high-pressure pump	39
6 Injectors	41
6.1 Exploded view - injectors	41
6.2 Checking injectors	45
6.3 Performing adaption of correction values for injectors	45
6.4 Checking return flow rate of injectors with engine running	46
6.5 Checking return flow rate of injectors at starter cranking speed	50
6.6 Checking for injectors sticking open	52
6.7 Checking restrictor in fuel return line	54
6.8 Removing and installing injectors	55
6.9 Removing and installing fuel rail	60
6.10 Installing high-pressure pipes	64
7 Senders and sensors	66
7.1 Removing and installing air mass meter G70	66
7.2 Checking fuel pressure regulating valve N276	67
7.3 Removing and installing fuel pressure regulating valve N276	68
7.4 Removing and installing fuel pressure sender G247	70
7.5 Removing and installing pressure differential sender G505	73
8 Lambda probes and exhaust gas temperature senders	74
8.1 Exploded view - Lambda probe, exhaust gas temperature senders and pressure sender	74
8.2 Removing and installing Lambda probe G39 with Lambda probe heater Z19	75
9 Engine control unit	77
9.1 Wiring and component check with isolator box VAS 6606	77
9.2 Removing and installing engine control unit J623	78
28 - Glow plug system	80

1	Glow plug system	80
1.1	Checking glow plug system	80
1.2	Exploded view - glow plugs, Hall sender, engine speed sender	80
1.3	Removing and installing glow plugs	81
1.4	Removing and installing engine speed sender G28	83
1.5	Removing and installing Hall sender G40	83