

Contents

00 - Technical data	1
1 Safety precautions	1
1.1 Safety precautions when working on the fuel system	1
1.2 Safety precautions when working on vehicles with start/stop system	2
1.3 Safety precautions when using testers and measuring instruments during a road test	3
1.4 Safety precautions when working on the SCR system	3
2 Repair instructions	5
2.1 Rules for cleanliness	5
2.2 Test conditions	5
2.3 Contact corrosion	5
2.4 Routing and attachment of pipes, hoses and wiring	6
20 - Fuel supply system	7
1 Fuel tank	7
1.1 Exploded view - fuel tank	7
1.2 Draining fuel tank	13
1.3 Removing and installing fuel tank	16
1.4 Removing and installing misfuelling prevention device	38
2 Fuel delivery unit/fuel gauge sender	41
2.1 Exploded view - fuel delivery unit/fuel gauge sender	41
2.2 Removing and installing fuel delivery unit/fuel gauge sender	50
2.3 Checking fuel gauge sender G	82
2.4 Removing and installing fuel gauge sender G	93
2.5 Checking fuel gauge sender 2 G169	98
2.6 Removing and installing fuel gauge sender 2 G169	104
3 Fuel cooler	118
3.1 Exploded view - fuel cooler	118
3.2 Removing and installing fuel cooler	118
4 Fuel filter	121
4.1 Exploded view - fuel filter	121
4.2 Removing and installing fuel filter	123
4.3 Removing and installing regulating valve	124
5 Accelerator mechanism	127
5.1 Exploded view - accelerator pedal module	127
5.2 Removing and installing accelerator pedal module with accelerator position sender G79/ G185	128
6 Checking fuel system for leaks	130
7 Fuel pump	131
7.1 Checking fuel system pressurisation pump G6	131
7.2 Exploded view - supplementary fuel pump V393	157
7.3 Checking delivery rate of supplementary fuel pump V393	160
7.4 Removing and installing fuel pump	163
7.5 Removing and installing suction pipe	164
7.6 Removing and installing fuel pump control unit J538	167
7.7 Checking fuel pump control unit J538	180