



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Identification</b> .....	<b>1</b>
1.1 PR number and type of brake system .....	1
<b>2 Brake test</b> .....	<b>6</b>
2.1 General notes .....	6
2.2 Testing vehicles with front-wheel drive .....	7
2.3 Testing vehicles with four-wheel drive .....	7
2.4 Testing parking brake .....	7
2.5 Visible features of ceramic brake discs .....	8
2.6 Superficial cracks in cooling channel lands .....	10
2.7 Cracks in area of bolted connection on ceramic brake discs .....	10
2.8 Edge fractures .....	11
2.9 Chipping on ceramic brake discs .....	11
2.10 Cracks extending into cooling channels .....	12
2.11 Assessing degree of wear on ceramic brake discs .....	12
2.12 Wear assessment by checking thickness of brake disc .....	16
2.13 Wear assessment by checking thickness of brake disc .....	16
2.14 Wear assessment according to wear indicators .....	17
2.15 Weighing brake disc .....	18
2.16 Wear assessment of ceramic brake disc with tester VAS 6813 .....	19
<b>45 - Anti-lock brake system</b> .....	<b>25</b>
<b>1 General notes</b> .....	<b>25</b>
1.1 Notes for repair work on the ABS .....	25
1.2 Vehicle diagnostic, testing and information system .....	26
<b>2 Overview of fitting locations</b> .....	<b>28</b>
2.1 Overview of fitting locations - ABS/ESP .....	28
<b>3 Control unit and hydraulic unit</b> .....	<b>33</b>
3.1 Exploded view - control unit and hydraulic unit .....	33
3.2 Removing and installing ABS control unit J104 / ABS hydraulic unit N55 .....	34
<b>4 Sensors</b> .....	<b>39</b>
4.1 Exploded view - front wheel speed sensor .....	39
4.2 Exploded view - rear wheel speed sensor .....	40
4.3 Removing and installing brake light sensor .....	40
4.4 Removing and installing parking brake contact switch .....	44
4.5 Removing and installing ESP sensor unit G419 .....	45
4.6 Removing and installing front wheel speed sensor G45 / G47 .....	47
4.7 Removing and installing rear wheel speed sensor G44 / G46 .....	47
<b>5 Auto Hold</b> .....	<b>48</b>
5.1 Description of Auto Hold function .....	48
5.2 Removing and installing auto-hold button .....	49
<b>46 - Brakes - mechanism</b> .....	<b>50</b>
<b>1 Front brakes</b> .....	<b>50</b>
1.1 Exploded view - front brakes .....	50
1.2 Removing and installing brake pads .....	63
1.3 Removing and installing brake caliper .....	80
1.4 Renewing brake caliper .....	87
1.5 Removing and installing brake disc .....	99
1.6 Renew brake disc .....	105
1.7 Removing and installing splash plate .....	117
1.8 Detaching and attaching damper spring .....	122



<b>2</b>	<b>Rear brakes</b> .....	<b>123</b>
2.1	Exploded view - rear brakes .....	123
2.2	Removing and installing brake pads .....	125
2.3	Removing and installing brake caliper .....	129
2.4	Renewing brake caliper .....	132
2.5	Removing and installing brake disc .....	136
2.6	Renew brake disc .....	137
2.7	Removing and installing splash plate .....	139
2.8	Removing and installing splash plate - front-wheel drive vehicles .....	140
<b>3</b>	<b>Parking brake</b> .....	<b>141</b>
3.1	Overview of fitting locations - parking brake .....	141
3.2	Removing and installing control unit for electromechanical parking brake J540 .....	142
3.3	Removing and installing parking brake motor V282 / V283 .....	143
<b>4</b>	<b>Brake pedal</b> .....	<b>147</b>
4.1	Exploded view - brake pedal .....	147
4.2	Removing and installing mounting bracket .....	149
4.3	Separating brake pedal from brake servo .....	169
4.4	Connecting brake pedal to brake servo .....	171
4.5	Removing and installing brake pedal .....	173
4.6	Removing and installing mounting for brake servo push rod .....	180
<b>47</b>	<b>Brakes - hydraulics</b> .....	<b>185</b>
<b>1</b>	<b>Front brake caliper</b> .....	<b>185</b>
1.1	Exploded view - front brake caliper .....	185
1.2	Removing and installing brake caliper piston .....	191
1.3	Renewing bearing bushes and guide pins .....	197
<b>2</b>	<b>Rear brake caliper</b> .....	<b>202</b>
2.1	Exploded view - rear brake caliper .....	202
2.2	Removing and installing brake caliper piston .....	203
2.3	Renewing bearing bushes and guide pins .....	206
<b>3</b>	<b>Brake servo / brake master cylinder</b> .....	<b>208</b>
3.1	Exploded view - brake servo / brake master cylinder .....	208
3.2	Removing and installing brake servo .....	210
3.3	Removing and installing brake master cylinder .....	214
3.4	Removing and installing brake fluid reservoir .....	217
3.5	Removing and installing cover for brake fluid reservoir .....	219
<b>4</b>	<b>Vacuum system</b> .....	<b>222</b>
4.1	Exploded view - electric vacuum pump .....	222
4.2	Exploded view - vacuum pump .....	225
4.3	Checking non-return valve .....	226
4.4	Removing and installing non-return valve .....	226
4.5	Removing and installing brake servo pressure sensor .....	228
4.6	Checking vacuum system .....	229
4.7	Removing and installing electric vacuum pump for brakes .....	231
4.8	Removing and installing bracket for electric vacuum pump .....	236
4.9	Removing and installing vacuum pump .....	237
<b>5</b>	<b>Brake lines</b> .....	<b>246</b>
5.1	Routing of brake lines .....	246
<b>6</b>	<b>Hydraulic system</b> .....	<b>248</b>
6.1	General notes on brake fluid .....	248
6.2	Bleeding hydraulic system with brake filling and bleeding equipment .....	249
6.3	Bleeding hydraulic system without brake filling and bleeding equipment .....	252
6.4	Leak test .....	255
6.5	High-pressure and low-pressure tests .....	255