

Contents

00 - Technical data	1
1 General notes	1
1.1 General notes on Tyre Pressure Loss Indicator (TPLI+)	1
1.2 General notes on Tyre Pressure Monitoring System (TPMS)	2
1.3 General notes on dynamic steering	3
1.4 General notes on drive shaft	4
1.5 General notes on adaptive cruise control	4
1.6 General notes on lane departure warning function	5
2 Repair instructions	8
2.1 Leaks at shock absorbers	8
2.2 Noises from shock absorbers	9
2.3 Checking shock absorbers when removed	9
2.4 Checking shock absorbers on shock tester	9
2.5 General notes	13
2.6 Contact corrosion	17
2.7 Repairing damaged threads in longitudinal member (subframe to body)	17
2.8 Lifting suspension to unladen position - vehicles with coil springs	17
2.9 Steering rack	22
2.10 Gaskets, seals	22
2.11 Nuts, bolts	22
2.12 Electrical components	23
3 Technical data	24
3.1 Running gear	24
3.2 Steering	28
4 Disposal	30
4.1 Releasing gas and draining front gas-filled shock absorbers	30
4.2 Releasing gas and draining rear gas-filled shock absorbers	31
4.3 Draining power steering rack	33
40 - Front suspension	34
1 Front axle	34
1.1 Overview - front axle	34
2 Subframe	35
2.1 Assembly overview - subframe	35
2.2 Removing and installing subframe without steering rack	43
2.3 Removing and installing subframe cross brace	50
2.4 Removing and installing subframe shield	54
2.5 Removing and installing diagonal strut	55
2.6 Removing and installing anti-roll bar	57
2.7 Removing and installing coupling rod	59
3 Suspension strut, upper suspension links	63
3.1 Assembly overview - suspension strut, upper suspension links	63
3.2 Removing and installing suspension strut	65
3.3 Servicing suspension strut	73
3.4 Removing and installing upper wishbone	80
3.5 Renewing bush for upper suspension link	82
3.6 Removing and installing shock absorber fork	83
3.7 Removing and installing strut brace	89
4 Lower suspension links, swivel joint	91
4.1 Assembly overview - lower suspension links, swivel joint	91
4.2 Removing and installing track control link	94
4.3 Removing and installing guide link	98



4.4	Renewing bush for track control link	100
4.5	Removing and installing swivel joint	107
4.6	Removing and installing bonded rubber bush for guide link	109
5	Wheel bearing	117
5.1	Assembly overview - wheel bearing	117
5.2	Removing and installing wheel bearing housing	122
5.3	Removing and installing wheel bearing unit	127
5.4	Servicing wheel bearing unit	130
6	Drive shaft	136
6.1	Assembly overview - drive shaft	136
6.2	Removing and installing drive shaft	138
6.3	Loosening and tightening bolt securing drive shaft	141
6.4	Dismantling and assembling drive shaft	142
6.5	Servicing constant velocity joint	152
6.6	Checking outer constant velocity joint	154
6.7	Tightening hose clip on triple roller joint and outer joint	155
42	Rear suspension	158
1	Rear axle	158
1.1	Overview - rear axle	158
1.2	Removing and installing rear axle	159
2	Subframe	173
2.1	Assembly overview - subframe	173
2.2	Servicing subframe	188
2.3	Removing and installing diagonal strut	232
3	Anti-roll bar	237
3.1	Removing and installing anti-roll bar	237
4	Suspension links, track rod	242
4.1	Assembly overview - transverse links	242
4.2	Removing and installing upper transverse link	245
4.3	Removing and installing lower transverse links	248
4.4	Removing and installing track rod	252
5	Suspension strut/shock absorber, spring	255
5.1	Removing and installing shock absorber	255
5.2	Servicing shock absorber	262
5.3	Removing and installing spring	267
5.4	Modifying spring compressing system VAS 6274	280
6	Wheel bearing, trailing arm	284
6.1	Assembly overview - wheel bearing	284
6.2	Removing and installing wheel bearing housing	292
6.3	Removing and installing wheel bearing unit	306
6.4	Servicing wheel bearing unit	312
6.5	Renewing bonded rubber bush for wheel bearing housing	317
7	Drive shaft	330
7.1	Assembly overview - drive shaft	330
7.2	Removing and installing drive shaft	339
7.3	Dismantling and assembling drive shaft	340
7.4	Loosening and tightening bolt securing drive shaft	362
7.5	Checking outer constant velocity joint	364
7.6	Checking inner constant velocity joint	365
43	Self-levelling suspension	369
1	Electronic damping control	369
1.1	Overview of fitting locations - electronic damping control	369

1.2	Removing and installing electronically controlled damping control unit J250	371
1.3	Re-adapting reference position	372
1.4	Removing and installing front body acceleration sender G341/G342	372
1.5	Removing and installing rear body acceleration sender G343	374
2	Vehicle level senders	376
2.1	Removing and installing front vehicle level sender G78/G289	376
2.2	Removing and installing rear vehicle level sender G76/G77	378
3	Dynamic Ride Control (DRC)	382
3.1	System description - DRC	382
3.2	Overview of fitting locations - DRC	383
3.3	Assembly overview - central valve	384
3.4	Removing and installing central valve	387
3.5	Removing and installing electronically controlled damping control unit J250	389
3.6	Checking DRC system	390
3.7	Checking DRC system pressure	391
3.8	Discharging and charging DRC system	393
44	Wheels, tyres, vehicle geometry	406
1	Wheels, tyres	406
1.1	Tightening torque for wheel bolts	406
2	Tyre Pressure Monitoring System	407
2.1	System description - Tyre Pressure Monitoring System	407
2.2	Overview of fitting locations - Tyre Pressure Monitoring System	408
2.3	Assembly overview - tyre pressure sensor	409
2.4	Removing and installing Tyre Pressure Monitoring System control unit J502	410
2.5	Removing and installing tyre pressure sensor G222/G223/G224/G225	413
2.6	Changing tyres on vehicles with Tyre Pressure Monitoring System	415
3	Wheel alignment	417
3.1	Notes on wheel alignment	417
3.2	Test requirements	418
3.3	Preparations for measurement	419
3.4	Wheel alignment specifications	420
3.5	Wheel alignment procedure	430
3.6	When does wheel alignment have to be checked?	431
3.7	Explanatory notes on production control numbers (PR nos.)	432
3.8	Adjusting camber at front wheels	435
3.9	Adjusting camber at rear wheels	440
3.10	Adjusting toe setting at rear wheels	441
3.11	Adjusting toe setting at front wheels	442
3.12	Wheel runout compensation	443
3.13	Setting vehicle to initial position for wheel alignment	443
3.14	Checking centre position of rack (mechanical method)	443
3.15	Checking maximum steering angle	443
4	Dynamic steering	445
4.1	Assembly overview - dynamic steering	445
4.2	Removing and installing active steering control unit J792	446
4.3	Basic setting for dynamic steering	448
4.4	Removing and installing active steering safety lock actuator F437	451
5	Adaptive cruise control	455
5.1	Assembly overview - sensor for adaptive cruise control G550	455
5.2	Removing and installing sensor for adaptive cruise control G550	456
5.3	Renewing clip on adaptive cruise control unit (from Model Year 2012 onwards)	459
5.4	Preparing ACC setting device VAS 6190 for adjustment procedure	461
5.5	Calibrating adaptive cruise control	464
6	Lane departure warning (Audi lane assist)	476



6.1	Removing and installing lane departure warning control unit J759 and backlight masking screen	476
6.2	Calibrating lane departure warning system	477
48	- Steering	484
1	Steering wheel	484
1.1	Assembly overview - steering wheel	484
1.2	Removing and installing steering wheel	484
2	Steering column	487
2.1	Assembly overview - steering column	487
2.2	Removing and installing steering column	489
2.3	Handling and transporting steering column	495
2.4	Checking steering column for damage	496
2.5	Removing and installing intermediate steering shaft	497
2.6	Removing and installing control unit for electronic steering column lock J764	501
3	Steering rack	506
3.1	Assembly overview - steering rack	506
3.2	Removing and installing steering rack	511
3.3	Centralising steering	524
3.4	Servicing steering rack	525
3.5	Removing and installing boot	532
3.6	Removing and installing track rod	544
3.7	Removing and installing track rod ball joint	554
3.8	Adjusting steering rack	562
3.9	Removing and installing servotronic solenoid valve N119	563
4	Sensors	565
4.1	Removing and installing steering angle sender G85	565
5	Hydraulic power steering	567
5.1	Overview of fitting locations - hydraulic power steering	567
5.2	Assembly overview - hydraulic lines, reservoir	592
5.3	Assembly overview - power steering vane pump	629
5.4	Checking fluid level in power steering system	654
5.5	Bleeding steering system after repairs	655
5.6	Checking steering system for leaks	656
5.7	Checking delivery pressure of power steering vane pump	657
5.8	Removing and installing power steering vane pump	698
5.9	Removing and installing hydraulic fluid cooler	810
5.10	Installation position of hoses on fluid reservoir, hydraulic fluid cooler and return line	817