

Contents

00 - Technical data	1
1 Safety precautions	1
1.1 Safety precautions when working on vehicles with start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Safety precautions when handling gas discharge bulbs	2
2 Repair notes	4
2.1 Contact corrosion	4
2.2 Routing and securing wiring	4
3 Battery	5
3.1 Battery - general notes	5
3.2 Battery types	5
27 - Starter, current supply, CCS	6
1 Battery	6
1.1 Exploded view - battery	6
1.2 Removing and installing battery	9
1.3 Disconnecting and connecting battery	14
1.4 Checking battery	16
1.5 Charging battery	16
1.6 Removing and installing earth cable with battery monitor control unit J367	19
1.7 Removing and installing battery cut-off relay/battery isolation igniter	20
2 Alternator	21
2.1 Exploded view - alternator	21
2.2 Removing and installing alternator	24
2.3 Checking alternator	49
3 Starter	50
3.1 Exploded view - starter	50
3.2 Removing and installing starter	52
4 Start/stop system	65
4.1 Exploded view - start/stop system	65
4.2 Removing and installing voltage stabiliser	66
90 - Gauges, instruments	67
1 Dash panel insert	67
1.1 Exploded view - dash panel insert	67
1.2 Removing and installing dash panel insert KX2	69
1.3 Pin assignment on multi-pin connectors in dash panel insert	71
1.4 Pin assignment on fuel gauge senders	72
1.5 Pin assignment on coolant temperature sender	73
1.6 Removing and installing ambient temperature sensor	74
2 Clock	76
2.1 Removing and installing radio-controlled clock receiver	76
3 Horn	77
3.1 Exploded view - horn	77
3.2 Removing and installing treble horn H2 / bass horn H7	78
92 - Windscreen wash/wipe system	80
1 Windscreen wiper system	80
1.1 Exploded view - windscreen wiper system	80
1.2 Moving windscreen wipers to service position	84
1.3 Removing and installing wiper blade	84
1.4 Removing and installing wiper arms	85

1.5	Adjusting wiper arms	86
1.6	Removing and installing windscreen wiper motor V	87
1.7	Renewing windscreen wiper motor	89
1.8	Removing and installing rain and light sensor	89
2	Windscreen washer system	97
2.1	Exploded view - windscreen washer system	97
2.2	Removing and installing washer fluid reservoir	99
2.3	Removing and installing windscreen washer fluid level sender	101
2.4	Removing and installing washer pump	102
2.5	Removing and installing washer jets	103
2.6	Adjusting washer jets	103
3	Headlight washer system	105
3.1	Exploded view - headlight washer system	105
3.2	Removing and installing washer fluid reservoir	106
3.3	Removing and installing headlight washer system pump V11	106
3.4	Removing and installing washer jets	107
3.5	Adjusting washer jets	110
4	Washer fluid hoses	111
94	Lights, bulbs, switches - exterior	112
1	Headlights	113
1.1	Exploded view - headlights	113
1.2	Removing and installing headlights	133
1.3	Removing and installing mounting (top) for headlight housing - vehicles from model year 2012 onwards, USA vehicles from model year 2013 onwards	143
1.4	Removing and installing bracket for mounting for headlight housing	143
1.5	Removing and installing mounting for headlight housing	144
1.6	Removing and installing sealing frame	146
1.7	Removing and installing inner bracket for headlight housing	147
1.8	Removing and installing bracket (top) for headlight housing	148
1.9	Adjusting headlights	149
1.10	Removing and installing front turn signal bulb M5 / M7	167
1.11	Installing repair kit for headlight housing	174
1.12	Adapting headlights for driving on the left side of the road	176
1.13	Adapting headlights for driving on the right side of the road	179
1.14	Removing and installing headlight range control motor V48 / V49	183
1.15	Removing and installing headlight dipped beam bulb	192
1.16	Removing and installing headlight main beam bulb M30 / M32	194
1.17	Removing and installing gas discharge bulb L13 / L14	197
1.18	Removing and installing side light bulb M1 / M3	200
1.19	Removing and installing daytime running lights	202
1.20	Removing and installing dynamic cornering light control motor V318 / V319	207
1.21	Removing and installing static cornering light L148 / L149	208
1.22	Removing and installing gas discharge bulb control unit J343 / J344	209
1.23	Removing and installing output module for headlight J667 / J668	212
1.24	Removing and installing dip beam screen motor V294 / V295	214
1.25	Removing and installing parking light bulb M43 / M44	215
2	Fog lights	219
2.1	Exploded view - fog light	219
2.2	Removing and installing fog lights	221
2.3	Removing and installing fog light bulb L22 / L23	223
2.4	Adjusting fog lights	224
3	Side marker lights	225
3.1	Removing and installing front side marker bulb	225

3.2	Removing and installing output module for side marker light J986 / J987 , halogen headlights - vehicles from model year 2012 onwards, USA vehicles from model year 2013 onwards	227
3.3	Removing and installing rear side marker bulb M37 / M38	228
4	Lights in exterior mirror	229
4.1	Exploded view - lights in exterior mirror	229
4.2	Removing and installing exterior mirror turn signal bulb L131 / L132	231
5	Tail light cluster	233
5.1	Exploded view - tail light cluster on body	233
5.2	Exploded view - tail light cluster on rear lid	239
5.3	Removing and installing bulb carrier	242
5.4	Removing and installing tail light cluster on rear lid	243
5.5	Removing and installing tail light cluster	249
5.6	Removing and installing tail light bulb M2 / M4	251
5.7	Removing and installing rear fog light bulb L46 / L47	253
5.8	Removing and installing reversing light bulb	254
6	High-level brake light	259
6.1	Exploded view - high-level brake light	259
6.2	Removing and installing high-level brake light bulb	261
7	Number plate light	265
7.1	Removing and installing number plate light X4 / X5	265
8	Entry and start authorisation	266
8.1	Overview of fitting locations - entry and start authorisation system	266
8.2	Overview of fitting locations - keyless entry system	268
8.3	Exploded view - exterior door handle for keyless entry system	271
8.4	Removing and installing central locking button in front exterior door handle	273
8.5	Removing and installing central locking button in rear exterior door handle	274
8.6	Removing and installing interior aerial 1 for entry and start authorisation R138	275
8.7	Removing and installing left aerial for entry and start authorisation	276
8.8	Removing and installing luggage compartment aerial for entry and start system R137	277
9	Steering column switch module	279
9.1	Exploded view - steering column switch module	279
9.2	Removing and installing steering column switch module	281
9.3	Removing and installing steering column electronics control unit J527	282
9.4	Removing and installing turn signal switch E2	283
9.5	Removing and installing cruise control system switch E45	284
9.6	Removing and installing intermittent wiper switch E22	284
9.7	Pin assignment on steering column electronics control unit	284
9.8	Removing and installing entry and start authorisation switch E415	286
10	Parking aid	289
10.1	Overview - parking aid	289
10.2	Removing and installing parking aid control unit J446	291
10.3	Removing and installing front parking aid warning buzzer H22	293
10.4	Removing and installing rear parking aid warning buzzer H15	293
10.5	Removing and installing front parking aid senders	294
10.6	Removing and installing rear parking aid senders	297
11	Automatic headlight range control	299
11.1	Overview - automatic headlight range control	299
11.2	Removing and installing headlight range control unit	300
96	Lights, bulbs, switches - interior	301
1	Lights	302
1.1	Overview of fitting locations - lights in dash panel	302
1.2	Overview of fitting locations - lights in front doors	304
1.3	Overview of fitting locations - lights in rear doors	306

1.4	Overview of fitting locations - lights in centre console	307
1.5	Overview of fitting locations - lights in luggage compartment	308
1.6	Overview of fitting locations - lights in roof trim	309
1.7	Removing and installing glove compartment light W6	309
1.8	Removing and installing front left footwell illumination bulb L151 / front right footwell illumination bulb L152	310
1.9	Removing and installing central locking SAFELOCK function warning lamp K133	311
1.10	Removing and installing door opener illumination bulb L108 / L109	312
1.11	Removing and installing front entry light W31 / W32	313
1.12	Removing and installing door warning lamp W30 / W36	316
1.13	Removing and installing door opener illumination bulb L110 / L111	318
1.14	Removing and installing rear entry light W33 / W34	318
1.15	Removing and installing rear door warning lamp W37 / W38	320
1.16	Removing and installing selector lever position display Y26	321
1.17	Removing and installing footwell light (rear) W45 / W46	322
1.18	Removing and installing luggage compartment light W3	322
1.19	Renewing bulb for front interior light W1 / W13 / W19	324
1.20	Renewing bulb for rear interior light W47 / W48	325
1.21	Removing and installing LED for background lighting	327
1.22	Removing and installing dash panel vent illumination bulb (left and right) L67 / L69	327
1.23	Removing and installing vanity mirror light bulb L31	328
2	Controls	330
2.1	Overview of fitting locations - controls in dash panel	331
2.2	Overview of fitting locations - controls in front doors	333
2.3	Overview of fitting locations - controls in rear doors	335
2.4	Overview of fitting locations - controls in centre console	336
2.5	Overview of fitting locations - controls in luggage compartment	337
2.6	Overview of fitting locations - controls in roof trim	338
2.7	Removing and installing rotary light switch EX1	339
2.8	Removing and installing switch and instrument illumination regulator E20	340
2.9	Removing and installing headlight range control regulator E102	341
2.10	Removing and installing start/stop operation button E693	342
2.11	Removing and installing front passenger side airbag deactivated warning lamp K145	342
2.12	Removing and installing switches in dash panel	343
2.13	Removing and installing front heated seat regulator E94 / E95	343
2.14	Removing and installing hazard warning lights button E229	343
2.15	Removing and installing valet parking button E536	344
2.16	Removing and installing glove compartment light switch E26	345
2.17	Removing and installing mirror adjustment switch E43 / E168	346
2.18	Removing and installing operating unit for window regulator in driver door E512	347
2.19	Removing and installing driver seat/front passenger seat memory operating unit E97 / E277	349
2.20	Removing and installing door contact switch F2 / F3	350
2.21	Removing and installing rear interior locking switch E273 / E274	350
2.22	Removing and installing door contact switch (rear) F10 / F11	351
2.23	Removing and installing electromechanical parking brake button E538 / auto-hold button E540	351
2.24	Removing and installing entry and start authorisation button E408	351
2.25	Removing and installing heated rear seat switch with regulator E128 / E129	353
2.26	Removing and installing rear lid contact switch	354
2.27	Removing and installing contact switch for vanity mirror F147 / F148	354
2.28	Removing and installing sunroof button E325	354
2.29	Removing and installing interior light/reading light (front)	355
2.30	Removing and installing interior light/reading light (rear)	355
2.31	Removing and installing garage door operating unit E284	357
2.32	Removing and installing switch panel in centre console	357

2.33	Removing and installing rear lid remote release switch E188	357
2.34	Removing and installing window regulator switches E52 / E54	358
2.35	Removing and installing buttons for rear seat heating E737 / E738	359
2.36	Removing and installing adjustable rear spoiler switch E127	359
2.37	Removing and installing interior locking switch E150 / E198	360
2.38	Removing and installing interior monitoring switch E183 / alarm system off switch E217	361
3	Anti-theft alarm system	363
3.1	Overview - interior monitoring	363
3.2	Removing and installing alarm horn H12	364
3.3	Removing and installing anti-theft alarm sensor G578	365
4	Lane change assist	366
4.1	Overview - lane change assist	366
4.2	Removing and installing button for lane change assist E530	368
4.3	Removing and installing lane change assist warning lamp in exterior mirror K233 / K234	368
4.4	Removing and installing lane change assist control unit J769 / J770	370
4.5	Calibrating lane change assist	371
5	Front camera for driver assist systems	379
5.1	Exploded view - main beam assist system, humidity sender and lane departure warning system	379
6	Towing bracket	381
6.1	Overview - trailer socket, trailer detector control unit	381
6.2	Trailer socket	381
6.3	Removing and installing trailer detector control unit J345	381
7	Cigarette lighter, socket	383
7.1	Exploded view - cigarette lighter, 12 V socket	383
7.2	Removing and installing cigarette lighter U1	384
7.3	Removing and installing socket illumination bulb L42	386
7.4	Removing and installing cigarette lighter illumination bulb L28	388
7.5	Removing and installing 12 V socket 2 U18	388
7.6	Removing and installing AC/DC converter with socket, 12 V - 230 V U13	390
7.7	Removing and installing 12 V socket 3 U19	391
7.8	Renewing 12 V socket 3 U19	391
97 - Wiring		393
1	Relay carriers, fuse carriers, electronics boxes	393
1.1	Overview of fitting locations - relay carriers, fuse carriers, electronics boxes	393
1.2	Removing and installing electronics box	402
1.3	Removing and installing relay and fuse holder in electronics box	404
1.4	Removing and installing terminal 30 wiring junction 2 TV22	407
1.5	Removing and installing fuse holder at dash panel (right-side)	408
1.6	Removing and installing relay and fuse carrier behind dash panel (driver's side)	410
1.7	Removing and installing relay and fuse holder in luggage compartment (right-side)	413
1.8	Removing and installing fuse holder in dash panel (left-side)	418
2	Control units	421
2.1	Exploded view - data bus diagnostic interface	421
2.2	Removing and installing onboard supply control unit J519	421
2.3	Removing and installing garage door operation control unit	423
2.4	Removing and installing data bus diagnostic interface J533	424
2.5	Removing and installing special vehicle control unit J608	425
3	Connectors	427
3.1	Removing and installing CAN separating connector (right-side)	427
3.2	Removing and installing CAN separating connector (left-side)	428
3.3	Unplugging door disconnecter	430



3.4	Removing and installing connector point at A-pillar (left-side)	430
3.5	Removing and installing connector point at A-pillar (right-side)	431
3.6	Repairing electrical wiring harnesses and electrical connectors	432
4	Releasing and dismantling connector housings	433
5	Cleaning contact surfaces	434
6	Repairing aerial wires	435
7	Fibre optic cables	436
8	Vehicle diagnostic, testing and information systems	437