

Contents

91 - Radio, telephone, navigation	1
1 Infotainment system	1
1.1 Layout - infotainment system	1
1.2 Overview of fitting locations - infotainment system	25
1.3 Removing and installing infotainment system display	32
1.4 Removing and installing control unit for front display and information control panel	32
1.5 Removing and installing control unit 1 for information electronics J794	35
1.6 Removing and installing multimedia system operating unit E380	36
1.7 Pin assignment	38
2 Sound system	54
2.1 Layout - sound system	54
2.2 Overview of fitting locations - sound system	61
2.3 Removing and installing digital sound package control unit/amplifier	66
2.4 Removing and installing rear treble loudspeakers R14 / R16	69
2.5 Removing and installing front treble loudspeakers R20 / R22	70
2.6 Removing and installing rear mid-range loudspeaker	72
2.7 Removing and installing front mid-range loudspeakers	73
2.8 Removing and installing rear mid-range and bass loudspeakers	74
2.9 Removing and installing front bass loudspeakers R21 / R23	75
2.10 Removing and installing subwoofer R211	76
2.11 Removing and installing centre loudspeaker	77
2.12 Pin assignment	78
3 Aerial systems	86
3.1 Layout - aerial systems	86
3.2 Overview of fitting locations - aerial systems	87
3.3 Removing and installing aerial amplifiers	90
3.4 Removing and installing traffic data aerial	92
3.5 Removing and installing roof aerial	93
3.6 Removing and installing internet access aerial	94
3.7 Pin assignment for aerial amplifier	94
4 Radio	104
4.1 Layout - radio	104
4.2 Overview of fitting locations - radio	106
4.3 Removing and installing radio	107
4.4 Pin assignment	114
5 DVD/CD changer	130
5.1 Pin assignment	130
5.2 Removing and installing CD changer	130
6 Telephone system	134
6.1 Layout - telephone	134
6.2 Overview of fitting locations - telephone system	153
6.3 Exploded view - microphone unit	158
6.4 Removing and installing microphone unit in front roof module R164	160
6.5 Removing and installing aerial amplifier for mobile telephone R86	161
6.6 Removing and installing telephone bracket R126	162
6.7 Removing and installing telephone transmitter and receiver unit	163
6.8 Pin assignment	166
7 Navigation system	184
7.1 Layout - navigation system	184
7.2 Overview of fitting locations - navigation system	191
7.3 Pin assignment	195
7.4 Removing and installing control unit for navigation system	206

7.5	Removing and installing chip card reader control unit	209
8	TV system	210
8.1	Layout - TV system	210
8.2	Overview of fitting locations - TV system	216
8.3	Pin assignment	220
8.4	Removing and installing TV tuner	226
8.5	Removing and installing TV card reader	231
9	Reversing camera system	233
9.1	Layout - reversing camera system	233
9.2	Overview of fitting locations - reversing camera system	236
9.3	Removing and installing reversing camera R189	236
9.4	Calibrating reversing camera system	238
9.5	Removing and installing reversing camera system control unit J772	243
9.6	Connectors on reversing camera system control unit J772	244
10	Multi-function steering wheel	246
10.1	Layout - multi-function steering wheel	246
10.2	Exploded view - multi-function steering wheel	246
10.3	Removing and installing multifunction buttons in steering wheel E441 / E440	249
10.4	Removing and installing tiptronic switches in steering wheel E439 / E438	255
11	Voice control system	258
11.1	Layout - voice control system	258
11.2	Connector on speech input control unit	260
11.3	Removing and installing voice control system	260
12	Connection for external multimedia devices	263
12.1	Layout - connection for external multimedia devices	263
12.2	Connectors on connection for external audio sources	264
12.3	Removing and installing connection for external audio sources R199	266
13	Internet access	270
13.1	Layout - internet access	270
13.2	Removing and installing internet access control unit J666	270
13.3	Removing and installing internal battery for internet access control unit J666	271
13.4	Pin assignment	272