

Contents

00 - Technical data	1
1 Repair instructions	1
1.1 Routing and attachment of pipes, hoses and wiring	1
1.2 Contact corrosion	1
1.3 Bonding surfaces for adhesive strips	1
1.4 Self-locking bolts	2
50 - Body - front	3
1 Lock carrier	3
1.1 Exploded view - lock carrier	3
1.2 Setting service position and returning to normal position	5
1.3 Removing and installing lock carrier brace	7
1.4 Removing and installing lock carrier cover	8
2 Wing	10
2.1 Removing and installing wing	10
2.2 Removing and installing wing panel brace	10
2.3 Removing and installing seal for wing	11
2.4 Removing and installing closure plate	12
3 Bulkhead	14
3.1 Exploded view - plenum chamber partition panel	14
3.2 Removing and installing plenum chamber cover	16
55 - Bonnet, rear lid	20
1 Bonnet	20
1.1 Exploded view - bonnet	20
1.2 Exploded view - bonnet lock	21
1.3 Exploded view - Bowden cable	23
1.4 Exploded view - gas strut	27
1.5 Exploded view - bonnet seals	28
1.6 Adjusting bonnet	29
1.7 Removing and installing operating lever for bonnet lock	31
1.8 Removing and installing striker	34
1.9 Removing and installing hinges	34
1.10 Removing and installing insulation	35
1.11 Removing and installing gas strut	36
1.12 Releasing gas from gas strut	37
1.13 Removing and installing impact guard	37
2 Rear lid	39
2.1 Exploded view - rear lid	39
2.2 Exploded view - gas strut	41
2.3 Adjusting rear lid	43
2.4 Removing and installing rear lid lock	47
2.5 Removing and installing hinges	48
2.6 Manual release for rear lid lock	50
2.7 Removing and installing rear lid seal	51
2.8 Removing and installing gas strut	53
2.9 Releasing gas from gas strut	54
3 Tank flap unit	55
3.1 Exploded view - tank flap unit	55
3.2 Removing and installing lid for tank flap	57
3.3 Removing and installing tank flap unit	58
3.4 Gap widths at tank flap	58



3.5	Removing and installing tank flap cup	59
3.6	Removing and installing drain hose for tank flap cup	60
3.7	Removing and installing manual release for tank flap	61
57	- Front doors, door components, central locking	63
1	Door	63
1.1	Exploded view - door	63
1.2	Removing and installing door	65
1.3	Adjusting door	66
1.4	Adjusting striker	69
1.5	Removing and installing door arrester	70
1.6	Removing and installing inner door seal	71
1.7	Removing and installing outer door seal	72
2	Door components	78
2.1	Exploded view - window regulator	78
2.2	Exploded view - door handle and door lock	79
2.3	Exploded view - window slot trim strips	81
2.4	Removing and installing inner door cover	82
2.5	Removing and installing window regulator motor	83
2.6	Removing and installing window regulator	85
2.7	Removing and installing lock cylinder	87
2.8	Removing and installing cap for lock cylinder	88
2.9	Removing and installing lock cylinder guide	88
2.10	Removing and installing door handle	89
2.11	Removing and installing door handle trim	91
2.12	Removing and installing contact sensor for front exterior door handle G605/G606	92
2.13	Removing and installing door lock	93
2.14	Removing and installing mounting bracket	94
2.15	Removing and installing operating cable for door lock	96
2.16	Removing and installing operating cable for interior door handle	98
2.17	Removing and installing striker	99
2.18	Removing and installing outer window slot trim strip	100
3	Central locking system	102
3.1	Overview of fitting locations - central locking system	102
3.2	Removing and installing driver door control unit J386 and front passenger door control unit J387	104
3.3	Removing and installing rear left door control unit J388 and rear right door control unit J389	104
3.4	Removing and installing convenience system central control unit J393	105
3.5	Removing and installing interface control unit for vehicle location system J843	106
3.6	Removing and installing tank filler flap locking motor V155	106
58	- Rear doors, door components	109
1	Door	109
1.1	Exploded view - door	109
1.2	Exploded view - door arrester	110
1.3	Removing and installing door	111
1.4	Adjusting door	112
1.5	Adjusting striker	114
1.6	Removing and installing door arrester	115
1.7	Removing and installing inner door seal	116
1.8	Removing and installing outer door seal	118
2	Door components	124
2.1	Exploded view - window regulator	124
2.2	Exploded view - door handle and door lock	125
2.3	Exploded view - housing	129

2.4	Exploded view - window slot trim strips	130
2.5	Removing and installing inner door cover	131
2.6	Removing and installing window regulator motor	132
2.7	Removing and installing window regulator	134
2.8	Removing and installing housing	135
2.9	Removing and installing cap for housing	136
2.10	Removing and installing door handle	136
2.11	Removing and installing door handle trim	138
2.12	Removing and installing contact sensor for rear exterior door handle G417/G418	139
2.13	Removing and installing door lock	140
2.14	Removing and installing mounting bracket	141
2.15	Removing and installing operating cable for door lock	143
2.16	Removing and installing operating cable for interior door handle	144
2.17	Removing and installing striker	146
2.18	Removing and installing outer window slot trim strip	146
60	- Sunroof	149
1	Sliding sunroof	149
1.1	Exploded view - sliding sunroof	149
1.2	Removing and installing sunroof panel	153
1.3	Adjusting sunroof panel	154
1.4	Removing and installing wind deflector	154
1.5	Removing and installing sunroof seals	155
1.6	Removing and installing sun blind	155
1.7	Adapting sliding sunroof adjustment control unit J245	156
1.8	Checking and adjusting zero position for cables (slotted guide)	157
1.9	Adjusting zero position for sliding sunroof adjustment control unit J245 (motor)	157
2	Water drain hoses	158
2.1	Overview - water drain hoses	158
2.2	Cleaning water drain hoses	158
2.3	Removing and installing water drain hoses	159
63	- Bumpers	161
1	Bumper (front)	161
1.1	Exploded view - bumper cover	161
1.2	Exploded view - impact bar	163
1.3	Removing and installing lock carrier cover	165
1.4	Removing and installing bumper cover	165
1.5	Gap widths at bumper cover	166
1.6	Adjusting bumper cover	167
1.7	Removing and installing guides for bumper	168
1.8	Removing and installing air intake grille	168
1.9	Removing and installing attachments	169
1.10	Removing and installing impact absorber	170
1.11	Removing and installing impact bar	171
1.12	Removing and installing mounting for impact bar	172
2	Bumper (rear)	174
2.1	Exploded view - bumper cover	174
2.2	Exploded view - impact bar	176
2.3	Removing and installing bumper cover	178
2.4	Gap widths at bumper cover	179
2.5	Removing and installing guides for bumper	180
2.6	Removing and installing attachments	182
2.7	Removing and installing impact bar	183
2.8	Removing and installing mounting for impact bar	185



64 - Glazing	187
1 Repair instructions	187
1.1 Minimum drying times for bonded windows	187
1.2 Repairing windows	187
1.3 Notes on installing flush-bonded windows	188
1.4 Cleaning off adhesive sealant	191
1.5 Re-sealing windows	191
2 Windscreen	192
2.1 Exploded view - windscreen	192
2.2 Removing and installing windscreen	193
3 Rear window	201
3.1 Exploded view - rear window	201
3.2 Removing and installing rear window	202
4 Side windows	212
4.1 Exploded view - side window	212
4.2 Removing and installing side window	212
5 Door windows	216
5.1 Exploded view - front door window	216
5.2 Exploded view - rear door window	216
5.3 Removing and installing front door window	218
5.4 Adjusting front door window	219
5.5 Removing and installing rear door window	224
5.6 Adjusting rear door window	224
66 - Exterior equipment	231
1 Radiator grille/front trim panel	231
1.1 Exploded view - radiator grille	231
1.2 Removing and installing radiator grille	233
1.3 Removing and installing bracket for ambient temperature sensor G17	235
2 Spoilers	236
2.1 Removing and installing spoiler	236
2.2 Removing and installing spoiler (bottom)	237
3 Strips / trim panels / extensions	238
3.1 Exploded view - heat shield	238
3.2 Exploded view - trim panel for B-pillar	239
3.3 Removing and installing trim strip	240
3.4 Removing and installing sill panel trim	241
3.5 Removing and installing side member trim	242
3.6 Removing and installing water deflector strip	244
4 Noise insulation	246
4.1 Exploded view - noise insulation	246
4.2 Removing and installing noise insulation	247
5 Underbody trim	248
5.1 Exploded view - underbody trim	248
5.2 Exploded view - tunnel cross-piece	249
6 Roof strips / roof rails	251
6.1 Exploded view - roof trim strip	251
7 Exterior mirrors	253
7.1 Exploded view - exterior mirror	253
7.2 Removing and installing exterior mirror	254
7.3 Removing and installing mirror glass	255
7.4 Removing and installing mirror adjustment unit	257
7.5 Removing and installing mirror cover	258

7.6	Removing and installing mirror trim	259
8	Wheel housing liner	260
8.1	Exploded view - wheel housing liner (front)	260
8.2	Exploded view - wheel housing liner (rear)	261
8.3	Exploded view - wheel spoiler (front)	262
8.4	Removing and installing wheel housing liner (front)	263
9	Model badges and brand emblems	265
9.1	Renewing model badges and brand emblems	265
9.2	Dimensions for rear lid	265
9.3	Dimensions for wing panel	269