

Contents

| | |
|--|------------|
| 00 - Technical data | 1 |
| 1 Identification | 1 |
| 1.1 Engine identification number/engine data | 1 |
| 2 General notes | 2 |
| 2.1 General notes on ignition system | 2 |
| 3 Safety precautions | 3 |
| 3.1 Safety precautions when working on the fuel system | 3 |
| 3.2 Safety precautions when working on the fuel supply system | 4 |
| 3.3 Safety precautions when working on vehicles with start/stop system | 6 |
| 3.4 Safety precautions when using testers and measuring instruments during a road test | 6 |
| 3.5 Safety precautions when working on the subframe | 6 |
| 3.6 Safety precautions when working on the cooling system | 7 |
| 3.7 Safety precautions when working on the ignition system | 7 |
| 3.8 Safety precautions when working on the exhaust system | 8 |
| 4 Repair instructions | 9 |
| 4.1 Rules for cleanliness | 9 |
| 4.2 Checking fuel system for leaks | 9 |
| 4.3 Foreign particles in engine | 9 |
| 4.4 Contact corrosion | 10 |
| 4.5 Installing radiators and condensers | 10 |
| 4.6 Routing and attachment of pipes, hoses and wiring | 10 |
| 4.7 Checking vacuum system | 10 |
| 5 Technical data | 12 |
| 5.1 Technical data of injection system | 12 |
| 10 - Removing and installing engine | 13 |
| 1 Removing and installing engine | 13 |
| 1.1 Removing engine | 13 |
| 1.2 Separating engine and gearbox | 51 |
| 1.3 Securing engine to engine and gearbox support | 61 |
| 1.4 Installing engine | 64 |
| 2 Assembly mountings | 80 |
| 2.1 Exploded view - assembly mountings | 80 |
| 2.2 Removing and installing engine mountings | 81 |
| 3 Engine cover panel | 92 |
| 3.1 Removing and installing engine cover panel | 92 |
| 13 - Crankshaft group | 93 |
| 1 Cylinder block (pulley end) | 93 |
| 1.1 Exploded view - poly V-belt drive | 93 |
| 1.2 Removing and installing poly V-belt | 94 |
| 1.3 Removing and installing tensioner for poly V-belt | 95 |
| 1.4 Removing and installing vibration damper | 96 |
| 1.5 Renewing crankshaft oil seal (pulley end) | 96 |
| 2 Cylinder block (gearbox end) | 99 |
| 2.1 Exploded view - drive plate | 99 |
| 2.2 Removing and installing drive plate | 99 |
| 2.3 Renewing crankshaft oil seal (gearbox end) | 100 |
| 2.4 Renewing needle bearing in drive plate | 102 |
| 3 Crankshaft | 104 |
| 3.1 Exploded view - crankshaft | 104 |
| 3.2 Crankshaft dimensions | 107 |

| | | |
|---|---|------------|
| 3.3 | Allocation of main bearing shells | 107 |
| 3.4 | Measuring axial clearance of crankshaft | 109 |
| 3.5 | Measuring radial clearance of crankshaft | 110 |
| 4 | Auxiliary drive | 111 |
| 4.1 | Exploded view - auxiliary drive | 111 |
| 4.2 | Removing and installing spur gear drive | 112 |
| 4.3 | Renewing oil seal for power steering pump drive | 115 |
| 4.4 | Renewing oil seal for AC compressor drive | 116 |
| 5 | Pistons and conrods | 119 |
| 5.1 | Exploded view - pistons and conrods | 119 |
| 5.2 | Removing and installing pistons | 121 |
| 5.3 | Checking pistons and cylinder bores | 122 |
| 5.4 | Checking radial clearance of conrod bearings | 123 |
| 15 - Cylinder head, valve gear | | 125 |
| 1 | Cylinder head | 125 |
| 1.1 | Exploded view - cylinder head | 125 |
| 1.2 | Removing and installing cylinder head | 127 |
| 1.3 | Removing and installing cylinder head cover | 134 |
| 1.4 | Checking compression | 137 |
| 2 | Timing chain cover | 142 |
| 2.1 | Exploded view - timing chain cover | 142 |
| 2.2 | Removing and installing timing chain cover | 144 |
| 3 | Chain drive | 157 |
| 3.1 | Exploded view - camshaft timing chains | 157 |
| 3.2 | Exploded view - drive chain for valve gear | 160 |
| 3.3 | Exploded view - drive chain for auxiliary drives | 161 |
| 3.4 | Removing and installing camshaft timing chain | 161 |
| 3.5 | Removing camshaft timing chain from camshafts | 163 |
| 3.6 | Removing and installing drive chain for valve gear | 171 |
| 3.7 | Removing and installing drive chain for auxiliary drive | 173 |
| 4 | Valve gear | 174 |
| 4.1 | Exploded view - valve gear | 174 |
| 4.2 | Measuring axial clearance of camshaft | 177 |
| 4.3 | Measuring radial clearance of camshaft | 177 |
| 4.4 | Removing and installing camshaft | 178 |
| 4.5 | Checking hydraulic compensation elements | 187 |
| 4.6 | Removing and installing valve stem oil seals | 189 |
| 5 | Inlet and exhaust valves | 198 |
| 5.1 | Checking valve guides | 198 |
| 5.2 | Checking valves | 199 |
| 5.3 | Valve dimensions | 200 |
| 17 - Lubrication | | 201 |
| 1 | Sump/oil pump | 201 |
| 1.1 | Exploded view - sump/oil pump | 201 |
| 1.2 | Exploded view - sump (top section) | 204 |
| 1.3 | Engine oil | 205 |
| 1.4 | Removing and installing sump (bottom section) | 205 |
| 1.5 | Removing and installing sump (top section) | 207 |
| 1.6 | Removing and installing oil pump | 209 |
| 1.7 | Removing and installing oil level and oil temperature sender G266 | 214 |
| 1.8 | Checking oil level | 214 |
| 2 | Engine oil cooler | 215 |
| 2.1 | Removing and installing engine oil cooler | 215 |

| | | |
|---|--|------------|
| 3 | Crankcase breather | 217 |
| 3.1 | Removing and installing hose for crankcase breather system | 217 |
| 4 | Oil filter/oil pressure switches | 218 |
| 4.1 | Exploded view - oil filter housing/oil pressure switch | 218 |
| 4.2 | Removing and installing oil pressure switch F1 | 219 |
| 4.3 | Checking oil pressure and oil pressure switch | 219 |
| 4.4 | Removing and installing oil filter housing | 221 |
| 5 | Oil circuit | 223 |
| 5.1 | Exploded view - oil spray jets/valves | 223 |
| 5.2 | Removing and installing oil spray jets/valves | 223 |
| 19 - Cooling | 225 | |
| 1 | Cooling system/coolant | 225 |
| 1.1 | Connection diagram - coolant hoses | 225 |
| 1.2 | Checking cooling system for leaks | 227 |
| 1.3 | Draining and filling cooling system | 229 |
| 2 | Coolant pump/thermostat assembly | 237 |
| 2.1 | Exploded view - coolant pump/thermostat | 237 |
| 2.2 | Removing and installing electric coolant pump | 238 |
| 2.3 | Removing and installing coolant pump | 240 |
| 2.4 | Removing and installing map-controlled engine cooling system thermostat F265 | 241 |
| 2.5 | Removing and installing coolant temperature sender G62 | 243 |
| 2.6 | Removing and installing coolant connection | 244 |
| 2.7 | Thermostat opening values | 246 |
| 3 | Coolant pipes | 247 |
| 3.1 | Exploded view - coolant pipes | 247 |
| 3.2 | Removing and installing coolant pipes | 248 |
| 4 | Radiator/radiator fans | 257 |
| 4.1 | Exploded view - radiator/radiator fans | 257 |
| 4.2 | Removing and installing radiator | 258 |
| 4.3 | Removing and installing radiator cowl | 262 |
| 4.4 | Removing and installing radiator fans | 265 |
| 24 - Mixture preparation - injection | 266 | |
| 1 | Injection system | 266 |
| 1.1 | Overview of fitting locations - injection system | 266 |
| 2 | Vacuum system | 277 |
| 2.1 | Connection diagram - vacuum system | 277 |
| 3 | Injectors | 278 |
| 3.1 | Exploded view - fuel rail with injectors | 278 |
| 3.2 | Removing and installing injectors | 281 |
| 4 | Air cleaner | 290 |
| 4.1 | Exploded view - air cleaner housing | 290 |
| 4.2 | Removing and installing air cleaner housing | 292 |
| 5 | Intake manifold | 297 |
| 5.1 | Exploded view - intake manifold | 297 |
| 5.2 | Exploded view - intake manifold (bottom section) with fuel rail | 301 |
| 5.3 | Removing and installing intake manifold (bottom section) with fuel rail | 302 |
| 5.4 | Removing and installing intake manifold | 306 |
| 6 | Senders and sensors | 317 |
| 6.1 | Removing and installing fuel pressure sender G247 | 317 |
| 6.2 | Removing and installing air mass meter | 318 |
| 7 | Engine control unit | 319 |
| 7.1 | Wiring and component check with test box V.A.G 1598/42 | 319 |

| | | |
|---------------------------------------|---|------------|
| 7.2 | Removing and installing engine/motor control unit J623 | 321 |
| 8 | High-pressure pump | 325 |
| 8.1 | Exploded view - high-pressure pump | 325 |
| 8.2 | Removing and installing high-pressure pump | 327 |
| 8.3 | Removing and installing high-pressure pipe | 329 |
| 8.4 | Checking fuel pressure and residual pressure (up to high-pressure pump) | 331 |
| 9 | Lambda probe | 335 |
| 9.1 | Exploded view - Lambda probe | 335 |
| 9.2 | Removing and installing Lambda probe | 336 |
| 26 - Exhaust system | | 340 |
| 1 | Exhaust pipes/silencers | 340 |
| 1.1 | Exploded view - silencers | 340 |
| 1.2 | Removing and installing front silencers | 343 |
| 1.3 | Separating exhaust pipes/silencers | 344 |
| 1.4 | Renewing tailpipes | 345 |
| 1.5 | Stress-free alignment of exhaust system | 346 |
| 1.6 | Checking exhaust system for leaks | 347 |
| 1.7 | Aligning tailpipes | 347 |
| 2 | Emission control system | 348 |
| 2.1 | Removing and installing catalytic converters | 348 |
| 3 | Secondary air system | 354 |
| 3.1 | Exploded view - secondary air system | 354 |
| 3.2 | Removing and installing secondary air pump motor V101 | 358 |
| 3.3 | Checking secondary air inlet valve | 362 |
| 3.4 | Removing and installing combination valve | 366 |
| 4 | Exhaust manifolds | 371 |
| 4.1 | Exploded view - exhaust manifolds | 371 |
| 4.2 | Removing and installing exhaust manifolds | 372 |
| 28 - Ignition system | | 380 |
| 1 | Ignition system | 380 |
| 1.1 | Exploded view - ignition system | 380 |
| 1.2 | Test data, spark plugs | 381 |
| 1.3 | Removing and installing ignition coils | 381 |
| 1.4 | Removing and installing knock sensor | 383 |
| 1.5 | Removing and installing Hall senders | 384 |
| 1.6 | Removing and installing engine speed sender G28 | 385 |