

## Contents

<b>24 - Mixture preparation - injection</b>	<b>1</b>
<b>1 Safety precautions and rules for cleanliness</b>	<b>1</b>
1.1 General notes on self-diagnosis	1
1.2 Safety precautions	1
1.3 Rules for cleanliness when working on the injection system	2
1.4 Important: Required procedure prior to opening high-pressure injection system	3
1.5 Checking for leaks in fuel system	4
1.6 Checking vacuum system	4
<b>2 Injection system</b>	<b>6</b>
2.1 Technical data	6
2.2 Overview of fitting locations	6
2.3 Air cleaner - exploded view	16
2.4 Removing and installing air filter element	17
2.5 Removing air cleaner housing (bottom section)	19
2.6 Intake manifold (top section) - exploded view	21
2.7 Intake manifold (bottom section) with fuel rail - exploded view	24
2.8 Removing and installing intake manifold (top section)	25
2.9 Removing and installing intake manifold (bottom section) with fuel rail	27
2.10 Removing and installing fuel pressure sender G247	29
2.11 Checking fuel pressure and residual pressure (up to high-pressure pump)	29
2.12 High-pressure pump - exploded view	33
2.13 Removing and installing high-pressure pump	35
2.14 Removing and installing injectors	39
2.15 Removing and installing high-pressure pipes	43
2.16 Lambda probes - overview	44
2.17 Removing and installing Lambda probe G39 before catalytic converter - bank 1 (right-side)	45
2.18 Removing and installing Lambda probe after catalytic converter G130 - bank 1 (right-side)	47
2.19 Removing and installing Lambda probe 2 G108 before catalytic converter - bank 2 (left-side)	49
2.20 Removing and installing Lambda probe 2 after catalytic converter G131 - bank 2 (left-side)	51
<b>3 Engine control unit</b>	<b>54</b>
3.1 Wiring and component check with test box V.A.G 1598/42	54
3.2 Removing and installing engine control unit J623	55
<b>28 - Ignition system</b>	<b>59</b>
<b>1 General notes and safety precautions</b>	<b>59</b>
1.1 General notes on ignition system	59
1.2 Safety precautions	59
<b>2 Servicing ignition system</b>	<b>61</b>
2.1 Test data	61
2.2 Ignition system - exploded view	61
2.3 Removing and installing ignition coils	62
2.4 Removing and installing knock sensors	64
2.5 Removing and installing Hall sender	65
2.6 Removing and installing engine speed sender G28	66