

001 - Basic equipment	1-34
1. Basic equipment	1
2. Entry and start authorisation switch, Fuse 6 on fuse holder D	2
3. Control unit in dash panel insert, Radio controlled clock receiver, Radio controlled clock	3
4. Fuel gauge sender, Fuel system pressurisation pump, Control unit in dash panel insert	4
5. Steering column electronics control unit	5
6. Turn signal switch, Cruise control system switch, Steering column electronics control unit	6
7. Intermittent wiper switch, Start/Stop operation button, Onboard supply control unit, Steering column electronics control unit, Control unit for electronic steering column lock	7
8. Bonnet contact switch, Treble horn, Bass horn, Horn relay, Onboard supply control unit	8
9. Rain and light sensor, Wiper motor control unit, Onboard supply control unit	9
10. Gear detector switch, Front left brake pad wear sender, Onboard supply control unit, Headlight washer system pump, Left washer jet heater element, Right washer jet heater element	10
11. Brake fluid level warning contact, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Onboard supply control unit	11
12. Switch module for driving mode selection, Onboard supply control unit	12
13. Light switch, Hazard warning lights button, Onboard supply control unit	13
14. Onboard supply control unit, Front left headlight	14
15. Onboard supply control unit, Front right headlight	15
16. Rear left reading light button, Onboard supply control unit, Vanity mirror light bulb, Front interior light, Rear right interior light	16
17. Key operated switch to deactivate front passenger side airbag, Valet parking button, Onboard supply control unit, Valet parking warning lamp	17
18. Glove compartment light switch, Onboard supply control unit, Front left footwell illumination bulb, Front right footwell illumination bulb, Glove compartment light	18
19. Onboard supply control unit, 12 V socket	19
20. Adaptive cruise control unit, Onboard supply control unit	20
21. Rear roller blind switch, TCS and ESP button, Parking aid button, Onboard supply control unit	21
22. Entry and start authorisation button, Onboard supply control unit	22
23. Entry and start authorisation button, Contact sensor for front left exterior door handle, Contact sensor for front right exterior door handle, Convenience system central control unit, Left aerial for entry and start authorisation	23
24. Convenience system central control unit, Left tail light, Left tail light 2, Luggage compartment light	24
25. Convenience system central control unit, Rear lid central locking motor	25
26. Convenience system central control unit, Right tail light, Right tail light 2	26
27. Button 1 for tilting roof, Sliding sunroof adjustment control unit, Convenience system central control unit, Sliding sunroof motor	27
28. Anti-theft alarm sensor, Alarm horn, Convenience system central control unit	28
29. Clutch pedal switch, Convenience system central control unit	29
30. Brake light switch, Convenience system central control unit	30
31. Convenience system central control unit	31
32. Convenience system central control unit	32
33. Convenience system central control unit, Rear roller blind motor, Tank filler flap locking motor, Heated rear window	33
34. Cigarette lighter, 12 V socket 2, 12 V socket 3	34
002 - Convenience system	35-64
1. Convenience system	35
2. Entry and start authorisation button, Convenience system central control unit, Luggage compartment aerial for entry and start system, Interior aerial 1 for entry and start system	36
3. Anti-theft alarm sensor, Alarm horn, Convenience system central control unit, Aerial amplifier 3	37
4. Contact sensor for front left exterior door handle, Contact sensor for front right exterior door handle, Convenience system central control unit, Left aerial for entry and start authorisation	38
5. Contact sensor for rear left exterior door handle, Contact sensor for rear right exterior door handle, Convenience system central control unit	39
6. Window aerial suppression filter, Heated rear window relay, Convenience system central control unit, Heated rear window single fuse, Heated rear window	40
7. Contact switch in lock cylinder for rear lid, anti-theft alarm system and central locking system, Release button for rear lid lock cylinder, Convenience system central control unit, Rear lid central locking motor, Left number plate light, Right number plate light	41
8. Driver door control unit	42
9. Operating unit for window regulator in driver door, Driver door control unit, Driver side window regulator motor	43
10. Driver side central locking lock unit, Driver door control unit	44
11. Driver side central locking lock unit, Driver door control unit	45
12. Driver seat memory operating unit. Driver side interior locking switch. Rear lid remote release	46

switch, Driver door control unit, Driver door opener illumination bulb, Driver side door warning lamp, Front left entry light	
13. Driver seat memory operating unit, Driver door control unit	47
14. Mirror adjustment switch, Mirror adjustment changeover switch, Adjustment switch for mirror with fold-in feature, Interior monitoring switch, Alarm system off switch, Driver door control unit, Central locking SAFELOCK function warning lamp	48
15. Potentiometer for horizontal adjustment of driver side mirror, Potentiometer for vertical adjustment of driver side mirror, Driver door control unit, Driver side mirror adjustment motor 2, Driver side fold-in mirror motor, Driver side mirror adjustment motor	49
16. Driver door control unit, Lane change assist warning lamp in driver side exterior mirror, Driver side turn signal repeater bulb, Entry light in exterior mirror, driver side, Automatic anti-dazzle exterior mirror, driver side, Heated exterior mirror on driver side	50
17. Front passenger door control unit	51
18. Front passenger side central locking lock unit, Front passenger door control unit	52
19. Window regulator switch in front passenger door, Front passenger side interior locking switch, Front passenger door control unit	53
20. Front passenger door control unit, Front passenger door opener illumination bulb, Front passenger side window regulator motor, Front right entry light, Front passenger side door warning lamp	54
21. Potentiometer for horizontal adjustment of front passenger side mirror, Potentiometer for vertical adjustment of front passenger side mirror, Front passenger door control unit, Front passenger side mirror adjustment motor 2, Front passenger side fold-in mirror motor, Front passenger side mirror adjustment motor	55
22. Front passenger door control unit, Lane change assist warning lamp in passenger side exterior mirror, Front passenger side turn signal repeater bulb, Entry light in exterior mirror, passenger side, Automatic anti-dazzle exterior mirror, passenger side, Heated exterior mirror on passenger side	56
23. Rear left door control unit	57
24. Rear left central locking lock unit, Rear left door control unit	58
25. Rear left window regulator switch, in door, Rear left interior locking switch, Rear left door control unit, Rear left window regulator motor	59
26. Rear left door control unit, Rear left door opener illumination bulb, Rear left entry light, Rear left door warning lamp	60
27. Rear right door control unit	61
28. Rear right central locking lock unit, Rear right door control unit	62
29. Rear right window regulator switch, in door, Rear right interior locking switch, Rear right door control unit, Rear right window regulator motor	63
30. Rear right door control unit, Rear right door opener illumination bulb, Rear right entry light, Rear right door warning lamp	64
003 - Fuse assignment	65-95
1. Fuse assignment	65
2. Battery, Battery monitor control unit, Fuse 1 in fuse holder A	66
3. Fuse 2 in fuse holder A, Fuse 3 in fuse holder A	67
4. Battery isolation igniter, Terminal 30 wiring junction 2, Jump start socket	68
5. Starter, Alternator, Terminal 30 wiring junction 2, Jump start socket	69
6. Starter motor relay, Starter motor relay 2	70
7. Fuse holder B, Fuse carrier 1	71
8. Fuse holder B, Fuse carrier 1	72
9. Fuse holder C, Fuse carrier 1	73
10. Fuse holder C, Fuse carrier 1	74
11. Fuse holder C, Fuse carrier 1	75
12. Fuse holder C, Fuse carrier 2	76
13. Fuse holder C, Fuse carrier 2	77
14. Fuse holder C, Fuse carrier 2	78
15. Fuse holder C, Fuse carrier 3	79
16. Fuse holder C, Fuse carrier 3	80
17. Fuse holder D, Fuse carrier 1	81
18. Fuse holder D, Fuse carrier 1	82
19. Fuse holder D, Fuse carrier 2	83
20. Fuse holder D, Fuse carrier 2	84
21. Fuse holder D, Fuse carrier 2	85
22. Fuse holder F, Fuse carrier 1	86
23. Fuse holder F, Fuse carrier 2	87
24. Fuse holder F, Fuse carrier 2	88
25. Fuse carrier 3	89
26. Fuse holder F. Fuse carrier 3	90

27. Fuse holder F, Fuse carrier 3	91
28. Fuse holder F, Fuse carrier 3	92
29. Fuse holder F, Fuse carrier 4	93
30. Fuse holder F, Fuse carrier 4	94
31. Fuse holder F, Fuse carrier 4	95
004 - CAN separating connector	96-104
1. CAN separating connector	96
2. ABS control unit, Power steering control unit, Active steering control unit	97
3. Digital sound package control unit, Telephone transmitter and receiver unit	98
4. Driver door control unit, Onboard supply control unit	99
5.	100
6. Control unit in dash panel insert, Auxiliary heater control unit, Steering column electronics control unit, Data bus diagnostic interface, Control unit for electromechanical parking brake	101
7. Data bus diagnostic interface, Radio, Connection for external audio sources	102
8. Climatronic control unit, Front passenger door control unit, Steering column electronics control unit, Data bus diagnostic interface	103
9.	104
005 - multitronic 0AW (continuously variable automatic transmission)	105-109
1. multitronic 0AW (continuously variable automatic transmission)	105
2. Automatic gearbox control unit, Convenience system central control unit, Engine control unit	106
3. Automatic gearbox control unit, Data bus diagnostic interface, Engine control unit	107
4. Automatic gearbox control unit, Onboard supply control unit, Selector lever sensors control unit	108
5. Gear selector position P switch, Automatic gearbox control unit, Selector lever lock solenoid	109
006 - 6-speed automatic gearbox with Tiptronic	110-114
1. 6-speed automatic gearbox with Tiptronic	110
2. Automatic gearbox control unit, Convenience system central control unit, Engine control unit	111
3. Automatic gearbox control unit, Data bus diagnostic interface, Engine control unit	112
4. Automatic gearbox control unit, Onboard supply control unit, Selector lever sensors control unit	113
5. Gear selector position P switch, Automatic gearbox control unit, Selector lever lock solenoid	114
007 - Preparation for mobile telephone (MOST bus) - USA	115-117
1. Preparation for mobile telephone (MOST bus) - USA	115
2. Telephone transmitter and receiver unit, Telephone microphone, Aerial for Bluetooth, Microphone unit in front roof module	116
3. Telephone transmitter and receiver unit, Radio, telephone and navigation system aerial, Telephone bracket	117
008 - 6-cylinder diesel engine , CAMA,CAMB,CAPA	118-142
1. 6-cylinder diesel engine , CAMA,CAMB,CAPA	118
2. Battery, Terminal 15 voltage supply relay	119
3. Battery isolation igniter, Jump start socket	120
4. Starter, Alternator, Voltage regulator, Terminal 30 wiring junction 2, Jump start socket	121
5. Fuel pump relay, Terminal 30 voltage supply relay, Engine control unit	122
6. Starter motor relay, Engine control unit, Starter motor relay 2	123
7. Automatic glow period control unit, Engine control unit	124
8. Oil level and oil temperature sender, Engine control unit	125
9. Throttle valve module, Engine control unit, Left electrohydraulic engine mounting solenoid valve, Right electrohydraulic engine mounting solenoid valve	126
10. Low heat output relay, Engine control unit, Auxiliary air heater element	127
11. Engine speed sender, Hall sender, Engine control unit	128
12. Accelerator position sender, Accelerator position sender 2, Engine control unit	129
13. Engine control unit, Intake manifold flap motor, Intake manifold flap 2 motor	130
14. Charge pressure sender, Intake air temperature sender, Fuel pressure sender, Engine control unit, Exhaust gas recirculation control motor	131
15. Exhaust gas pressure sensor 1, Engine control unit, Turbocharger 1 control unit	132
16. Air mass meter, Engine control unit	133
17. Coolant temperature sender, Engine control unit	134
18. Lambda probe, Engine control unit	135
19. Engine control unit, Injector, cylinder 1, Injector, cylinder 6	136
20. Clutch position sender, Engine control unit	137
21. Brake light switch, Engine control unit, Supplementary fuel pump	138
22. Engine control unit	139
23. Control unit in dash panel insert, Data bus diagnostic interface	140
24. Fuel gauge sender, Fuel system pressurisation pump, Fuel gauge sender 2, Control unit in dash panel insert	141
25. Gear detector switch, Onboard supply control unit, Air conditioner compressor regulating valve	142
009 - 4.2l petrol engine , CAUA	143-171
1. 4.2l petrol engine . CAUA	143

2. Battery, Terminal 15 voltage supply relay, Battery monitor control unit	144
3. Battery isolation igniter, Jump start socket	145
4. Starter, Alternator, Voltage regulator, Terminal 30 wiring junction 2, Jump start socket	146
5. Main relay, Engine control unit, Engine component current supply relay	147
6. Starter motor relay, Engine control unit, Starter motor relay 2	148
7. Engine control unit	149
8. Engine control unit, Activated charcoal filter solenoid valve 1, Left electrohydraulic engine mounting solenoid valve, Fuel metering valve, Variable intake manifold changeover valve, Fuel metering valve 2, Fuel system diagnostic pump	150
9. Air mass meter, Secondary air pump relay, Engine control unit, Right electrohydraulic engine mounting solenoid valve, Secondary air pump motor	151
10. Continued coolant circulation relay, Engine control unit, Camshaft control valve 1, Camshaft control valve 2, Exhaust camshaft control valve 1, Exhaust camshaft control valve 2, Continued coolant circulation pump	152
11. Map-controlled engine cooling system thermostat, Engine control unit, Intake manifold flap motor, Variable intake manifold motor	153
12. Oil level and oil temperature sender, Brake servo relay, Engine control unit, Vacuum pump for brakes	154
13. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	155
14. Engine control unit, Ignition coil 5 with output stage, Ignition coil 6 with output stage, Ignition coil 7 with output stage, Ignition coil 8 with output stage	156
15. Knock sensor 1, Knock sensor 2, Knock sensor 3, Throttle valve module, Engine control unit	157
16. Engine speed sender, Hall sender, Knock sensor 4, Hall sender 3, Engine control unit	158
17. Coolant temperature sender, Fuel pressure sender, Intake manifold flap potentiometer, Intake manifold flap potentiometer 2, Engine control unit	159
18. Accelerator position sender, Engine control unit	160
19. Hall sender 2, Brake servo pressure sensor, Hall sender 4, Fuel pressure sender for low-pressure, Engine control unit	161
20. Lambda probe, Lambda probe 2, Engine control unit	162
21. Lambda probe after catalytic converter, Lambda probe 2 after catalytic converter, Engine control unit	163
22. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 6, Injector, cylinder 8	164
23. Engine control unit, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5, Injector, cylinder 7	165
24. Clutch position sender, Engine control unit	166
25. Brake light switch, Engine control unit	167
26. Automatic gearbox control unit, Data bus diagnostic interface, Engine control unit	168
27. Control unit in dash panel insert, Data bus diagnostic interface	169
28. Fuel gauge sender, Fuel system pressurisation pump, Fuel gauge sender 2, Control unit in dash panel insert, Fuel pump control unit	170
29. Oil pressure switch, Gear detector switch, Coolant shortage indicator sender, Onboard supply control unit, Servotronic solenoid valve, Air conditioner compressor regulating valve	171
010 - 3.2l petrol engine , CALA	172-200
1. 3.2l petrol engine , CALA	172
2. Battery, Terminal 15 voltage supply relay	173
3. Battery isolation igniter, Terminal 30 wiring junction 2, Jump start socket	174
4. Starter, Alternator, Voltage regulator, Jump start socket	175
5. Main relay, Engine control unit, Engine component current supply relay	176
6. Starter motor relay, Engine control unit, Starter motor relay 2, Fuse carrier 1	177
7. Oil level and oil temperature sender, Engine control unit, Fuse carrier 1	178
8. Engine control unit, Camshaft control valve 1, Exhaust camshaft control valve 1, Climatronic coolant shut-off valve, Continued coolant circulation pump	179
9. Actuator 1 for camshaft adjustment, Engine control unit, Left electrohydraulic engine mounting solenoid valve, Exhaust camshaft control valve 2	180
10. Actuator 6 for camshaft adjustment, Actuator 7 for camshaft adjustment, Actuator 8 for camshaft adjustment, Engine control unit	181
11. Engine control unit, Activated charcoal filter solenoid valve 1, Variable intake manifold changeover valve, Fuel metering valve, Fuel system diagnostic pump	182
12. Engine control unit, Secondary air inlet valve, Valve for oil pressure control, Secondary air pump motor	183
13. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage	184
14. Engine control unit, Ignition coil 4 with output stage, Ignition coil 5 with output stage, Ignition coil 6 with output stage	185

15. Knock sensor 1, Knock sensor 2, Engine control unit	186
16. Engine speed sender, Coolant temperature sender, Fuel pressure sender for low-pressure, Throttle valve module, Engine control unit	187
17. Hall sender, Intake air temperature sender, Fuel pressure sender, Engine control unit	188
18. Accelerator position sender, Hall sender 2, Accelerator position sender 2, Hall sender 3, Sender 1 for secondary air pressure, Engine control unit	189
19. Oil pressure switch for reduced oil pressure, Hall sender 4, Variable intake manifold position sender, Engine control unit	190
20. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5, Injector, cylinder 6	191
21. Lambda probe, Lambda probe 2, Engine control unit	192
22. Lambda probe after catalytic converter, Lambda probe 2 after catalytic converter, Engine control unit	193
23. Clutch position sender, Engine control unit	194
24. Brake light switch, Engine control unit	195
25. Automatic gearbox control unit, Data bus diagnostic interface, Engine control unit	196
26. Control unit in dash panel insert, Data bus diagnostic interface	197
27. Fuel gauge sender, Fuel system pressurisation pump, Control unit in dash panel insert, Fuel pump control unit	198
28. Oil pressure switch, Coolant shortage indicator sender, Onboard supply control unit	199
29. Circulation pump relay, Coolant circulation pump	200
011 - Data bus diagnostic interface and diagnostic connector	201-204
1. Data bus diagnostic interface and diagnostic connector	201
2. Data bus diagnostic interface	202
3. Data bus diagnostic interface	203
4. Data bus diagnostic interface	204
012 - 1.8l petrol engine , CABD,CDHB	205-227
1. 1.8l petrol engine , CABD,CDHB	205
2. Battery, Terminal 15 voltage supply relay, Battery monitor control unit	206
3. Battery isolation igniter, Jump start socket	207
4. Starter, Alternator, Voltage regulator, Suppression filter, Terminal 30 wiring junction 2, Jump start socket	208
5. Main relay, Engine control unit, Engine component current supply relay	209
6. Starter motor relay, Engine control unit, Starter motor relay 2	210
7. Oil level and oil temperature sender, Engine control unit	211
8. Engine control unit, Charge pressure control solenoid valve, Activated charcoal filter solenoid valve 1, Left electrohydraulic engine mounting solenoid valve, Camshaft control valve 1, Turbocharger air recirculation valve, Intake manifold flap valve, Valve for oil pressure control	212
9. Additional coolant pump relay, Engine control unit, Climatronic coolant shut-off valve, Continued coolant circulation pump	213
10. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	214
11. Accelerator position sender, Accelerator position sender 2, Engine control unit	215
12. Engine speed sender, Hall sender, Knock sensor 1, Engine control unit	216
13. Charge pressure sender, Fuel pressure sender, Intake manifold flap potentiometer, Throttle valve module, Engine control unit	217
14. Oil pressure switch, Oil pressure switch for reduced oil pressure, Intake air temperature sender, Coolant temperature sender, Engine control unit	218
15. Air mass meter, Engine control unit, Fuel pressure regulating valve	219
16. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	220
17. Lambda probe, Lambda probe after catalytic converter, Engine control unit	221
18. Clutch position sender, Engine control unit	222
19. Brake light switch, Steering column electronics control unit, Engine control unit	223
20. Automatic gearbox control unit, Data bus diagnostic interface, Engine control unit	224
21. Control unit in dash panel insert, Data bus diagnostic interface	225
22. Fuel gauge sender, Fuel system pressurisation pump, Control unit in dash panel insert, Fuel pump control unit	226
23. Gear detector switch, Coolant shortage indicator sender, Onboard supply control unit, Servotronic solenoid valve, Air conditioner compressor regulating valve	227
013 - Gas discharge headlights with automatic headlight range control	228-233
1. Gas discharge headlights with automatic headlight range control	228
2. Light switch, Rear left vehicle level sender, Headlight range control unit, Onboard supply control unit	229
3. Left gas discharge bulb control unit, Headlight range control unit, Onboard supply control unit, Left headlight range control motor. Left dip beam screen motor	230

4. Headlight range control unit, Onboard supply control unit, Left LED module for daytime running light and side light	231
5. Right gas discharge bulb control unit, Headlight range control unit, Onboard supply control unit, Right gas discharge (xenon) bulb, Right headlight range control motor, Right dip beam screen motor	232
6. Onboard supply control unit, Front right turn signal bulb	233
014 - 400 W radiator fan for 4-cylinder and 6-cylinder petrol engines	234-235
1. 400 W radiator fan for 4-cylinder and 6-cylinder petrol engines	234
2. Radiator fan control unit, Radiator fan	235
015 - 600 W radiator fan for 4-cylinder and 6-cylinder petrol engines	236-237
1. 600 W radiator fan for 4-cylinder and 6-cylinder petrol engines	236
2. Radiator fan control unit, Radiator fan, Radiator fan 2	237
016 - 400 W radiator fan for 4-cylinder and 6-cylinder diesel engines	238-239
1. 400 W radiator fan for 4-cylinder and 6-cylinder diesel engines	238
2. Radiator fan control unit, Radiator fan	239
017 - 600 W radiator fan for 4-cylinder and 6-cylinder diesel engines	240-241
1. 600 W radiator fan for 4-cylinder and 6-cylinder diesel engines	240
2. Radiator fan control unit, Radiator fan, Radiator fan 2	241
018 - 800 W/1000 W radiator fan for 6-cylinder diesel engines	242-243
1. 800 W/1000 W radiator fan for 6-cylinder diesel engines	242
2. Radiator fan control unit, Radiator fan control unit 2, Terminal 30 wiring junction 2, Radiator fan, Radiator fan 2	243
019 - 800 W/1000 W radiator fan for 6-cylinder and 8-cylinder petrol engines	244-245
1. 800 W/1000 W radiator fan for 6-cylinder and 8-cylinder petrol engines	244
2. Radiator fan control unit, Radiator fan control unit 2, Terminal 30 wiring junction 2, Radiator fan, Radiator fan 2	245
020 - Parking aid (PDC)	246-249
1. Parking aid (PDC)	246
2. Front left parking aid sender, Front parking aid warning buzzer, Park assist steering control unit	247
3. Rear left parking aid sender, Rear right parking aid sender, Rear parking aid warning buzzer, Park assist steering control unit	248
4. Parking aid button, Park assist steering control unit	249
021 - Airbag systems	250-261
1. Airbag systems	250
2. Airbag coil connector and return ring with slip ring, Airbag control unit, Airbag igniter on driver side, Airbag igniter 1 on front passenger side, Airbag igniter 2 on front passenger side, Airbag igniter 2 on driver side	251
3. Airbag control unit, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter, Battery isolation igniter	252
4. Driver side belt force limiter, Front passenger side belt force limiter, Airbag control unit, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side, Rear centre belt tensioner igniter	253
5. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Airbag control unit	254
6. Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side, Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side	255
7. Key operated switch to deactivate airbag on front passenger side, Airbag control unit, Warning lamp for airbag deactivated on front passenger side	256
8. Driver side belt switch, Front passenger side belt switch, Seat occupied sensor on front passenger side, Driver side seat position sensor, Front passenger side seat position sensor, Airbag control unit	257
9. Front passenger side belt switch, Pressure sensor for seat occupied recognition, Seat belt force sensor for seat occupied recognition, Front passenger side seat position sensor, Airbag control unit, Seat occupied recognition control unit	258
10. Airbag control unit, Driver side knee airbag igniter, Front passenger side knee airbag igniter	259
11. Airbag control unit, Data bus diagnostic interface	260
12. Control unit in dash panel insert, Data bus diagnostic interface, Airbag warning lamp	261
022 - Reversing camera (Rear Assist)	262-264
1. Reversing camera (Rear Assist)	262
2. Reversing camera system control unit, Reversing camera	263
3. Reversing camera system control unit, Control unit 1 for information electronics	264
023 - Automatic adaptive suspension, adjustable dampers	265-271
1. Automatic adaptive suspension. adjustable dampers	265

2. Electronically controlled damping control unit	266
3. Front left body acceleration sender, Front right body acceleration sender, Rear body acceleration sender, Electronically controlled damping control unit	267
4. Rear left vehicle level sender, Rear right vehicle level sender, Front left vehicle level sender, Front right vehicle level sender, Electronically controlled damping control unit	268
5. Electronically controlled damping control unit, Front left shock absorber damping adjustment valve, Front right shock absorber damping adjustment valve, Rear left shock absorber damping adjustment valve, Rear right shock absorber damping adjustment valve	269
6. Electronically controlled damping control unit, Data bus diagnostic interface	270
7. Switch module for driving mode selection, Onboard supply control unit, Data bus diagnostic interface	271
024 - Electromechanical parking brake	272-275
1. Electromechanical parking brake	272
2. Control unit for electromechanical parking brake	273
3. Electromechanical parking brake button, Auto-hold button, ABS control unit, Control unit for electromechanical parking brake	274
4. Control unit for electromechanical parking brake, Left parking brake motor, Right parking brake motor, Connection 2 (running gear/dash panel insert CAN bus, high), in main wiring harness, Connection 2 (running gear/dash panel insert CAN bus, low), in main wiring harness	275
025 - Trailer coupling	276-279
1. Trailer coupling	276
2. Terminal 15 voltage supply relay, Trailer detector control unit, Voltage stabiliser, Fuse carrier 2, Fuse carrier 4	277
3. Trailer detector control unit	278
4. Trailer detector control unit, Trailer socket	279
026 - Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering light	280-286
1. Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering light	280
2. Control unit for cornering light and headlight range control	281
3. Light switch, Rear left vehicle level sender, Onboard supply control unit, Control unit for cornering light and headlight range control	282
4. Onboard supply control unit, Output module for left headlight, Left gas discharge (xenon) bulb, Left headlight range control motor, Left dip beam screen motor, Left dynamic cornering light control motor	283
5. Onboard supply control unit, Left LED module for daytime running light and side light, Front left turn signal bulb, Left parking light bulb	284
6. Right gas discharge bulb control unit, Onboard supply control unit, Output module for right headlight, Right gas discharge (xenon) bulb, Right headlight range control motor, Right dip beam screen motor, Right dynamic cornering light control motor	285
7. Onboard supply control unit, Front right turn signal bulb, Right parking light bulb	286
027 - Auxiliary heater	287-291
1. Auxiliary heater	287
2. Auxiliary heater control unit, Circulation pump	288
3. Auxiliary heater control unit, Remote control receiver for auxiliary heater, Auxiliary heater aerial	289
4. Fuel gauge sender, Fuel system pressurisation pump	290
5. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Fuel gauge sender 2, Fuel pump control unit	291
028 - Garage door opener	292-293
1. Garage door opener	292
2. Garage door operating unit, Garage door operation control unit	293
029 - Seat heating	294-298
1. Seat heating	294
2. Heated driver seat regulator, Heated front passenger seat regulator, Onboard supply control unit, Heated seat cushion for driver seat, Heated backrest for driver seat	295
3. Onboard supply control unit, Heated seat cushion for front passenger seat, Heated backrest for front passenger seat	296
4. Heated rear left seat switch with regulator, Onboard supply control unit, Heated bench seat cushion for rear left seat	297
5. Heated rear right seat switch with regulator, Heated bench seat cushion for rear right seat	298
030 - Front passenger seat with electrically adjustable lumbar support, seat ventilation and heating, 2-door vehicle	299-306
1. Front passenger seat with electrically adjustable lumbar support, seat ventilation and heating, 2-door vehicle	299
2. Front passenger seat adjustment with memory control unit, Rear right footwell light	300
3. Front passenger seat adjustment operating unit, Front passenger seat adjustment with memory	301

control unit, Front passenger seat longitudinal adjustment motor, Front passenger seat rake adjustment motor, Front passenger seat height adjustment motor	
4. Front passenger seat adjustment with memory control unit, Front passenger seat backrest adjustment motor, Front passenger seat head restraint adjustment motor	302
5. Front passenger seat backrest locking switch, Upright movement limit switch for front passenger seat backrest, Front passenger seat adjustment with memory control unit	303
6. Front right seat temperature sender, Front passenger seat adjustment with memory control unit, Heated seat cushion for front passenger seat, Heated backrest for front passenger seat	304
7. Front passenger seat adjustment with memory control unit, Front passenger seat backrest fan, Front passenger seat cushion fan	305
8. Front passenger seat lumbar support adjustment switch	306
031 - Driver seat with memory function, electrically adjustable lumbar support, seat ventilation and heating, 2-door vehicle	307-315
1. Driver seat with memory function, electrically adjustable lumbar support, seat ventilation and heating, 2-door vehicle	307
2. Seat and steering column adjustment control unit with memory, Rear left footwell light	308
3. Driver seat adjustment operating unit, Seat and steering column adjustment control unit with memory, Driver seat longitudinal adjustment motor, Driver seat rake adjustment motor, Driver seat height adjustment motor	309
4. Seat and steering column adjustment control unit with memory, Driver seat backrest adjustment motor, Driver seat head restraint adjustment motor	310
5. Driver seat backrest locking switch, Upright movement limit switch for driver seat backrest, Seat and steering column adjustment control unit with memory	311
6. Front left seat temperature sender, Seat and steering column adjustment control unit with memory, Heated seat cushion for driver seat, Heated backrest for driver seat	312
7. Seat and steering column adjustment control unit with memory, Driver seat backrest fan, Driver seat cushion fan	313
8. Driver seat lumbar support adjustment switch	314
9. Driver seat memory operating unit, Emergency-off button, Driver door control unit	315
032 - Electrically adjustable lumbar support on seat without electric adjustment	316-318
1. Electrically adjustable lumbar support on seat without electric adjustment	316
2. Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor, Rear left footwell light	317
3. Front passenger seat lumbar support longitudinal adjustment motor, Front passenger seat lumbar support height adjustment motor, Rear right footwell light	318
033 - Multifunction steering wheel	319-322
1. Multifunction steering wheel	319
2. Steering column electronics control unit	320
3. Operating unit in steering wheel, Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Multifunction steering wheel control unit, Steering column electronics control unit	321
4. Operating unit in steering wheel, Steering column electronics control unit, Driver side airbag igniter, Driver side airbag igniter 2	322
034 - Preparation for mobile telephone (infotainment CAN bus)	323-327
1. Preparation for mobile telephone (infotainment CAN bus)	323
2. Radio, telephone and navigation system aerial, Remote control receiver for auxiliary heater, Telephone aerial, Aerial amplifier for mobile telephone, Auxiliary heater aerial	324
3. Telephone transmitter and receiver unit, Aerial amplifier for mobile telephone, Aerial for Bluetooth	325
4. Radio, Telephone transmitter and receiver unit, Telephone microphone, Microphone unit in front roof module	326
5. Telephone transmitter and receiver unit, Telephone bracket	327
035 - Preparation for mobile telephone (MOST bus)	328-332
1. Preparation for mobile telephone (MOST bus)	328
2. Radio, telephone and navigation system aerial, Remote control receiver for auxiliary heater, Aerial amplifier for mobile telephone, Auxiliary heater aerial	329
3. Telephone transmitter and receiver unit, Aerial amplifier for mobile telephone	330
4. Data bus diagnostic interface, Telephone transmitter and receiver unit, Telephone microphone, Aerial for Bluetooth, Microphone unit in front roof module	331
5. Telephone transmitter and receiver unit, Telephone bracket	332
036 - Bluetooth car phone (MOST bus)	333-335
1. Bluetooth car phone (MOST bus)	333
2. Navigation system with CD drive control unit, Control unit for front display and information control panel, Telephone transmitter and receiver unit, Radio, telephone and navigation system aerial, Remote control receiver for auxiliary heater, Satellite radio, Aerial for Bluetooth, Microphone unit in front roof module	334

3. Onboard supply control unit, Telephone transmitter and receiver unit, Telephone bracket	335
037 - Preparation for mobile telephone with no hands-free system (infotainment CAN bus)	336-337
1. Preparation for mobile telephone with no hands-free system (infotainment CAN bus)	336
2. Radio, Radio, telephone and navigation system aerial, Microphone unit in front roof module	337
038 - Preparation for mobile telephone with no hands-free system (MOST bus)	338-340
1. Preparation for mobile telephone with no hands-free system (MOST bus)	338
2. Microphone unit in front roof module	339
3. Radio, telephone and navigation system aerial	340
039 - Automatic air conditioning system, luxury Climatronic	341-350
1. Automatic air conditioning system, luxury Climatronic	341
2. Fresh air blower control unit, Fresh air blower	342
3. Sunlight penetration photosensor, Potentiometer for rear temperature selection	343
4. Defroster flap control motor, Right centre vent control motor	344
5. Left footwell flap control motor, Left temperature flap control motor	345
6. Left footwell vent temperature sender, Right footwell vent temperature sender, Evaporator output temperature sender, Air flow flap control motor, Air recirculation flap control motor	346
7. Coolant circulation pump	347
8. Ambient temperature sensor, Refrigerant pressure and temperature sender, Air conditioner compressor regulating valve	348
9. Convenience system central control unit, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Heated rear window	349
10. Humidity sender, Convenience system central control unit, Automatic anti-dazzle interior mirror	350
040 - Automatic air conditioning system, basic Climatronic	351-357
1. Automatic air conditioning system, basic Climatronic	351
2. Fresh air blower control unit	352
3. Centre vent control motor	353
4. Air recirculation flap control motor, Footwell flap control motor	354
5. Centre vent temperature sender, Footwell vent temperature sender, Evaporator output temperature sender, Coolant circulation pump	355
6. Air conditioner compressor regulating valve	356
7. Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Heated rear window	357
041 - Ring circuit break diagnostic	358-360
1. Ring circuit break diagnostic	358
2. Navigation system with CD drive control unit, Control unit for front display and information control panel, Digital sound package control unit, Radio, Telephone transmitter and receiver unit, TV tuner, Connection 1 (diagnosis), in main wiring harness	359
3. Control unit for front display and information control panel, Data bus diagnostic interface, CD changer, Satellite radio, Digital radio, Connection for external audio sources, Connection 1 (diagnosis), in main wiring harness	360
042 - Infotainment MOST bus	361-364
1. Infotainment MOST bus	361
2. Control unit for front display and information control panel, Digital sound package control unit, Data bus diagnostic interface, Telephone transmitter and receiver unit, CD changer, Digital radio	362
3. Control unit for front display and information control panel, Data bus diagnostic interface, CD changer, Connection for external audio sources	363
4. Navigation system with CD drive control unit, Digital sound package control unit, Radio, Telephone transmitter and receiver unit, TV tuner, Satellite radio, Digital radio	364
043 - Anti-lock brake system (ABS) with electronic stabilisation program (ESP)	365-372
1. Anti-lock brake system (ABS) with electronic stabilisation program (ESP)	365
2. Auto-hold button, ABS control unit, ABS control unit fuse 1	366
3. TCS and ESP button, ABS control unit	367
4. ESP sensor unit, ESP sensor unit 2, ABS control unit, Active steering control unit, ABS hydraulic pump	368
5. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit	369
6. Brake light switch, ABS control unit, Convenience system central control unit, ABS hydraulic unit, Front right ABS inlet valve, Front right ABS outlet valve, Front left ABS inlet valve, Front left ABS outlet valve, Rear right ABS inlet valve, Rear left ABS inlet valve, Rear right ABS outlet valve, Rear left ABS outlet valve	370
7. Steering angle sender, ABS control unit, Steering column electronics control unit, ABS hydraulic unit, Vehicle stabilization program switch valve 1, Vehicle stabilization program switch valve 2, Vehicle stabilization program high-pressure valve 1, Vehicle stabilization program high-pressure valve 2	371
8. Control unit in dash panel insert, Data bus diagnostic interface, ABS warning lamp, ESP and TCS warning lamp	372

044 - MMI basic	373-376
1. MMI basic	373
2. Control unit for front display and information control panel	374
3. Multimedia system operating unit, Control unit for front display and information control panel, Display unit for front information display and operating unit control unit	375
4. Control unit for front display and information control panel, Radio, telephone and navigation system aerial, Aerial amplifier 2, Aerial amplifier 3	376
045 - CD/DVD changer (MOST bus)	377-378
1. CD/DVD changer (MOST bus)	377
2. CD changer, Connection for external audio sources	378
046 - MMI with digital radio	379-380
1. MMI with digital radio	379
2. TV tuner, Aerial amplifier 2, Aerial amplifier 3, Digital radio	380
047 - MMI with radio and basic sound system	381-384
1. MMI with radio and basic sound system	381
2. Digital sound package control unit	382
3. Digital sound package control unit, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range and bass loudspeaker, Front right mid-range and bass loudspeaker	383
4. Digital sound package control unit, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker	384
048 - MMI with radio and Standard sound system	385-389
1. MMI with radio and Standard sound system	385
2. Digital sound package control unit, Telephone microphone, Microphone unit in front roof module, Voice command microphone	386
3. Digital sound package control unit, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range and bass loudspeaker, Front right mid-range and bass loudspeaker, Centre mid-range and treble loudspeaker	387
4. Digital sound package control unit, Rear left treble loudspeaker, Rear right treble loudspeaker, Subwoofer in rear shelf, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker	388
5. Digital sound package control unit, Connection for external audio sources	389
049 - MMI with radio and Bang & Olufsen sound system	390-396
1. MMI with radio and Bang & Olufsen sound system	390
2. Digital sound package control unit, Telephone microphone, Internal microphone, Microphone unit in front roof module, Voice command microphone	391
3. Digital sound package control unit, Front left treble loudspeaker, Front left bass loudspeaker, Front left mid-range loudspeaker, Centre mid-range and treble loudspeaker	392
4. Digital sound package control unit, Front right treble loudspeaker, Front right bass loudspeaker, Front right mid-range loudspeaker	393
5. Digital sound package control unit, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker	394
6. Digital sound package control unit, Rear left mid-range loudspeaker, Rear right mid-range loudspeaker, Subwoofer in rear shelf	395
7. Digital sound package control unit, Connection for external audio sources	396
050 - Preparation for mobile telephone (infotainment CAN bus) - USA	397-401
1. Preparation for mobile telephone (infotainment CAN bus) - USA	397
2. Telephone transmitter and receiver unit, Aerial for Bluetooth	398
3. Radio, Telephone transmitter and receiver unit, Front left microphone, Microphone unit in front roof module	399
4. Telephone transmitter and receiver unit, Telephone bracket	400
5. Radio, telephone and navigation system aerial, Telephone aerial, Telephone bracket, Satellite aerial	401
051 - MMI high with navigation system	402-403
1. MMI high with navigation system	402
2. Navigation system with CD drive control unit, Radio, telephone and navigation system aerial, Satellite aerial, Auxiliary heater aerial	403
052 - MMI High	404-407
1. MMI High	404
2. Multimedia system operating unit, Control unit for front display and information control panel	405
3. Control unit for front display and information control panel, Display unit for front information display and operating unit control unit	406
4. Control unit for front display and information control panel, Display unit for front information display and operating unit control unit, Reversing camera system control unit, TV tuner	407
053 - MMI high with radio	408-409
1. MMI high with radio	408
2. Radio. Aerial amplifier 2. Aerial amplifier 3	409

054 - MMI high with TV tuner	410-412
1. MMI high with TV tuner	410
2. Control unit for front display and information control panel, Reversing camera system control unit, TV tuner	411
3. TV tuner, Aerial amplifier 2, Aerial amplifier 3	412
055 - MMI with satellite radio	413-414
1. MMI with satellite radio	413
2. Navigation system with CD drive control unit, Radio, telephone and navigation system aerial, Telephone bracket, Satellite radio, Satellite aerial	414
056 - Radio with basic and basic plus sound system	415-423
1. Radio with basic and basic plus sound system	415
2. Radio, Telephone transmitter and receiver unit	416
3. Data bus diagnostic interface, Display unit for front information display and operating unit control unit, Radio	417
4. Radio, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range and bass loudspeaker, Front right mid-range and bass loudspeaker	418
5. Radio, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range and bass loudspeaker, Front right mid-range and bass loudspeaker	419
6. Radio, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker	420
7. Radio, Radio, telephone and navigation system aerial, Aerial amplifier 2, Aerial amplifier 3, Satellite aerial	421
8. Radio, Connection for external audio sources	422
9. Radio	423
057 - Radio with Standard sound system	424-433
1. Radio with Standard sound system	424
2. Radio, Telephone transmitter and receiver unit	425
3. Display unit for front information display and operating unit control unit, Radio	426
4. Digital sound package control unit, Data bus diagnostic interface, Radio	427
5. Digital sound package control unit, Radio, Front left treble loudspeaker, Front left mid-range and bass loudspeaker	428
6. Digital sound package control unit, Radio, Front right treble loudspeaker, Front right mid-range and bass loudspeaker, Centre mid-range and treble loudspeaker	429
7. Digital sound package control unit, Radio, Rear left treble loudspeaker, Rear right treble loudspeaker, Subwoofer in rear shelf, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker	430
8. Radio, Radio, telephone and navigation system aerial, Aerial amplifier 2, Aerial amplifier 3, Satellite aerial	431
9. Radio, Connection for external audio sources	432
10. Radio	433
058 - Radio with Bang & Olufsen sound system	434-445
1. Radio with Bang & Olufsen sound system	434
2. Radio, Telephone transmitter and receiver unit	435
3. Display unit for front information display and operating unit control unit, Radio	436
4. Digital sound package control unit, Data bus diagnostic interface, Radio	437
5. Digital sound package control unit, Radio, Microphone unit in front roof module	438
6. Digital sound package control unit, Radio, Front left treble loudspeaker, Front left bass loudspeaker, Front left mid-range loudspeaker, Centre mid-range and treble loudspeaker	439
7. Digital sound package control unit, Radio, Front right treble loudspeaker, Front right bass loudspeaker, Front right mid-range loudspeaker	440
8. Digital sound package control unit, Radio, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker	441
9. Digital sound package control unit, Radio, Rear left mid-range loudspeaker, Subwoofer in rear shelf	442
10. Radio, Radio, telephone and navigation system aerial, Aerial amplifier 2, Aerial amplifier 3, Satellite aerial	443
11. Radio, Connection for external audio sources	444
12. Radio	445
059 - Interior mirror with no humidity sender and no main beam assist	446-448
1. Interior mirror with no humidity sender and no main beam assist	446
2. Automatic anti-dazzle interior mirror	447
3. Driver door control unit, Front passenger door control unit, Automatic anti-dazzle interior mirror	448
060 - Interior mirror with humidity sender and no main beam assist	449-451
1. Interior mirror with humidity sender and no main beam assist	449
2. Humidity sender. Automatic anti-dazzle interior mirror	450

3. Driver door control unit, Front passenger door control unit, Automatic anti-dazzle interior mirror	451
061 - Interior mirror with humidity sender and main beam assist	452-454
1. Interior mirror with humidity sender and main beam assist	452
2. Humidity sender, Automatic anti-dazzle interior mirror	453
3. Driver door control unit, Front passenger door control unit, Automatic anti-dazzle interior mirror	454
062 - Tyre pressure monitor	455-456
1. Tyre pressure monitor	455
2. Tyre pressure monitor control unit	456
063 - 2.0l diesel engine , CAGA,CAGB,CAHA,CAHB,CMEA	457-480
1. 2.0l diesel engine , CAGA,CAGB,CAHA,CAHB,CMEA	457
2. Battery, Terminal 15 voltage supply relay	458
3. Battery isolation igniter, Jump start socket	459
4. Starter, Alternator, Voltage regulator, Terminal 30 wiring junction 2, Jump start socket	460
5. Fuel pump relay, Terminal 30 voltage supply relay, Engine control unit	461
6. Starter motor relay, Engine control unit, Starter motor relay 2	462
7. Automatic glow period control unit, Engine control unit	463
8. Oil level and oil temperature sender, Engine control unit, Climatronic coolant shut-off valve, Pump for exhaust gas recirculation cooler	464
9. Engine control unit, Charge pressure control solenoid valve, Heater element for crankcase breather, Left electrohydraulic engine mounting solenoid valve, Air filter bypass flap valve, Exhaust gas recirculation cooler changeover valve	465
10. Low heat output relay, High heat output relay, Engine control unit, Auxiliary air heater element	466
11. Accelerator position sender, Accelerator position sender 2, Engine control unit	467
12. Engine speed sender, Hall sender, Variable intake manifold position sender, Engine control unit, Variable intake manifold motor	468
13. Throttle valve potentiometer, Exhaust gas recirculation potentiometer, Fuel pressure sender, Engine control unit, Exhaust gas recirculation valve, Intake manifold flap motor	469
14. Charge pressure sender, Intake air temperature sender, Fuel temperature sender, Exhaust gas pressure sensor 1, Position sender for charge pressure positioner, Engine control unit	470
15. Air mass meter, Engine control unit, Fuel pressure regulating valve, Fuel metering valve	471
16. Coolant temperature sender, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine control unit	472
17. Lambda probe, Engine control unit	473
18. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	474
19. Clutch position sender, Engine control unit	475
20. Brake light switch, Engine control unit, Supplementary fuel pump	476
21. Data bus diagnostic interface, Engine control unit	477
22. Control unit in dash panel insert, Data bus diagnostic interface	478
23. Fuel gauge sender, Fuel system pressurisation pump, Control unit in dash panel insert	479
24. Oil pressure switch, Gear detector switch, Coolant shortage indicator sender, Onboard supply control unit, Servotronic solenoid valve, Air conditioner compressor regulating valve	480
064 - 2.0l petrol engine , CAEA,CAEB,CDNB,CDNC	481-502
1. 2.0l petrol engine , CAEA,CAEB,CDNB,CDNC	481
2. Battery, Terminal 15 voltage supply relay	482
3. Battery isolation igniter, Jump start socket	483
4. Starter, Alternator, Voltage regulator, Terminal 30 wiring junction 2, Jump start socket	484
5. Main relay, Engine component current supply relay	485
6. Starter motor relay, Starter motor relay 2	486
7. Charge pressure control solenoid valve, Activated charcoal filter solenoid valve 1, Left electrohydraulic engine mounting solenoid valve, Camshaft control valve 1, Turbocharger air recirculation valve, Valve for oil pressure control	487
8. Climatronic coolant shut-off valve, Continued coolant circulation pump	488
9. Actuator 1 for camshaft adjustment, Actuator 6 for camshaft adjustment, Actuator 7 for camshaft adjustment	489
10. Actuator 8 for camshaft adjustment, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	490
11. Accelerator position sender, Accelerator position sender 2	491
12. Engine speed sender, Hall sender	492
13. Fuel pressure sender, Intake manifold flap potentiometer	493
14. Oil pressure switch for reduced oil pressure, Throttle valve module	494
15. Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuel pressure regulating valve	495
16. Lambda probe. Lambda probe after catalytic converter	496

17. Clutch position sender	497
18. Brake light switch, Steering column electronics control unit	498
19. Data bus diagnostic interface	499
20. Control unit in dash panel insert, Data bus diagnostic interface	500
21. Fuel gauge sender, Fuel system pressurisation pump, Fuel gauge sender 2, Control unit in dash panel insert, Fuel pump control unit	501
22. Oil pressure switch, Coolant shortage indicator sender, Onboard supply control unit	502
065 - Lane departure warning	503-505
1. Lane departure warning	503
2. Data bus diagnostic interface, Lane departure warning control unit	504
3. Lane departure warning control unit, Windscreen heater for lane departure warning	505
066 - Lane change assist	506-509
1. Lane change assist	506
2. Lane change assist control unit	507
3. Lane change assist control unit 2	508
4. Button for lane change assist, Lane change assist warning lamp in driver side exterior mirror, Lane change assist warning lamp in front passenger side exterior mirror	509
067 - Interface for special functions	510-512
1. Interface for special functions	510
2. Convenience system central control unit, Interface control unit for vehicle location system	511
3. Brake light switch, Accelerator position sender, Engine control unit	512
068 - Active steering (dynamic steering)	513-516
1. Active steering (dynamic steering)	513
2. Active steering control unit, Electromechanical power steering motor	514
3. Lateral acceleration sender, Yaw rate sender, Longitudinal acceleration sender, ESP sensor unit, ESP sensor unit 2, ABS control unit, Active steering control unit	515
4. Control unit in dash panel insert, Active steering control unit, Steering hydraulics pump	516
069 - Communication, Japan	517-530
1. Communication, Japan	517
2. Control unit for front display and information control panel	518
3. Control unit for front display and information control panel, Display unit for front information display and operating unit control unit	519
4. Navigation system with CD drive control unit, Control unit for front display and information control panel, Display unit for front information display and operating unit control unit	520
5. Navigation system with CD drive control unit	521
6. Navigation system with CD drive control unit, Microphone unit in front roof module	522
7. Navigation system with CD drive control unit	523
8. Navigation system with CD drive control unit, Chip card reader control unit	524
9. Navigation system with CD drive control unit, Chip card reader control unit	525
10. Navigation system with CD drive control unit, Chip card reader control unit	526
11. Radio, Aerial amplifier 3	527
12. Reversing camera system control unit, TV tuner	528
13. TV tuner, TV card reader	529
14. CD changer, Connection for external audio sources	530
070 - 6-cylinder diesel engine , CCWA,CCWB,CGKA,CGKB	531-555
1. 6-cylinder diesel engine , CCWA,CCWB,CGKA,CGKB	531
2. Battery, Terminal 15 voltage supply relay	532
3. Battery isolation igniter, Jump start socket	533
4. Starter, Alternator, Voltage regulator, Terminal 30 wiring junction 2, Jump start socket	534
5. Fuel pump relay, Terminal 30 voltage supply relay, Engine control unit	535
6. Starter motor relay, Engine control unit, Starter motor relay 2	536
7. Automatic glow period control unit, Engine control unit	537
8. Oil level and oil temperature sender, Engine control unit	538
9. Throttle valve module, Engine control unit, Left electrohydraulic engine mounting solenoid valve, Right electrohydraulic engine mounting solenoid valve	539
10. Low heat output relay, Engine control unit, Auxiliary air heater element	540
11. Engine speed sender, Hall sender, Fuel pressure sender, Engine control unit	541
12. Accelerator position sender, Accelerator position sender 2, Engine control unit	542
13. Exhaust gas pressure sensor 1, Engine control unit, Intake manifold flap motor, Intake manifold flap 2 motor	543
14. Engine control unit, Turbocharger 1 control unit, Exhaust gas recirculation control motor	544
15. Charge pressure sender, Intake air temperature sender, Engine control unit	545
16. Air mass meter, Engine control unit	546
17. Oil pressure switch for reduced oil pressure, Coolant temperature sender, Engine control unit	547
18. Lambda probe, Engine control unit	548
19. Engine control unit. Iniector. cvlinder 1. Iniector. cvlinder 6	549

20. Clutch position sender, Engine control unit	550
21. Brake light switch, Engine control unit, Supplementary fuel pump	551
22. Engine control unit	552
23. Control unit in dash panel insert, Data bus diagnostic interface	553
24. Fuel gauge sender, Fuel system pressurisation pump, Fuel gauge sender 2, Control unit in dash panel insert	554
25. Gear detector switch, Onboard supply control unit, Air conditioner compressor regulating valve	555
071 - Preparation for mobile telephone (infotainment CAN bus)	556-560
1. Preparation for mobile telephone (infotainment CAN bus)	556
2. Radio, telephone and navigation system aerial, Remote control receiver for auxiliary heater, Telephone aerial, Aerial amplifier for mobile telephone, Auxiliary heater aerial	557
3. Telephone transmitter and receiver unit, Aerial amplifier for mobile telephone, Aerial for Bluetooth	558
4. Radio, Telephone transmitter and receiver unit, Front left microphone, Microphone unit in front roof module	559
5. Telephone transmitter and receiver unit, Telephone bracket	560
072 - Adaptive cruise control	561-562
1. Adaptive cruise control	561
2. Adaptive cruise control unit	562
073 - Preparation for mobile telephone (MOST bus)	563-566
1. Preparation for mobile telephone (MOST bus)	563
2. Radio, telephone and navigation system aerial, Remote control receiver for auxiliary heater, Aerial amplifier for mobile telephone, Auxiliary heater aerial	564
3. Control unit for front display and information control panel, Aerial amplifier for mobile telephone, Telephone bracket	565
4. Control unit for front display and information control panel, Data bus diagnostic interface, Telephone microphone, Aerial for Bluetooth, Microphone unit in front roof module, Voice command microphone	566
074 - MMI with radio and basic sound system	567-572
1. MMI with radio and basic sound system	567
2. Radio	568
3. Radio, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range and bass loudspeaker, Front right mid-range and bass loudspeaker	569
4. Radio, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker	570
5. Convenience system central control unit, Radio, Central locking and anti-theft alarm system aerial, TV tuner, Aerial amplifier 3	571
6. Control unit 1 for information electronics, Radio, GPS aerial, Radio, telephone and navigation system aerial, Remote control receiver for auxiliary heater, Telephone aerial, TV tuner, Aerial amplifier 2, Satellite aerial, Auxiliary heater aerial, Digital radio aerial	572
075 - MMI with radio and Standard sound system	573-579
1. MMI with radio and Standard sound system	573
2. Radio	574
3. Radio, Front left treble loudspeaker, Front left mid-range and bass loudspeaker, Centre mid-range and treble loudspeaker	575
4. Radio, Front right treble loudspeaker, Front right mid-range and bass loudspeaker	576
5. Radio, Rear left treble loudspeaker, Rear right treble loudspeaker, Subwoofer in rear shelf, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker	577
6. Radio, Central locking and anti-theft alarm system aerial, Aerial amplifier 3	578
7. Radio, GPS aerial, Radio, telephone and navigation system aerial, Telephone aerial, Aerial amplifier 2, Satellite aerial, Auxiliary heater aerial, Digital radio aerial	579
076 - MMI with radio and Bang & Olufsen sound system	580-588
1. MMI with radio and Bang & Olufsen sound system	580
2. Radio	581
3. Convenience system central control unit, Radio, Central locking and anti-theft alarm system aerial, TV tuner, Aerial amplifier 3	582
4. Control unit 1 for information electronics, Radio, GPS aerial, Radio, telephone and navigation system aerial, Remote control receiver for auxiliary heater, Telephone aerial, TV tuner, Aerial amplifier 2, Satellite aerial, Auxiliary heater aerial	583
5. Digital sound package control unit, Internal microphone, Front left microphone, Front right microphone, Microphone unit in front roof module	584
6. Digital sound package control unit, Front left treble loudspeaker, Front left bass loudspeaker, Front left mid-range loudspeaker	585
7. Digital sound package control unit, Front right treble loudspeaker, Front right bass loudspeaker, Front right mid-range loudspeaker, Centre mid-range and treble loudspeaker	586
8. Digital sound package control unit. Rear left treble loudspeaker. Rear right treble loudspeaker.	587

Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker	
9. Digital sound package control unit, Rear left mid-range loudspeaker, Rear right mid-range loudspeaker, Subwoofer in rear shelf	588
077 - MMI (information electronics 1)	589-598
1. MMI (information electronics 1)	589
2. Control unit 1 for information electronics	590
3. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	591
4. Multimedia system operating unit, Reversing camera system control unit, Control unit 1 for information electronics, TV tuner	592
5. Control unit 1 for information electronics, Connection for external audio sources	593
6. Control unit 1 for information electronics, Connection for external audio sources	594
7. Control unit 1 for information electronics, Central locking and anti-theft alarm system aerial, Aerial amplifier 3	595
8. Control unit 1 for information electronics, GPS aerial, Radio, telephone and navigation system aerial, Telephone aerial, Aerial amplifier 2, Satellite aerial, Auxiliary heater aerial, Digital radio aerial	596
9. Chip card reader control unit, Control unit 1 for information electronics, Traffic data aerial	597
10. Chip card reader control unit, Control unit 1 for information electronics, Traffic data aerial	598
078 - TV tuner (MOST bus)	599-603
1. TV tuner (MOST bus)	599
2. Reversing camera system control unit, Control unit 1 for information electronics, TV tuner	600
3. Convenience system central control unit, Radio, Central locking and anti-theft alarm system aerial, TV tuner, Aerial amplifier 3	601
4. Control unit 1 for information electronics, Radio, GPS aerial, Radio, telephone and navigation system aerial, Remote control receiver for auxiliary heater, TV tuner, Satellite aerial, Auxiliary heater aerial	602
5. Radio, TV tuner, Aerial amplifier 2, Digital radio aerial, TV card reader	603
079 - Preparation for mobile telephone (MOST bus) - USA	604-607
1. Preparation for mobile telephone (MOST bus) - USA	604
2. Control unit 1 for information electronics, Microphone unit in front roof module	605
3. Control unit 1 for information electronics	606
4. Control unit 1 for information electronics, GPS aerial, Radio, telephone and navigation system aerial, Telephone aerial, Telephone bracket, Satellite aerial	607
080 - Preparation for mobile telephone (MOST bus)	608-612
1. Preparation for mobile telephone (MOST bus)	608
2. Central locking and anti-theft alarm system aerial, TV tuner, Aerial amplifier for mobile telephone, Aerial amplifier 3	609
3. GPS aerial, Radio, telephone and navigation system aerial, Remote control receiver for auxiliary heater, Telephone aerial, TV tuner, Aerial amplifier for mobile telephone, Aerial amplifier 2, Satellite aerial, Auxiliary heater aerial, Digital radio aerial	610
4. Control unit 1 for information electronics, Aerial amplifier for mobile telephone, Telephone bracket	611
5. Data bus diagnostic interface, Control unit 1 for information electronics, Aerial for Bluetooth, Microphone unit in front roof module	612
081 - Bluetooth car phone (MOST bus)	613-617
1. Bluetooth car phone (MOST bus)	613
2. Control unit 1 for information electronics, Front left microphone, Front right microphone, Aerial for Bluetooth, Microphone unit in front roof module	614
3. Convenience system central control unit, Control unit 1 for information electronics, Radio, Central locking and anti-theft alarm system aerial, TV tuner, Aerial amplifier 3	615
4. Control unit 1 for information electronics, Radio, Radio, telephone and navigation system aerial, Remote control receiver for auxiliary heater, Telephone aerial, TV tuner, Aerial amplifier 2, Satellite aerial, Auxiliary heater aerial, Digital radio aerial	616
5. Onboard supply control unit, Control unit 1 for information electronics, Telephone bracket	617
082 - Preparation for mobile telephone with no hands-free system (MOST bus)	618-620
1. Preparation for mobile telephone with no hands-free system (MOST bus)	618
2. Microphone unit in front roof module	619
3. Control unit 1 for information electronics, GPS aerial, Radio, telephone and navigation system aerial, Telephone aerial, Satellite aerial, Auxiliary heater aerial	620
083 - Ring circuit break diagnostic	621-622
1. Ring circuit break diagnostic	621
2. Digital sound package control unit, Data bus diagnostic interface, Control unit 1 for information electronics, Radio, CD changer, TV tuner, DVD changer	622
084 - Infotainment MOST bus	623-624
1. Infotainment MOST bus	623

2. Digital sound package control unit, Data bus diagnostic interface, Control unit 1 for information electronics, Radio, CD changer, TV tuner, DVD changer	624
085 - CD/DVD changer (MOST bus)	625-626
1. CD/DVD changer (MOST bus)	625
2. CD changer, DVD changer	626
086 - 7-speed dual clutch gearbox 0B5 (S tronic)	627-633
1. 7-speed dual clutch gearbox 0B5 (S tronic)	627
2. Automatic gearbox control unit, Mechatronic unit for dual clutch gearbox	628
3. Automatic gearbox control unit, Mechatronic unit for dual clutch gearbox, Cooling oil valve, Main pressure valve	629
4. Clutch temperature sender, Gearbox input speed sender 3, Automatic gearbox control unit, Mechatronic unit for dual clutch gearbox	630
5. Gearbox input speed sender 2, Gearbox input speed sender 1, Gear sensor, Gearbox oil temperature sender 2, Automatic gearbox control unit, Mechatronic unit for dual clutch gearbox	631
6. Automatic gearbox hydraulic pressure sender 1, Temperature sender in control unit, Automatic gearbox control unit, Mechatronic unit for dual clutch gearbox	632
7. Gear selector position P switch, Automatic gearbox control unit, Selector lever sensors control unit, Mechatronic unit for dual clutch gearbox	633
087 - 4.2l petrol engine , CAUA	634-662
1. 4.2l petrol engine , CAUA	634
2. Battery, Terminal 15 voltage supply relay, Battery monitor control unit	635
3. Battery isolation igniter, Jump start socket	636
4. Starter, Alternator, Voltage regulator, Terminal 30 wiring junction 2, Jump start socket	637
5. Main relay, Engine control unit, Engine component current supply relay	638
6. Starter motor relay, Engine control unit, Starter motor relay 2	639
7. Engine control unit	640
8. Engine control unit, Activated charcoal filter solenoid valve 1, Left electrohydraulic engine mounting solenoid valve, Fuel metering valve, Variable intake manifold changeover valve, Fuel metering valve 2, Fuel system diagnostic pump	641
9. Air mass meter, Secondary air pump relay, Engine control unit, Right electrohydraulic engine mounting solenoid valve, Secondary air pump motor	642
10. Additional coolant pump relay, Engine control unit, Camshaft control valve 1, Camshaft control valve 2, Exhaust camshaft control valve 1, Exhaust camshaft control valve 2, Continued coolant circulation pump	643
11. Map-controlled engine cooling system thermostat, Engine control unit, Intake manifold flap valve, Intake manifold flap motor, Variable intake manifold motor	644
12. Oil level and oil temperature sender, Brake servo relay, Engine control unit, Vacuum pump for brakes	645
13. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	646
14. Engine control unit, Ignition coil 5 with output stage, Ignition coil 6 with output stage, Ignition coil 7 with output stage, Ignition coil 8 with output stage	647
15. Knock sensor 1, Knock sensor 2, Knock sensor 3, Throttle valve module, Engine control unit	648
16. Engine speed sender, Hall sender, Knock sensor 4, Hall sender 3, Engine control unit	649
17. Coolant temperature sender, Fuel pressure sender, Intake manifold flap potentiometer, Intake manifold flap potentiometer 2, Engine control unit	650
18. Accelerator position sender, Engine control unit	651
19. Hall sender 2, Brake servo pressure sensor, Hall sender 4, Fuel pressure sender for low-pressure, Engine control unit	652
20. Lambda probe, Lambda probe 2, Engine control unit	653
21. Lambda probe after catalytic converter, Lambda probe 2 after catalytic converter, Engine control unit	654
22. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 6, Injector, cylinder 8	655
23. Engine control unit, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5, Injector, cylinder 7	656
24. Clutch position sender, Engine control unit	657
25. Brake light switch, Engine control unit	658
26. Automatic gearbox control unit, Data bus diagnostic interface, Engine control unit	659
27. Control unit in dash panel insert, Data bus diagnostic interface	660
28. Fuel gauge sender, Fuel system pressurisation pump, Fuel gauge sender 2, Control unit in dash panel insert, Fuel pump control unit	661
29. Oil pressure switch, Gear detector switch, Coolant shortage indicator sender, Onboard supply control unit, Servotronic solenoid valve, Air conditioner compressor regulating valve	662
088 - Rear final drive - sport differential	663-669
1. Rear final drive - sport differential	663

2. All-wheel drive control unit	664
3. ABS control unit, All-wheel drive control unit	665
4. ESP sensor unit, ESP sensor unit 2, All-wheel drive control unit, Active steering control unit	666
5. Oil pressure and oil temperature sender, Oil pressure and oil temperature sender 2, All-wheel drive control unit	667
6. All-wheel drive control unit, Clutch valve for all-wheel drive, Clutch valve 2 for all-wheel drive, All-wheel drive pump	668
7. All-wheel drive control unit, Connection 2 (running gear/dash panel insert CAN bus, high), in main wiring harness, Connection 2 (running gear/dash panel insert CAN bus, low), in main wiring harness	669
089 - Tail light cluster with LED, 2-door vehicle	670-672
1. Tail light cluster with LED, 2-door vehicle	670
2. Left brake and tail light bulb	671
3. Right brake and tail light bulb	672
090 - Fuse assignment	673-707
1. Fuse assignment	673
2. Battery, Battery monitor control unit, Fuse 1 in fuse holder A	674
3. Fuse 2 in fuse holder A, Fuse 3 in fuse holder A	675
4. Battery isolation igniter, Terminal 30 wiring junction 2, Jump start socket	676
5. Starter, Alternator, Terminal 30 wiring junction 2, Jump start socket	677
6. Starter motor relay, Starter motor relay 2	678
7. Fuse 1 on fuse holder B, Fuse carrier 1, Fuse 6 on fuse holder B	679
8. Fuse carrier 1, Fuse 7 on fuse holder B, Fuse 12 on fuse holder B	680
9. Fuse carrier 1, Fuse 13 on fuse holder B, Fuse 17 on fuse holder B	681
10. Fuse holder C, Fuse carrier 1	682
11. Fuse holder C, Fuse carrier 1	683
12. Fuse holder C, Fuse carrier 1	684
13. Fuse holder C, Fuse carrier 1	685
14. Fuse holder C, Fuse carrier 2	686
15. Fuse holder C, Fuse carrier 2	687
16. Fuse holder C, Fuse carrier 2	688
17. Fuse carrier 3, Fuse holder C	689
18. Fuse holder C, Fuse carrier 3	690
19. Fuse holder D, Fuse carrier 1	691
20. Fuse holder D, Fuse carrier 1	692
21. Fuse holder D, Fuse carrier 2	693
22. Fuse holder D, Fuse carrier 2	694
23. Fuse holder D, Fuse carrier 2	695
24. Fuse holder F, Fuse carrier 1	696
25. Fuse holder F, Fuse carrier 2	697
26. Fuse holder F, Fuse carrier 2	698
27. Fuse holder F, Fuse carrier 3	699
28. Fuse holder F, Fuse carrier 3	700
29. Fuse holder F, Fuse carrier 3	701
30. Fuse holder F, Fuse carrier 4	702
31. Fuse holder F, Fuse carrier 4	703
32. Fuse holder F, Fuse carrier 4	704
33. Fuse holder F, Fuse carrier 5	705
34. Fuse holder F, Fuse carrier 5	706
35. Fuse holder F, Fuse carrier 5	707
091 - Start/stop system	708-711
1. Start/stop system	708
2. Voltage stabiliser	709
3. Relay for automatic anti-dazzle interior mirror	710
4. Start/Stop operation button	711
092 - 2.0l petrol engine with start/stop system , CDNB,CDNC	712-736
1. 2.0l petrol engine with start/stop system , CDNB,CDNC	712
2. Battery, Terminal 15 voltage supply relay	713
3. Battery isolation igniter, Terminal 30 wiring junction 2, Jump start socket	714
4. Starter, Alternator, Voltage regulator, Jump start socket	715
5. Main relay, Engine component current supply relay	716
6. Starter motor relay, Starter motor relay 2, Fuse carrier 1	717
7. Oil level and oil temperature sender, Fuse carrier 1	718
8. Charge pressure control solenoid valve, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve	719
9. Left electrohydraulic engine mounting solenoid valve. Right electrohydraulic engine mounting	720

	solenoid valve, Climatronic coolant shut-off valve, Valve for oil pressure control	
	10. Actuator 1 for camshaft adjustment, Continued coolant circulation pump	721
	11. Actuator 6 for camshaft adjustment, Actuator 7 for camshaft adjustment, Actuator 8 for camshaft adjustment, Gear detection sensor	722
	12. Ignition coil 1 with output stage, Ignition coil 2 with output stage	723
	13. Ignition coil 3 with output stage, Ignition coil 4 with output stage	724
	14. Engine speed sender, Hall sender, Accelerator position sender, Accelerator position sender 2	725
	15. Fuel pressure sender, Throttle valve module	726
	16. Oil pressure switch for reduced oil pressure, Intake manifold flap potentiometer	727
	17. Air mass meter, Fuel pressure regulating valve	728
	18. Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	729
	19. Lambda probe, Lambda probe after catalytic converter	730
	20. Clutch position sender	731
	21. Brake light switch, Steering column electronics control unit	732
	22. Data bus diagnostic interface	733
	23. Control unit in dash panel insert, Data bus diagnostic interface	734
	24. Fuel gauge sender, Fuel system pressurisation pump, Control unit in dash panel insert, Fuel pump control unit	735
	25. Oil pressure switch, Coolant shortage indicator sender, Onboard supply control unit	736
093 -	2.0l diesel engine with start/stop system , CAGA,CAGB,CAHA,CAHB	737-760
	1. 2.0l diesel engine with start/stop system , CAGA,CAGB,CAHA,CAHB	737
	2. Battery, Terminal 15 voltage supply relay	738
	3. Battery isolation igniter, Jump start socket	739
	4. Starter, Alternator, Voltage regulator, Terminal 30 wiring junction 2, Jump start socket	740
	5. Fuel pump relay, Terminal 30 voltage supply relay, Engine control unit	741
	6. Starter motor relay, Engine control unit, Starter motor relay 2	742
	7. Automatic glow period control unit, Engine control unit	743
	8. Oil level and oil temperature sender, Engine control unit, Climatronic coolant shut-off valve, Pump for exhaust gas recirculation cooler	744
	9. Engine control unit, Charge pressure control solenoid valve, Heater element for crankcase breather, Left electrohydraulic engine mounting solenoid valve, Right electrohydraulic engine mounting solenoid valve, Air filter bypass flap valve, Exhaust gas recirculation cooler changeover valve, Coolant circulation pump	745
	10. Low heat output relay, High heat output relay, Engine control unit, Auxiliary air heater element	746
	11. Accelerator position sender, Accelerator position sender 2, Engine control unit	747
	12. Engine speed sender, Hall sender, Brake servo pressure sensor, Variable intake manifold position sender, Engine control unit, Variable intake manifold motor	748
	13. Throttle valve potentiometer, Exhaust gas recirculation potentiometer, Fuel pressure sender, Engine control unit, Exhaust gas recirculation valve, Intake manifold flap motor	749
	14. Charge pressure sender, Intake air temperature sender, Fuel temperature sender, Exhaust gas pressure sensor 1, Position sender for charge pressure positioner, Gearbox neutral position sender, Engine control unit	750
	15. Air mass meter, Engine control unit, Fuel pressure regulating valve, Fuel metering valve	751
	16. Coolant temperature sender, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine control unit	752
	17. Lambda probe, Engine control unit	753
	18. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	754
	19. Clutch position sender, Engine control unit	755
	20. Brake light switch, Engine control unit, Supplementary fuel pump	756
	21. Data bus diagnostic interface, Engine control unit	757
	22. Control unit in dash panel insert, Data bus diagnostic interface	758
	23. Fuel gauge sender, Fuel system pressurisation pump, Control unit in dash panel insert	759
	24. Oil pressure switch, Gear detector switch, Coolant shortage indicator sender, Onboard supply control unit, Servotronic solenoid valve, Air conditioner compressor regulating valve	760
094 -	Rear lid and tail lights, 5-door vehicle	761-765
	1. Rear lid and tail lights, 5-door vehicle	761
	2. Convenience system central control unit, Left tail light, Left tail light 2, Luggage compartment light on left	762
	3. Convenience system central control unit, Right tail light, Right tail light 2, Right luggage compartment light, Surround lighting 1 in rear lid	763
	4. Contact switch in lock cylinder for rear lid, anti-theft alarm system and central locking system, Release button for rear lid lock cylinder, Convenience system central control unit, Additional brake light bulb, Left number plate light, Right number plate light	764
	5. Glass breakage sensor for rear window, Convenience system central control unit, Heated rear window	765

095 - Tail light cluster with LED, 5-door vehicle	766-768
1. Tail light cluster with LED, 5-door vehicle	766
2. Convenience system central control unit	767
3. Convenience system central control unit	768
096 - Electric sliding sunroof	769-770
1. Electric sliding sunroof	769
2. Sliding sunroof adjustment regulator, Sliding sunroof adjustment control unit, Convenience system central control unit, Sliding sunroof motor	770
097 - Aerials, 5-door vehicle	771-775
1. Aerials, 5-door vehicle	771
2. GPS aerial, Telephone aerial, Auxiliary heater aerial, Roof aerial	772
3. Aerial, Aerial amplifier, TV aerial 1, Aerial amplifier 4	773
4. TV aerial 2, Aerial amplifier 3	774
5. Central locking and anti-theft alarm system aerial, Radio aerial 2, Aerial amplifier 2, Aerial amplifier 3, Digital radio aerial	775
098 - Adjustable driver and front passenger seats, 5-door vehicle	776-784
1. Adjustable driver and front passenger seats, 5-door vehicle	776
2. Driver seat adjustment thermal fuse 1, Rear left footwell light	777
3. Driver seat lumbar support adjustment switch, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor	778
4. Driver seat rake adjustment switch, Driver seat longitudinal adjustment switch, Driver seat longitudinal adjustment motor, Driver seat rake adjustment motor	779
5. Driver seat backrest adjustment switch, Driver seat height adjustment switch, Driver seat backrest adjustment motor, Driver seat height adjustment motor	780
6. Front passenger seat adjustment thermal fuse 1, Rear right footwell light	781
7. Front passenger seat lumbar support adjustment switch, Front passenger seat lumbar support longitudinal adjustment motor, Front passenger seat lumbar support height adjustment motor	782
8. Front passenger seat longitudinal adjustment switch, Front passenger seat rake adjustment button, Front passenger seat longitudinal adjustment motor, Front passenger seat rake adjustment motor	783
9. Front passenger seat backrest adjustment switch, Front passenger seat height adjustment switch, Front passenger seat backrest adjustment motor, Front passenger seat height adjustment motor	784
099 - Adjustable driver seat with memory function, seat ventilation and seat heating, 5-door vehicle	785-792
1. Adjustable driver seat with memory function, seat ventilation and seat heating, 5-door vehicle	785
2. Seat and steering column adjustment control unit with memory, Driver seat adjustment thermal fuse 1, Rear left footwell light	786
3. Longitudinal adjustment sender for driver seat, Height adjustment sender for driver seat, Rake adjustment sender for driver seat, Seat and steering column adjustment control unit with memory, Driver seat longitudinal adjustment motor, Driver seat rake adjustment motor, Driver seat height adjustment motor	787
4. Head restraint height adjustment sender for driver seat, Backrest adjustment sender for driver seat, Seat and steering column adjustment control unit with memory, Driver seat backrest adjustment motor, Driver seat head restraint adjustment motor	788
5. Front left seat temperature sender, Seat and steering column adjustment control unit with memory, Heated seat cushion for driver seat, Heated backrest for driver seat, Driver seat cushion lateral support heater, Driver seat backrest lateral support heater	789
6. Seat and steering column adjustment control unit with memory, Driver seat backrest fan, Driver seat cushion fan, Driver seat backrest fan 2, Driver seat cushion fan 2	790
7. Driver seat lumbar support adjustment switch, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor	791
8. Driver seat memory operating unit, Driver door control unit	792
100 - Ventilated seat with seat heating, 5-door vehicle	793-797
1. Ventilated seat with seat heating, 5-door vehicle	793
2. Front left seat temperature sender, Control unit for front left seat ventilation, Fuse carrier 2, Fuse 5 on fuse holder C, Heated seat cushion for driver seat, Heated backrest for driver seat, Driver seat cushion lateral support heater, Driver seat backrest lateral support heater	794
3. Control unit for front left seat ventilation, Driver seat backrest fan, Driver seat cushion fan, Driver seat backrest fan 2, Driver seat cushion fan 2	795
4. Front right seat temperature sender, Control unit for front right seat ventilation, Heated seat cushion for front passenger seat, Front passenger seat lateral support heater, Front passenger seat backrest lateral support heater	796
5. Control unit for front right seat ventilation, Front passenger seat backrest fan, Front passenger seat cushion fan, Front passenger seat backrest fan 2, Front passenger seat cushion fan 2	797
101 - 4.2l petrol engine , CFSA	798-826
1. 4.2l petrol engine , CFSA	798
2. Batterv. Terminal 15 voltage supply relay	799

3. Battery isolation igniter, Jump start socket	800
4. Starter, Alternator, Voltage regulator, Terminal 30 wiring junction 2, Jump start socket	801
5. Main relay, Engine control unit, Engine component current supply relay	802
6. Starter motor relay, Engine control unit, Starter motor relay 2	803
7. Map-controlled engine cooling system thermostat, Engine control unit, Activated charcoal filter solenoid valve 1, Left electrohydraulic engine mounting solenoid valve, Right electrohydraulic engine mounting solenoid valve, Valve for oil pressure control	804
8. Secondary air pump relay, Secondary air pump 2 relay, Engine control unit, Secondary air inlet valve, Intake manifold flap valve, Coolant circulation pump, Secondary air pump motor, Secondary air pump motor 2	805
9. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	806
10. Engine control unit, Ignition coil 5 with output stage, Ignition coil 6 with output stage, Ignition coil 7 with output stage, Ignition coil 8 with output stage	807
11. Knock sensor 1, Knock sensor 2, Knock sensor 3, Throttle valve module, Engine control unit	808
12. Hall sender, Knock sensor 4, Throttle valve module 2, Engine control unit	809
13. Intake manifold flap potentiometer, Intake manifold flap potentiometer 2, Engine control unit	810
14. Engine speed sender, Hall sender 3, Engine control unit	811
15. Intake air temperature sender, Fuel pressure sender, Engine control unit	812
16. Engine control unit, Camshaft control valve 1, Exhaust flap valve, Exhaust camshaft control valve 1	813
17. Lambda probe, Lambda probe 2, Engine control unit	814
18. Lambda probe after catalytic converter, Lambda probe 2 after catalytic converter, Engine control unit	815
19. Accelerator position sender, Engine control unit	816
20. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 6, Injector, cylinder 8	817
21. Engine control unit, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5, Injector, cylinder 7	818
22. Engine control unit, Fuel metering valve, Fuel metering valve 2	819
23. Oil level and oil temperature sender, Engine control unit, Vacuum pump for brakes	820
24. Oil pressure switch for reduced oil pressure, Oil temperature sender, Engine control unit	821
25. Brake light switch, Engine control unit, Fuel system diagnostic pump	822
26. Data bus diagnostic interface, Engine control unit, Mechatronic unit for dual clutch gearbox	823
27. Control unit in dash panel insert, Data bus diagnostic interface	824
28. Fuel gauge sender, Fuel system pressurisation pump, Control unit in dash panel insert, Fuel pump control unit	825
29. Oil pressure switch, Coolant shortage indicator sender, Onboard supply control unit	826
102 - Electrically adjustable rear spoiler	827-829
1. Electrically adjustable rear spoiler	827
2. Rear spoiler adjustment limit switch 1, Rear spoiler adjustment limit switch 2, Adjustable rear spoiler control unit, Adjustable rear spoiler motor	828
3. Adjustable rear spoiler switch, Adjustable rear spoiler control unit	829
103 - 3.0l petrol engine , CAKA	830-854
1. 3.0l petrol engine , CAKA	830
2. Battery, Terminal 15 voltage supply relay	831
3. Battery isolation igniter, Jump start socket	832
4. Starter, Alternator, Voltage regulator, Terminal 30 wiring junction 2, Jump start socket	833
5. Main relay, Engine component current supply relay	834
6. Starter motor relay, Starter motor relay 2	835
7. Left electrohydraulic engine mounting solenoid valve, Camshaft control valve 1, Camshaft control valve 2, Climatronic coolant shut-off valve, Continued coolant circulation pump	836
8. Intake manifold flap potentiometer, Intake manifold flap potentiometer 2, Right electrohydraulic engine mounting solenoid valve	837
9. Activated charcoal filter solenoid valve 1, Secondary air inlet valve, Valve for oil pressure control	838
10. Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Secondary air inlet valve 2	839
11. Ignition coil 4 with output stage, Ignition coil 5 with output stage, Ignition coil 6 with output stage	840
12. Oil pressure switch for reduced oil pressure, Knock sensor 1, Knock sensor 2	841
13. Accelerator position sender, Accelerator position sender 2	842
14. Engine speed sender, Coolant temperature sender, Fuel pressure sender, Throttle valve module	843
15. Hall sender, Hall sender 2, Intake manifold temperature sender 2	844
16. Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5. Iniection. cvlinder 6	845

17. Lambda probe, Lambda probe 2	846
18. Lambda probe after catalytic converter, Lambda probe 2 after catalytic converter	847
19. Clutch position sender	848
20. Brake light switch, Oil level and oil temperature sender, Steering column electronics control unit	849
21. Data bus diagnostic interface	850
22. Control unit in dash panel insert, Data bus diagnostic interface	851
23. Fuel gauge sender, Fuel system pressurisation pump, Control unit in dash panel insert, Fuel pump control unit	852
24. Oil pressure switch, Coolant shortage indicator sender, Onboard supply control unit	853
25. Coolant circulation pump	854
104 - Preparation for multimedia system	855-856
1. Preparation for multimedia system	855
2. 2-pin connector	856
105 - Dynamic Ride Control	857-860
1. Dynamic Ride Control	857
2. Electronically controlled damping control unit	858
3. Electronically controlled damping control unit, Front left shock absorber damping adjustment valve, Front right shock absorber damping adjustment valve	859
4. Electronically controlled damping control unit, Rear left shock absorber damping adjustment valve, Rear right shock absorber damping adjustment valve	860
106 - 8-speed automatic gearbox 0BK/0BL	861-865
1. 8-speed automatic gearbox 0BK/0BL	861
2. Gearbox oil temperature sender, Gearbox input speed sender, Gearbox output speed sender, Gear sensor, Automatic gearbox control unit	862
3. Automatic gearbox control unit	863
4. Automatic gearbox control unit, Onboard supply control unit, Selector lever sensors control unit, Solenoid valve 1, Automatic gearbox pressure regulating valve 1, Automatic gearbox pressure regulating valve 2, Automatic gearbox pressure regulating valve 3, Automatic gearbox pressure regulating valve 4, Automatic gearbox pressure regulating valve 5, Automatic gearbox pressure regulating valve 6, Automatic gearbox pressure regulating valve 7	864
5. Gear selector position P switch, Automatic gearbox control unit, Selector lever sensors control unit, Selector lever lock solenoid	865
107 - Fuse assignment	866-901
1. Fuse assignment	866
2. Battery, Battery monitor control unit, Fuse holder A	867
3. ABS control unit fuse 1, Fuse holder A	868
4. Battery isolation igniter, Engine glow plug strip fuse, Auxiliary heater fuse, Auxiliary heater fuse 2, Fuse holder A, Terminal 30 wiring junction 2	869
5. Starter, Alternator, Terminal 30 wiring junction 2	870
6. Starter motor relay, Starter motor relay 2	871
7. Fuse holder B, Fuse carrier 1	872
8. Fuse carrier 1	873
9. Fuse carrier 1	874
10. Fuse carrier 1	875
11. Fuse carrier 1	876
12. Fuse holder C, Fuse carrier 1	877
13. Fuse carrier 1	878
14. Fuse carrier 1	879
15. Fuse carrier 1	880
16. Fuse holder C, Fuse carrier 2	881
17. Horn relay, Fuse carrier 2	882
18. Fuse carrier 2	883
19. Fuse carrier 3, Driver seat adjustment thermal fuse 1, Front passenger seat adjustment thermal fuse 1, Fuse holder C	884
20. Fuse carrier 3	885
21. Fuse holder D, Fuse carrier 1	886
22. Fuse carrier 1	887
23. Fuse holder D, Fuse carrier 2	888
24. Fuse carrier 2	889
25. Fuse holder F, Fuse carrier 1	890
26. Fuse holder F, Fuse carrier 2	891
27. Fuse carrier 2	892
28. Fuse holder F, Fuse carrier 3	893
29. Fuse carrier 3	894
30. Fuse carrier 3	895

31. Fuse holder F, Fuse carrier 4	896
32. Fuse carrier 4	897
33. Voltage stabiliser, Relay for automatic anti-dazzle interior mirror, Fuse holder F, Fuse carrier 5	898
34. Fuse carrier 5	899
35. Fuse carrier 5	900
36. Relay for power sockets	901
108 - 1.8l petrol engine , CJEB,CJED,CJEE	902-925
1. 1.8l petrol engine , CJEB,CJED,CJEE	902
2. Battery, Terminal 15 voltage supply relay	903
3. Battery isolation igniter, Terminal 30 wiring junction 2	904
4. Starter, Alternator, Voltage regulator, Terminal 30 wiring junction 2, Jump start socket	905
5. Main relay, Engine component current supply relay	906
6. Starter motor relay, Starter motor relay 2	907
7. Activated charcoal filter solenoid valve 1, Left electrohydraulic engine mounting solenoid valve, Right electrohydraulic engine mounting solenoid valve, Camshaft control valve 1, Turbocharger air recirculation valve, Exhaust camshaft control valve 1	908
8. Actuator 1 for camshaft adjustment, Valve for oil pressure control, Piston cooling jet control valve	909
9. Actuator 6 for camshaft adjustment, Actuator 7 for camshaft adjustment, Actuator 8 for camshaft adjustment	910
10. Oil pressure switch, Oil pressure switch for reduced oil pressure, Coolant temperature sender, Radiator outlet coolant temperature sender	911
11. Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	912
12. Accelerator position sender, Accelerator position sender 2	913
13. Hall sender, Fuel pressure sender	914
14. Engine speed sender, Throttle valve module	915
15. Intake manifold flap potentiometer	916
16. Gear detection sensor, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	917
17. Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4	918
18. Lambda probe, Lambda probe after catalytic converter, Fuel metering valve	919
19. Clutch position sender	920
20. Brake light switch, Steering column electronics control unit	921
21. Data bus diagnostic interface	922
22. Control unit in dash panel insert, Data bus diagnostic interface	923
23. Control unit in dash panel insert, Fuel pump control unit	924
24. Coolant shortage indicator sender, Onboard supply control unit	925
109 - 2.0l diesel engine , CGLC,CGLD,CJCA,CJCB,CJCC,CMFA	926-954
1. 2.0l diesel engine , CGLC,CGLD,CJCA,CJCB,CJCC,CMFA	926
2. Battery, Terminal 15 voltage supply relay	927
3. Battery isolation igniter, Terminal 30 wiring junction 2	928
4. Starter, Alternator, Voltage regulator, Terminal 30 wiring junction 2, Jump start socket	929
5. Terminal 30 voltage supply relay, Engine/motor control unit	930
6. Starter motor relay, Engine/motor control unit, Starter motor relay 2	931
7. Automatic glow period control unit, Engine/motor control unit	932
8. Oil level and oil temperature sender, Engine/motor control unit, Climatronic coolant shut-off valve, Coolant circulation pump, Pump for exhaust gas recirculation cooler	933
9. Engine/motor control unit, Charge pressure control solenoid valve, Heater element for crankcase breather, Left electrohydraulic engine mounting solenoid valve, Air filter bypass flap valve, Exhaust gas recirculation cooler changeover valve	934
10. Low heat output relay, High heat output relay, Engine/motor control unit, Auxiliary air heater element	935
11. Accelerator position sender, Accelerator position sender 2, Engine/motor control unit	936
12. Engine speed sender, Hall sender, Fuel pressure sender, Brake servo pressure sensor, Engine/motor control unit	937
13. Throttle valve potentiometer, Fuel temperature sender, Exhaust gas recirculation potentiometer, Position sender for charge pressure positioner, Throttle valve module, Engine/motor control unit, Exhaust gas recirculation control motor	938
14. Charge pressure sender, Intake air temperature sender, Pressure differential sender, Gear detection sensor, Engine/motor control unit	939
15. Air mass meter, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve	940
16. Coolant temperature sender, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	941

17. Lambda probe, Engine/motor control unit	942
18. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	943
19. NOx sender 2, Engine/motor control unit, Control unit for NOx sender 2	944
20. Engine/motor control unit, Pump for reducing agent	945
21. Engine/motor control unit, Control unit for reducing agent metering system	946
22. Engine/motor control unit, Control unit for reducing agent metering system, Heater for reducing agent tank (heater circuit 1), Heater for reducing agent line (heater circuit 2)	947
23. Tank sender for reducing agent, Temperature sender for reducing agent, Engine/motor control unit, Control unit for reducing agent metering system	948
24. Clutch position sender, Engine/motor control unit	949
25. Brake light switch, Oil pressure switch, Engine/motor control unit	950
26. Data bus diagnostic interface, Engine/motor control unit	951
27. Control unit in dash panel insert, Data bus diagnostic interface	952
28. Fuel delivery unit, Fuel system pressurisation pump, Control unit in dash panel insert, Fuel pump control unit	953
29. Coolant shortage indicator sender, Onboard supply control unit, Air conditioner compressor regulating valve	954
110 - 3.0l diesel engine , CDUC,CKVB,CKVC,CKVD,CLAB	955-983
1. 3.0l diesel engine , CDUC,CKVB,CKVC,CKVD,CLAB	955
2. Battery, Terminal 15 voltage supply relay	956
3. Battery isolation igniter, Terminal 30 wiring junction 2	957
4. Starter, Alternator, Voltage regulator, Terminal 30 wiring junction 2, Jump start socket	958
5. Terminal 30 voltage supply relay	959
6. Starter motor relay, Starter motor relay 2	960
7. Cylinder 2 combustion chamber pressure sender, Automatic glow period control unit	961
8. Oil pressure switch for reduced oil pressure, Oil level and oil temperature sender	962
9. Engine speed sender, Hall sender	963
10. Left electrohydraulic engine mounting solenoid valve, Right electrohydraulic engine mounting solenoid valve	964
11. Low heat output relay, Auxiliary air heater element	965
12. Accelerator position sender, Accelerator position sender 2	966
13. Brake servo pressure sensor, Temperature sender for engine temperature regulation	967
14. Throttle valve module	968
15. Fuel pressure sender, Turbocharger 1 control unit	969
16. Charge pressure sender, Intake air temperature sender, Air mass meter, Pressure differential sender	970
17. Pump for reducing agent	971
18. Control unit for reducing agent metering system, Transfer pump for reducing agent	972
19. Control unit for reducing agent metering system, Heater for reducing agent tank (heater circuit 1), Heater for reducing agent line (heater circuit 2)	973
20. Control unit for reducing agent metering system, Injector for reducing agent, Heater for reducing agent breather line	974
21. Coolant temperature sender, Fuel temperature sender, Radiator outlet coolant temperature sender	975
22. Lambda probe, Lambda probe heater	976
23. Injector, cylinder 1, Injector, cylinder 6	977
24. Clutch position sender	978
25. Brake light switch	979
26. Data bus diagnostic interface	980
27. Control unit in dash panel insert, Data bus diagnostic interface	981
28. Fuel delivery unit, Control unit in dash panel insert, Fuel pump control unit	982
29. Coolant shortage indicator sender, Onboard supply control unit	983
111 - 3.0l petrol engine , CGWC,CGXC,CHMB,CMUA,CTUB	984-1008
1. 3.0l petrol engine , CGWC,CGXC,CHMB,CMUA,CTUB	984
2. Battery, Terminal 15 voltage supply relay	985
3. Battery isolation igniter, Terminal 30 wiring junction 2	986
4. Starter, Alternator, Voltage regulator, Terminal 30 wiring junction 2, Jump start socket	987
5. Main relay, Engine component current supply relay	988
6. Starter motor relay, Starter motor relay 2	989
7. Oil pressure switch, Intake manifold flap potentiometer, Intake manifold flap potentiometer 2, Camshaft control valve 1, Camshaft control valve 2	990
8. Continued coolant circulation pump	991
9. Activated charcoal filter solenoid valve 1, Secondary air inlet valve, Left electrohydraulic engine mounting solenoid valve, Right electrohydraulic engine mounting solenoid valve, Valve for oil pressure control	992
10. Ignition coil 1 with output stage. Ignition coil 2 with output stage. Ignition coil 3 with	993

output stage, Secondary air inlet valve 2	
11. Ignition coil 4 with output stage, Ignition coil 5 with output stage, Ignition coil 6 with output stage	994
12. Oil pressure switch for reduced oil pressure, Knock sensor 1, Knock sensor 2	995
13. Accelerator position sender, Accelerator position sender 2	996
14. Engine speed sender, Hall sender, Coolant temperature sender, Fuel pressure sender, Throttle valve module	997
15. Hall sender 2, Brake servo pressure sensor, Regulating flap control unit	998
16. Charge pressure sender, Intake manifold temperature sender 2, Charge pressure sender 2, Control unit for fuel tank leak detection	999
17. Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5, Injector, cylinder 6	1000
18. Lambda probe, Lambda probe 2	1001
19. Lambda probe after catalytic converter, Lambda probe 2 after catalytic converter	1002
20. Clutch position sender	1003
21. Brake light switch, Oil level and oil temperature sender, Steering column electronics control unit	1004
22. Data bus diagnostic interface	1005
23. Control unit in dash panel insert, Data bus diagnostic interface	1006
24. Fuel delivery unit, Control unit in dash panel insert, Fuel pump control unit	1007
25. Coolant shortage indicator sender, Onboard supply control unit	1008
112 - 2.0l petrol engine , CADA,CAEB,CAED,CDNB,CDNC,CDZA,CFKA,CPMA,CPMB	1009-1033
1. 2.0l petrol engine , CADA,CAEB,CAED,CDNB,CDNC,CDZA,CFKA,CPMA,CPMB	1009
2. Battery, Terminal 15 voltage supply relay	1010
3. Battery isolation igniter, Terminal 30 wiring junction 2	1011
4. Starter, Alternator, Voltage regulator, Terminal 30 wiring junction 2, Jump start socket	1012
5. Main relay, Engine component current supply relay	1013
6. Starter motor relay, Starter motor relay 2, Fuse carrier 1	1014
7. Oil level and oil temperature sender, Fuse carrier 1, Coolant circulation pump	1015
8. Charge pressure control solenoid valve, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Valve for oil pressure control	1016
9. Fuel quality sender, Left electrohydraulic engine mounting solenoid valve, Right electrohydraulic engine mounting solenoid valve, Continued coolant circulation pump	1017
10. Actuator 1 for camshaft adjustment	1018
11. Actuator 6 for camshaft adjustment, Actuator 7 for camshaft adjustment, Actuator 8 for camshaft adjustment, Brake servo pressure sensor, Gear detection sensor	1019
12. Ignition coil 1 with output stage, Ignition coil 2 with output stage	1020
13. Engine speed sender, Ignition coil 3 with output stage, Ignition coil 4 with output stage	1021
14. Engine speed sender, Hall sender, Accelerator position sender, Accelerator position sender 2	1022
15. Fuel pressure sender, Throttle valve module	1023
16. Coolant temperature sender, Intake manifold flap potentiometer, Fuel pressure sender for low pressure	1024
17. Oil pressure switch, Oil pressure switch for reduced oil pressure, Air mass meter, Tank pressure sensor, Control unit for fuel tank leak detection, Fuel pressure regulating valve	1025
18. Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	1026
19. Lambda probe, Lambda probe after catalytic converter	1027
20. Clutch position sender	1028
21. Brake light switch, Steering column electronics control unit	1029
22. Data bus diagnostic interface	1030
23. Control unit in dash panel insert, Data bus diagnostic interface, Fuel pump control unit	1031
24. Coolant shortage indicator sender, Control unit in dash panel insert, Onboard supply control unit, Fuel pump control unit	1032
25. Low heat output relay, High heat output relay, Onboard supply control unit, Auxiliary air heater control unit, Auxiliary air heater element	1033
113 - Basic equipment	1034-1067
1. Basic equipment	1034
2. Entry and start authorisation switch, Fuse 6 on fuse holder D	1035
3. Control unit in dash panel insert, Radio controlled clock receiver, Radio controlled clock	1036
4. Fuel delivery unit, Control unit in dash panel insert	1037
5. Steering column electronics control unit	1038
6. Turn signal switch, Cruise control system switch, Steering column electronics control unit	1039
7. Intermittent wiper switch, Switch module for driving mode selection, Start/Stop operation button, Onboard supply control unit, Steering column electronics control unit, Control unit for electronic steering column lock	1040
8. Bonnet contact switch, Treble horn, Bass horn, Horn relay, Onboard supply control unit	1041
9. Rain and light sensor. Wiper motor control unit. Onboard supply control unit. Headlight washer	1042

system pump	
10. Front left brake pad wear sender, Front right brake pad wear sender, Rear right brake pad wear sender, Onboard supply control unit	1043
11. Brake fluid level warning contact, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Onboard supply control unit, Left washer jet heater element, Right washer jet heater element	1044
12. Air quality sensor, Refrigerant pressure and temperature sender, Onboard supply control unit, Garage door operation control unit	1045
13. Light switch, Hazard warning lights button, Onboard supply control unit	1046
14. Onboard supply control unit, Front left headlight	1047
15. Onboard supply control unit, Front right headlight	1048
16. Rear left reading light button, Onboard supply control unit, Vanity mirror light bulb, Front interior light, Rear right interior light	1049
17. Key operated switch to deactivate front passenger side airbag, Valet parking button, Onboard supply control unit, Valet parking warning lamp	1050
18. Glove compartment light switch, Onboard supply control unit, Front left footwell illumination bulb, Front right footwell illumination bulb, Glove compartment light, Earth connection 4, in main wiring harness	1051
19. Onboard supply control unit, Earth connection 4, in main wiring harness, Connection 26, in main wiring harness	1052
20. Adaptive cruise control unit, Onboard supply control unit	1053
21. Rear roller blind switch, Button for TCS and electronic stabilisation program, Parking aid button, Onboard supply control unit	1054
22. Entry and start authorisation button, Onboard supply control unit	1055
23. Entry and start authorisation button, Contact sensor for front left exterior door handle, Contact sensor for front right exterior door handle, Convenience system central control unit, Left aerial for entry and start authorisation	1056
24. Convenience system central control unit, Left tail light, Left tail light 2, Luggage compartment light	1057
25. Convenience system central control unit, Rear lid central locking motor	1058
26. Convenience system central control unit, Right tail light, Right tail light 2	1059
27. Button 1 for tilting roof, Sliding sunroof adjustment control unit, Convenience system central control unit, Sliding sunroof motor	1060
28. Anti-theft alarm sensor, Alarm horn, Convenience system central control unit	1061
29. Clutch pedal switch, Convenience system central control unit	1062
30. Brake light switch, Convenience system central control unit	1063
31. Convenience system central control unit	1064
32. Convenience system central control unit	1065
33. Convenience system central control unit, Relay for power sockets, Rear roller blind motor, Tank filler flap locking motor, Heated rear window	1066
34. Relay for power sockets, Cigarette lighter, 12 V socket, DC/AC converter with socket, 12 V - 230 V, 12 V socket 2, 12 V socket 3	1067
114 - Convenience system	1068-1097
1. Convenience system	1068
2. Entry and start authorisation button, Convenience system central control unit, Luggage compartment aerial for entry and start system, Interior aerial 1 for entry and start system	1069
3. Anti-theft alarm sensor, Alarm horn, Convenience system central control unit, Aerial amplifier 3	1070
4. Contact sensor for front left exterior door handle, Contact sensor for front right exterior door handle, Convenience system central control unit, Left aerial for entry and start authorisation	1071
5. Contact sensor for rear left exterior door handle, Contact sensor for rear right exterior door handle, Convenience system central control unit	1072
6. Window aerial suppression filter, Heated rear window relay, Convenience system central control unit, Heated rear window single fuse, Heated rear window	1073
7. Contact switch in lock cylinder for rear lid, anti-theft alarm system and central locking system, Release button for rear lid lock cylinder, Convenience system central control unit, Rear lid central locking motor, Left number plate light, Right number plate light	1074
8. Driver door control unit	1075
9. Operating unit for window regulator in driver door, Driver door control unit, Driver side window regulator motor	1076
10. Driver side central locking lock unit, Driver door control unit	1077
11. Driver side interior locking switch, Rear lid remote release switch, Driver door control unit, Driver door opener illumination bulb, Driver side door warning lamp, Front left entry light	1078
12. Driver seat memory operating unit, Driver door control unit	1079
13. Driver seat memory operating unit, Driver door control unit	1080
14. Mirror adjustment switch, Mirror adjustment changeover switch, Adjustment switch for mirror with fold-in feature. Interior monitoring switch. Alarm system off switch. Driver door control unit.	1081

Central locking SAFELOCK function warning lamp	
15. Potentiometer for horizontal adjustment of driver side mirror, Potentiometer for vertical adjustment of driver side mirror, Driver door control unit, Driver side mirror adjustment motor 2, Driver side fold-in mirror motor, Driver side mirror adjustmen motor	1082
16. Driver door control unit, Lane change assist warning lamp in driver side exterior mirror, Driver side turn signal repeater bulb, Entry light in exterior mirror, driver side, Automatic anti-dazzle exterior mirror, driver side, Heated exterior mirror on driver side	1083
17. Front passenger door control unit	1084
18. Front passenger side central locking lock unit, Front passenger door control unit	1085
19. Window regulator switch in front passenger door, Front passenger side interior locking switch, Front passenger door control unit, Front passenger side window regulator motor	1086
20. Front passenger door control unit, Front passenger door opener illumination bulb, Front right entry light, Front passenger side door warning lamp	1087
21. Potentiometer for horizontal adjustment of front passenger side mirror, Potentiometer for vertical adjustment of front passenger side mirror, Front passenger door control unit, Front passenger side mirror adjustment motor 2, Front passenger side fold-in mirror motor, Front passenger side mirror adjustment motor	1088
22. Front passenger door control unit, Lane change assist warning lamp in passenger side exterior mirror, Front passenger side turn signal repeater bulb, Entry light in exterior mirror, passenger side, Automatic anti-dazzle exterior mirror, passenger side, Heated exterior mirror on passenger side	1089
23. Rear left door control unit	1090
24. Rear left central locking lock unit, Rear left door control unit	1091
25. Rear left window regulator switch, in door, Rear left interior locking switch, Rear left door control unit, Rear left window regulator motor	1092
26. Rear left door control unit, Rear left door opener illumination bulb, Rear left entry light, Rear left door warning lamp	1093
27. Rear right door control unit	1094
28. Rear right central locking lock unit, Rear right door control unit	1095
29. Rear right window regulator switch, in door, Rear right interior locking switch, Rear right door control unit, Rear right window regulator motor	1096
30. Rear right door control unit, Rear right door opener illumination bulb, Rear right entry light, Rear right door warning lamp	1097
115 - Electromechanical steering	1098-1099
1. Electromechanical steering	1098
2. Steering moment sender, Power steering control unit	1099
116 - Interior mirror	1100-1103
1. Interior mirror	1100
2. Interior mirror, Humidity sender, Rain and light sensor, Automatic anti-dazzle interior mirror	1101
3. Interior mirror, Main beam assist control unit, Automatic anti-dazzle interior mirror	1102
4. Interior mirror, Driver door control unit, Front passenger door control unit, Automatic anti-dazzle interior mirror	1103
117 - Gas discharge headlights with automatic headlight range control	1104-1109
1. Gas discharge headlights with automatic headlight range control	1104
2. Light switch, Rear left vehicle level sender, Onboard supply control unit	1105
3. Left gas discharge bulb control unit, Onboard supply control unit, Front left headlight, Left headlight range control motor, Left dip beam screen motor	1106
4. Onboard supply control unit, Left LED module for daytime running light and side light, Front left headlight	1107
5. Right gas discharge bulb control unit, Onboard supply control unit, Right gas discharge (xenon) bulb, Front right headlight, Right headlight range control motor, Right dip beam screen motor	1108
6. Onboard supply control unit, Front right headlight, Front right turn signal bulb	1109
118 - Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering light	1110-1115
1. Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering light	1110
2. Light switch, Rear left vehicle level sender, Onboard supply control unit	1111
3. Onboard supply control unit, Output module for left headlight, Left gas discharge (xenon) bulb, Front left headlight, Left static cornering light, Left headlight range control motor, Left dip beam screen motor, Left dynamic cornering light control mo or	1112
4. Onboard supply control unit, Left LED module for daytime running light and side light, Front left headlight	1113
5. Right gas discharge bulb control unit, Onboard supply control unit, Output module for right headlight, Right gas discharge (xenon) bulb, Front right headlight, Right static cornering light, Right headlight range control motor, Right dip beam screen motor, Right dynamic cornering light control motor	1114
6. Onboard supply control unit. Front riagt headliagt	1115

119 - Parking aid (PDC)	1116-1119
1. Parking aid (PDC)	1116
2. Front left parking aid sender, Front parking aid warning buzzer, Onboard supply control unit	1117
3. Rear left parking aid sender, Rear right parking aid sender, Rear parking aid warning buzzer, Onboard supply control unit	1118
4. Parking aid button, Onboard supply control unit	1119
120 - Lane departure warning	1120-1122
1. Lane departure warning	1120
2. Data bus diagnostic interface, Lane departure warning control unit	1121
3. Lane departure warning control unit, Windscreen heater for lane departure warning	1122
121 - Lane change assist	1123-1126
1. Lane change assist	1123
2. Lane change assist control unit	1124
3. Lane change assist control unit 2	1125
4. Button for lane change assist, Lane change assist warning lamp in driver side exterior mirror, Lane change assist warning lamp in front passenger side exterior mirror	1126
122 - Adaptive cruise control	1127-1128
1. Adaptive cruise control	1127
2. Adaptive cruise control unit	1128
123 - Airbag systems	1129-1140
1. Airbag systems	1129
2. Airbag coil connector and return ring with slip ring, Airbag control unit, Airbag igniter on driver side, Airbag igniter 1 on front passenger side, Airbag igniter 2 on front passenger side, Airbag igniter 2 on driver side	1130
3. Airbag control unit, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter, Battery isolation igniter	1131
4. Driver side belt force limiter, Front passenger side belt force limiter, Airbag control unit, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side, Rear centre belt tensioner igniter	1132
5. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Airbag control unit	1133
6. Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side, Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side	1134
7. Key operated switch to deactivate airbag on front passenger side, Airbag control unit, Warning lamp for airbag deactivated on front passenger side	1135
8. Driver side belt switch, Front passenger side belt switch, Seat occupied sensor on front passenger side, Driver side seat position sensor, Front passenger side seat position sensor, Airbag control unit	1136
9. Front passenger side belt switch, Pressure sensor for seat occupied recognition, Seat belt force sensor for seat occupied recognition, Front passenger side seat position sensor, Airbag control unit, Seat occupied recognition control unit	1137
10. Airbag control unit, Driver side knee airbag igniter, Front passenger side knee airbag igniter	1138
11. Airbag control unit, Data bus diagnostic interface	1139
12. Control unit in dash panel insert, Data bus diagnostic interface, Airbag warning lamp	1140
124 - Automatic adaptive suspension, adjustable dampers	1141-1147
1. Automatic adaptive suspension, adjustable dampers	1141
2. Electronically controlled damping control unit	1142
3. Front left body acceleration sender, Front right body acceleration sender, Rear body acceleration sender, Electronically controlled damping control unit	1143
4. Rear left vehicle level sender, Rear right vehicle level sender, Front left vehicle level sender, Front right vehicle level sender, Electronically controlled damping control unit	1144
5. Electronically controlled damping control unit, Front left shock absorber damping adjustment valve, Front right shock absorber damping adjustment valve, Rear left shock absorber damping adjustment valve, Rear right shock absorber damping adjustment valve	1145
6. Electronically controlled damping control unit, Data bus diagnostic interface	1146
7. Switch module for driving mode selection, Start/Stop operation button, Onboard supply control unit, Data bus diagnostic interface	1147
125 - Automatic air conditioning system, luxury Climatronic	1148-1157
1. Automatic air conditioning system, luxury Climatronic	1148
2. Fresh air blower control unit, Fresh air blower	1149
3. Sunlight penetration photosensor, Potentiometer for rear temperature selection	1150
4. Defroster flap control motor, Right centre vent control motor	1151
5. Left footwell flap control motor. Left temperature flap control motor	1152

6. Left footwell vent temperature sender, Right footwell vent temperature sender, Evaporator output temperature sender, Air flow flap control motor, Air recirculation flap control motor	1153
7. Ambient temperature sensor, Air conditioning system magnetic clutch	1154
8. Air quality sensor, Refrigerant pressure and temperature sender 1, Humidity sender in fresh air intake duct, Air conditioner compressor regulating valve	1155
9. Convenience system central control unit, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Heated rear window	1156
10. Humidity sender, Convenience system central control unit, Automatic anti-dazzle interior mirror	1157
126 - Automatic air conditioning system, basic Climatronic	1158-1164
1. Automatic air conditioning system, basic Climatronic	1158
2. Fresh air blower control unit, Air conditioning system magnetic clutch	1159
3. Centre vent control motor	1160
4. Air recirculation flap control motor, Footwell flap control motor	1161
5. Centre vent temperature sender, Footwell vent temperature sender, Evaporator output temperature sender	1162
6. Refrigerant pressure and temperature sender 1, Humidity sender in fresh air intake duct, Air conditioner compressor regulating valve	1163
7. Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Heated rear window	1164
127 - Electromechanical parking brake	1165-1168
1. Electromechanical parking brake	1165
2. Control unit for electromechanical parking brake	1166
3. Electromechanical parking brake button, Auto-hold button, ABS control unit, Control unit for electromechanical parking brake	1167
4. Control unit for electromechanical parking brake, Left parking brake motor, Right parking brake motor, Connection 2 (running gear/dash panel insert CAN bus, high), in main wiring harness, Connection 2 (running gear/dash panel insert CAN bus, low), in main wiring harness	1168
128 - Trailer coupling	1169-1172
1. Trailer coupling	1169
2. Trailer detector control unit, Fuse carrier 2	1170
3. Trailer detector control unit	1171
4. Trailer detector control unit, Trailer socket	1172
129 - Seat heating	1173-1176
1. Seat heating	1173
2. Heated driver seat regulator, Heated front passenger seat regulator, Onboard supply control unit, Heated seat cushion for driver seat, Heated backrest for driver seat	1174
3. Onboard supply control unit, Heated seat cushion for front passenger seat, Heated backrest for front passenger seat	1175
4. Seat heating control unit with regulator, Heated bench seat cushion for rear left seat, Heated bench seat cushion for rear right seat	1176
130 - Preparation for multimedia system	1177-1178
1. Preparation for multimedia system	1177
2. 2-pin connector	1178
131 - Dynamic Ride Control	1179-1182
1. Dynamic Ride Control	1179
2. Electronically controlled damping control unit	1180
3. Electronically controlled damping control unit, Front left shock absorber damping adjustment valve, Front right shock absorber damping adjustment valve	1181
4. Electronically controlled damping control unit, Rear left shock absorber damping adjustment valve, Rear right shock absorber damping adjustment valve	1182
132 - Anti-lock brake system (ABS) with electronic stabilisation program (ESP)	1183-1190
1. Anti-lock brake system (ABS) with electronic stabilisation program (ESP)	1183
2. Auto-hold button, ABS control unit, ABS control unit fuse 1	1184
3. TCS and ESP button, ABS control unit	1185
4. ESP sensor unit, ESP sensor unit 2, ABS control unit, Active steering control unit, ABS hydraulic pump	1186
5. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit	1187
6. Brake light switch, ABS control unit, Convenience system central control unit, ABS hydraulic unit, Front right ABS inlet valve, Front right ABS outlet valve, Front left ABS inlet valve, Front left ABS outlet valve, Rear right ABS inlet valve, Rear left ABS inlet valve, Rear right ABS outlet valve, Rear left ABS outlet valve	1188
7. Steering angle sender, ABS control unit, Steering column electronics control unit, ABS hydraulic unit, Vehicle stabilization program switch valve 1, Vehicle stabilization program switch valve 2, Vehicle stabilization program high-pressure valve 1, Vehicle stabilization program high-pressure valve 2	1189

8. Control unit in dash panel insert, Data bus diagnostic interface, ABS warning lamp, ESP and TCS warning lamp	1190
133 - Ventilated seat with seat heating, 5-door vehicle	1191-1195
1. Ventilated seat with seat heating, 5-door vehicle	1191
2. Front left seat temperature sender, Control unit for front left seat ventilation, Fuse carrier 2, Fuse 5 on fuse holder C, Heated seat cushion for driver seat, Heated backrest for driver seat, Driver seat cushion lateral support heater	1192
3. Control unit for front left seat ventilation, Driver seat backrest fan, Driver seat cushion fan, Driver seat backrest fan 2, Driver seat cushion fan 2	1193
4. Front right seat temperature sender, Control unit for front right seat ventilation, Heated seat cushion for front passenger seat, Heated backrest for front passenger seat, Front passenger seat lateral support heater	1194
5. Control unit for front right seat ventilation, Front passenger seat backrest fan, Front passenger seat cushion fan, Front passenger seat backrest fan 2, Front passenger seat cushion fan 2	1195
134 - Tail light cluster with LED, 5-door vehicle	1196-1198
1. Tail light cluster with LED, 5-door vehicle	1196
2. Convenience system central control unit, Left tail light, Left tail light 2	1197
3. Convenience system central control unit, Right tail light, Right tail light 2	1198
135 - Rear lid and tail lights, 5-door vehicle	1199-1203
1. Rear lid and tail lights, 5-door vehicle	1199
2. Convenience system central control unit, Left tail light, Left tail light 2, Luggage compartment light on left	1200
3. Convenience system central control unit, Right tail light, Right tail light 2, Right luggage compartment light, Surround lighting 1 in rear lid	1201
4. Contact switch in lock cylinder for rear lid, anti-theft alarm system and central locking system, Release button for rear lid lock cylinder, Convenience system central control unit, Left number plate light, Right number plate light	1202
5. Glass breakage sensor for rear window, Convenience system central control unit, Additional brake light bulb, Heated rear window	1203
136 - Start/stop system	1204-1207
1. Start/stop system	1204
2. Voltage stabiliser	1205
3. Fuse holder F, Fuse carrier 5	1206
4. Start/Stop operation button	1207
137 - Tail light cluster with LED, 2-door vehicle	1208-1210
1. Tail light cluster with LED, 2-door vehicle	1208
2. Left tail light, Left tail light 2	1209
3. Right tail light, Right tail light 2	1210
138 - Rear final drive - sport differential	1211-1217
1. Rear final drive - sport differential	1211
2. All-wheel drive control unit	1212
3. ABS control unit, All-wheel drive control unit	1213
4. ESP sensor unit, ESP sensor unit 2, All-wheel drive control unit, Active steering control unit	1214
5. Oil pressure and oil temperature sender, Oil pressure and oil temperature sender 2, All-wheel drive control unit	1215
6. All-wheel drive control unit, Clutch valve for all-wheel drive, Clutch valve 2 for all-wheel drive, All-wheel drive pump	1216
7. All-wheel drive control unit, Connection 2 (running gear/dash panel insert CAN bus, high), in main wiring harness, Connection 2 (running gear/dash panel insert CAN bus, low), in main wiring harness	1217
139 - Bluetooth car phone (MOST bus)	1218-1222
1. Bluetooth car phone (MOST bus)	1218
2. Control unit 1 for information electronics, Front left microphone, Front right microphone, Aerial for Bluetooth, Microphone unit in front roof module	1219
3. Convenience system central control unit, Control unit 1 for information electronics, Radio, Central locking and anti-theft alarm system aerial, TV tuner, Aerial amplifier 3	1220
4. Control unit 1 for information electronics, Radio, Radio, telephone and navigation system aerial, Remote control receiver for auxiliary heater, Telephone aerial, TV tuner, Aerial amplifier 2, Satellite aerial, Auxiliary heater aerial, Digital radio aerial	1221
5. Onboard supply control unit, Control unit 1 for information electronics, Telephone bracket	1222
140 - Preparation for mobile telephone (infotainment CAN bus)	1223-1227
1. Preparation for mobile telephone (infotainment CAN bus)	1223
2. Radio, telephone and navigation system aerial, Remote control receiver for auxiliary heater, Telephone aerial, Aerial amplifier for mobile telephone, Auxiliary heater aerial	1224
3. Telephone transmitter and receiver unit, Aerial amplifier for mobile telephone, Aerial for Bluetooth	1225

4. Radio, Telephone transmitter and receiver unit, Front left microphone, Microphone unit in front roof module	1226
5. Telephone transmitter and receiver unit, Telephone bracket	1227
141 - Preparation for mobile telephone (MOST bus)	1228-1232
1. Preparation for mobile telephone (MOST bus)	1228
2. Central locking and anti-theft alarm system aerial, TV tuner, Aerial amplifier 3	1229
3. GPS aerial, Radio, telephone and navigation system aerial, Remote control receiver for auxiliary heater, Telephone aerial, TV tuner, Aerial amplifier for mobile telephone, Aerial amplifier 2, Satellite aerial, Auxiliary heater aerial, Digital radio aerial	1230
4. Control unit 1 for information electronics, Aerial amplifier for mobile telephone, Telephone bracket	1231
5. Data bus diagnostic interface, Control unit 1 for information electronics, Aerial for Bluetooth, Microphone unit in front roof module	1232
142 - Radio with basic and basic plus sound system	1233-1241
1. Radio with basic and basic plus sound system	1233
2. Radio, Telephone transmitter and receiver unit	1234
3. Data bus diagnostic interface, Display unit for front information display and operating unit control unit, Radio	1235
4. Display unit for front information display and operating unit control unit, Radio	1236
5. Radio, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range and bass loudspeaker, Front right mid-range and bass loudspeaker	1237
6. Radio, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker	1238
7. Radio, Radio, telephone and navigation system aerial, Aerial amplifier 2, Aerial amplifier 3, Satellite aerial	1239
8. Radio, Connection for external audio sources	1240
9. Radio, Connection for external audio sources	1241
143 - Radio with Standard sound system	1242-1251
1. Radio with Standard sound system	1242
2. Radio, Telephone transmitter and receiver unit	1243
3. Display unit for front information display and operating unit control unit, Radio	1244
4. Digital sound package control unit, Data bus diagnostic interface, Radio	1245
5. Digital sound package control unit, Radio, Front left treble loudspeaker, Front left mid-range and bass loudspeaker	1246
6. Digital sound package control unit, Radio, Front right treble loudspeaker, Front right mid-range and bass loudspeaker, Centre mid-range and treble loudspeaker	1247
7. Digital sound package control unit, Radio, Rear left treble loudspeaker, Rear right treble loudspeaker, Subwoofer in rear shelf, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker	1248
8. Radio, Radio, telephone and navigation system aerial, Aerial amplifier 2, Aerial amplifier 3, Satellite aerial	1249
9. Radio, Connection for external audio sources	1250
10. Radio, Connection for external audio sources	1251
144 - Radio with Bang & Olufsen sound system	1252-1263
1. Radio with Bang & Olufsen sound system	1252
2. Radio, Telephone transmitter and receiver unit	1253
3. Display unit for front information display and operating unit control unit, Radio	1254
4. Digital sound package control unit, Data bus diagnostic interface, Radio	1255
5. Digital sound package control unit, Radio, Microphone unit in front roof module	1256
6. Digital sound package control unit, Radio, Front left treble loudspeaker, Front left bass loudspeaker, Front left mid-range loudspeaker, Centre mid-range and treble loudspeaker	1257
7. Digital sound package control unit, Radio, Front right treble loudspeaker, Front right bass loudspeaker, Front right mid-range loudspeaker	1258
8. Digital sound package control unit, Radio, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker	1259
9. Digital sound package control unit, Radio, Rear left mid-range loudspeaker, Subwoofer in rear shelf	1260
10. Radio, Radio, telephone and navigation system aerial, Aerial amplifier 2, Aerial amplifier 3, Satellite aerial	1261
11. Radio, Connection for external audio sources	1262
12. Radio, Connection for external audio sources	1263
145 - Actuator for structure-borne sound	1264-1265
1. Actuator for structure-borne sound	1264
2. Control unit for structure-borne sound, Actuator for structure-borne sound	1265
146 - MMI with radio and basic sound system	1266-1271
1. MMI with radio and basic sound system	1266

2. Radio	1267
3. Radio, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range and bass loudspeaker, Front right mid-range and bass loudspeaker	1268
4. Radio, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker	1269
5. Convenience system central control unit, Radio, Central locking and anti-theft alarm system aerial, TV tuner, Aerial amplifier 3	1270
6. Control unit 1 for information electronics, Radio, GPS aerial, Radio, telephone and navigation system aerial, Remote control receiver for auxiliary heater, Telephone aerial, TV tuner, Aerial amplifier 2, Satellite aerial, Auxiliary heater aerial, Digital radio aerial	1271
147 - Digital TV tuner	1272-1275
1. Digital TV tuner	1272
2. Reversing camera system control unit, Control unit 1 for information electronics, TV tuner	1273
3. Convenience system central control unit, Radio, Central locking and anti-theft alarm system aerial, TV tuner, Aerial amplifier 3	1274
4. Control unit 1 for information electronics, Radio, GPS aerial, Radio, telephone and navigation system aerial, Remote control receiver for auxiliary heater, TV tuner, Aerial amplifier 2, Satellite aerial, Auxiliary heater aerial, Digital radio aerial	1275
148 - MMI with radio and Standard sound system	1276-1282
1. MMI with radio and Standard sound system	1276
2. Radio	1277
3. Radio, Front left treble loudspeaker, Front left mid-range and bass loudspeaker, Centre mid-range and treble loudspeaker	1278
4. Radio, Front right treble loudspeaker, Front right mid-range and bass loudspeaker	1279
5. Radio, Rear left treble loudspeaker, Rear right treble loudspeaker, Subwoofer in rear shelf, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker	1280
6. Radio, Central locking and anti-theft alarm system aerial, Aerial amplifier 3	1281
7. Radio, GPS aerial, Radio, telephone and navigation system aerial, Telephone aerial, Aerial amplifier 2, Satellite aerial, Auxiliary heater aerial, Digital radio aerial	1282
149 - MMI with radio and Bang & Olufsen sound system	1283-1291
1. MMI with radio and Bang & Olufsen sound system	1283
2. Radio	1284
3. Convenience system central control unit, Radio, Central locking and anti-theft alarm system aerial, TV tuner, Aerial amplifier 3	1285
4. Control unit 1 for information electronics, Radio, GPS aerial, Radio, telephone and navigation system aerial, Remote control receiver for auxiliary heater, Telephone aerial, TV tuner, Aerial amplifier 2, Satellite aerial, Auxiliary heater aerial	1286
5. Digital sound package control unit, Internal microphone, Front left microphone, Front right microphone, Microphone unit in front roof module	1287
6. Digital sound package control unit, Front left treble loudspeaker, Front left bass loudspeaker, Front left mid-range loudspeaker	1288
7. Digital sound package control unit, Front right treble loudspeaker, Front right bass loudspeaker, Front right mid-range loudspeaker, Centre mid-range and treble loudspeaker	1289
8. Digital sound package control unit, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker	1290
9. Digital sound package control unit, Rear left mid-range loudspeaker, Rear right mid-range loudspeaker, Subwoofer in rear shelf	1291
150 - 4.2l petrol engine , CFSA	1292-1320
1. 4.2l petrol engine , CFSA	1292
2. Battery, Terminal 15 voltage supply relay	1293
3. Battery isolation igniter, Terminal 30 wiring junction 2	1294
4. Starter, Alternator, Voltage regulator, Terminal 30 wiring junction 2, Jump start socket	1295
5. Main relay, Engine control unit, Engine component current supply relay	1296
6. Starter motor relay, Engine control unit, Starter motor relay 2	1297
7. Map-controlled engine cooling system thermostat, Engine control unit, Activated charcoal filter solenoid valve 1, Left electrohydraulic engine mounting solenoid valve, Right electrohydraulic engine mounting solenoid valve, Valve for oil pressure control	1298
8. Secondary air pump relay, Secondary air pump 2 relay, Engine control unit, Secondary air inlet valve, Intake manifold flap valve, Coolant circulation pump, Secondary air pump motor, Secondary air pump motor 2	1299
9. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	1300
10. Engine control unit, Ignition coil 5 with output stage, Ignition coil 6 with output stage, Ignition coil 7 with output stage, Ignition coil 8 with output stage	1301
11. Knock sensor 1, Knock sensor 2, Knock sensor 3, Throttle valve module, Engine control unit	1302
12. Hall sender. Knock sensor 4. Throttle valve module 2. Engine control unit	1303

13. Intake manifold flap potentiometer, Intake manifold flap potentiometer 2, Engine control unit	1304
14. Engine speed sender, Hall sender 3, Engine control unit	1305
15. Intake air temperature sender, Fuel pressure sender, Engine control unit	1306
16. Engine control unit, Camshaft control valve 1, Exhaust flap valve, Exhaust camshaft control valve 1	1307
17. Lambda probe, Lambda probe 2, Engine control unit	1308
18. Lambda probe after catalytic converter, Lambda probe 2 after catalytic converter, Engine control unit	1309
19. Accelerator position sender, Engine control unit	1310
20. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 6, Injector, cylinder 8	1311
21. Engine control unit, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5, Injector, cylinder 7	1312
22. Engine control unit, Fuel metering valve, Fuel metering valve 2	1313
23. Oil level and oil temperature sender, Engine control unit, Vacuum pump for brakes	1314
24. Oil temperature sender, Engine control unit	1315
25. Brake light switch, Oil pressure switch for reduced oil pressure, Engine control unit	1316
26. Data bus diagnostic interface, Engine control unit, Mechatronic unit for dual clutch gearbox	1317
27. Control unit in dash panel insert, Data bus diagnostic interface	1318
28. Fuel delivery unit, Control unit in dash panel insert, Fuel pump control unit	1319
29. Oil pressure switch, Coolant shortage indicator sender, Onboard supply control unit	1320
151 - 2.0l diesel engine , CGLC,CGLD,CJCA,CJCB,CJCC,CJCD,CMFA,CMFB	1321-1349
1. 2.0l diesel engine , CGLC,CGLD,CJCA,CJCB,CJCC,CJCD,CMFA,CMFB	1321
2. Battery, Terminal 15 voltage supply relay	1322
3. Battery isolation igniter, Terminal 30 wiring junction 2	1323
4. Starter, Alternator, Voltage regulator, Terminal 30 wiring junction 2, Jump start socket	1324
5. Terminal 30 voltage supply relay, Engine/motor control unit	1325
6. Starter motor relay, Engine/motor control unit, Starter motor relay 2	1326
7. Automatic glow period control unit, Engine/motor control unit	1327
8. Oil level and oil temperature sender, Engine/motor control unit, Climatronic coolant shut-off valve, Coolant circulation pump, Pump for exhaust gas recirculation cooler	1328
9. Engine/motor control unit, Charge pressure control solenoid valve, Heater element for crankcase breather, Left electrohydraulic engine mounting solenoid valve, Air filter bypass flap valve, Exhaust gas recirculation cooler changeover valve	1329
10. Low heat output relay, High heat output relay, Engine/motor control unit, Auxiliary air heater element	1330
11. Accelerator position sender, Accelerator position sender 2, Engine/motor control unit	1331
12. Engine speed sender, Hall sender, Fuel pressure sender, Brake servo pressure sensor, Engine/motor control unit	1332
13. Throttle valve potentiometer, Fuel temperature sender, Exhaust gas recirculation potentiometer, Position sender for charge pressure positioner, Throttle valve module, Engine/motor control unit, Exhaust gas recirculation control motor	1333
14. Charge pressure sender, Intake air temperature sender, Pressure differential sender, Gearbox neutral position sender, Engine/motor control unit	1334
15. Air mass meter, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve	1335
16. Coolant temperature sender, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	1336
17. Lambda probe, Engine/motor control unit	1337
18. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	1338
19. NOx sender 2, Engine/motor control unit, Control unit for NOx sender 2	1339
20. Engine/motor control unit	1340
21. Engine/motor control unit, Control unit for reducing agent metering system, Relay for reducing agent metering system	1341
22. Tank sender for reducing agent, Temperature sender for reducing agent, Pressure sender for reducing agent metering system, Engine/motor control unit, Control unit for reducing agent metering system, Heater for reducing agent tank (heater circuit 1), Heater for reducing agent line (heater circuit 2)	1342
23. Engine/motor control unit, Control unit for reducing agent metering system, Transfer pump for reducing agent, Pump for reducing agent	1343
24. Clutch position sender, Engine/motor control unit	1344
25. Brake light switch, Oil pressure switch, Engine/motor control unit	1345
26. Data bus diagnostic interface, Engine/motor control unit	1346
27. Control unit in dash panel insert, Data bus diagnostic interface	1347
28. Fuel delivery unit. Fuel system pressurisation pump. Control unit in dash panel insert. Fuel	1348

pump control unit	
29. Coolant shortage indicator sender, Onboard supply control unit, Air conditioner compressor regulating valve	1349
152 - 1.8l petrol engine , CDHA	1350-1372
1. 1.8l petrol engine , CDHA	1350
2. Battery, Terminal 15 voltage supply relay, Battery monitor control unit	1351
3. Battery isolation igniter, Terminal 30 wiring junction 2	1352
4. Starter, Alternator, Voltage regulator, Suppression filter, Terminal 30 wiring junction 2, Jump start socket	1353
5. Main relay, Engine control unit, Engine component current supply relay	1354
6. Starter motor relay, Engine control unit, Starter motor relay 2	1355
7. Oil level and oil temperature sender, Engine control unit	1356
8. Engine control unit, Charge pressure control solenoid valve, Activated charcoal filter solenoid valve 1, Left electrohydraulic engine mounting solenoid valve, Right electrohydraulic engine mounting solenoid valve, Camshaft control valve 1, Turbocharger air recirculation valve, Intake manifold flap valve	1357
9. Engine control unit, Climatronic coolant shut-off valve, Valve for oil pressure control, Coolant circulation pump, Continued coolant circulation pump	1358
10. Engine control unit, Engine component current supply relay 2, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	1359
11. Accelerator position sender, Accelerator position sender 2, Engine control unit	1360
12. Engine speed sender, Hall sender, Knock sensor 1, Engine control unit	1361
13. Charge pressure sender, Fuel pressure sender, Intake manifold flap potentiometer, Throttle valve module, Engine control unit	1362
14. Oil pressure switch, Oil pressure switch for reduced oil pressure, Intake air temperature sender, Coolant temperature sender, Engine control unit	1363
15. Air mass meter, Brake servo pressure sensor, Gear detection sensor, Engine control unit, Fuel pressure regulating valve	1364
16. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	1365
17. Lambda probe, Lambda probe after catalytic converter, Engine control unit	1366
18. Clutch position sender, Engine control unit	1367
19. Brake light switch, Steering column electronics control unit, Engine control unit	1368
20. Automatic gearbox control unit, Data bus diagnostic interface, Engine control unit	1369
21. Control unit in dash panel insert, Data bus diagnostic interface	1370
22. Control unit in dash panel insert, Fuel pump control unit	1371
23. Coolant shortage indicator sender, Onboard supply control unit, Air conditioner compressor regulating valve	1372