

Contents

1	General information	1
1.1	--- Change history ---	1
1.2	General notes on Maintenance Manuals	2
1.3	Cleaning engine	2
1.4	Engine number	2
1.5	Vehicle identification number	5
1.6	Vehicle data sticker	6
2	Preparations	7
2.1	Vehicle: raising	7
2.2	Engine cover panel: removing and installing	8
2.3	Noise insulation: removing and installing	12
2.4	Window regulators: activating automatic open/close function	14
2.5	Vehicle diagnostic tester: connecting	14
3	Maintenance	17
3.1	Diesel particulate filter: reading out ash deposit volume	21
3.2	Shipping mode: deactivating	21
3.3	ERA-GLONASS: checking emergency call function	22
3.4	Event memory: reading out	23
3.5	Service interval display: resetting service event	23
3.6	Diagnostic work: performing	24
3.7	Transport mode: deactivating	24
3.8	Transport mode: checking activation and activating if necessary	24
3.9	Battery: reading out status	25
3.10	Vehicle diagnosis: completing	26
3.11	Battery: checking electrolyte level	26
3.12	Battery: connecting stationary battery charging unit (min. 30A, charging voltage max. 14.8 V on IV characteristic curve)	28
3.13	Battery: determining and recording state of charge (SOC)	31
3.14	Mirror hanger indicating defective battery: renewing battery on affected vehicles	33
3.15	Data sheet for Radio Equipment Directive: printing and placing in glove compartment	33
3.16	Connected gateway: renewing emergency battery	34
3.17	Connectivity box: checking emergency battery	35
3.18	Readiness for sending and receiving information: establishing	35
3.19	Emergency call function: checking status LED (must be green before delivery to customer)	36
3.20	Emergency flare: fitted so it is visible from driver's seat or driver's entrance	37
3.21	Certificate of conformity (COC): checking COC is present in vehicle	37
3.22	Brake fluid: changing	37
3.23	Brake fluid (vehicles older than 12 months): changing	43
3.24	Brake fluid: checking fluid level	43
3.25	Rear final drive: changing gear oil	44
3.26	Rear final drive: changing ATF	44
3.27	Brake system: checking condition of brake hoses, and checking that caps are fitted on bleeder screws	44
3.28	Brake pads: checking thickness	44
3.29	Brake discs: checking for surface rust and operating brakes to clean if necessary	46
3.30	Parking brake: releasing	46
3.31	Tyres: checking condition, age and wear pattern, and checking and recording tread depth	46
3.32	Tyres: checking tyre pressures and adjusting if necessary	48
3.33	Tyres (except spare wheel): checking tyre pressures and adjusting to 3.5 bar if necessary	50
3.34	Tyre Pressure Loss Indicator: storing changed tyre pressures	50
3.35	Tyre repair kit: checking that set is complete, and checking and recording expiry date	50
3.36	Wheel bolts: tightening to specified torque	51



3.37	Suspension struts on front and rear axle: removing locking elements and correctly fitting bump stops	52
3.38	Axles (front and rear): checking components for play, secure attachment and damage, and checking protective boots	55
3.39	Engine, gearbox, final drive and steering: checking for leaks and damage	61
3.40	Vehicle (from below): checking for damage	61
3.41	Underbody: checking trim, wheel housing liners, side members and pipes/wiring for damage, and checking that they are properly secured	61
3.42	Convertible roof locking element: lubricating	62
3.43	Roof insert: checking operation	63
3.44	Roof insert - sliding/tilting sunroof: cleaning and lubricating	63
3.45	Roof insert for panoramic sliding sunroof: checking operation	67
3.46	Door hinges with separate door arrester: cleaning and lubricating	67
3.47	Windscreen/rear window washer system: checking spray pattern and adjusting if necessary	68
3.48	Wiper blades: checking for damage	70
3.49	Headlight washer system: checking operation	71
3.50	Headlights: checking for correct adjustment	71
3.51	ECE towing bracket: checking (if fitted)	72
3.52	Vehicle identification numbers: checking numbers match and are embossed properly	73
3.53	Headlights and reversing lights, brake lights, side lights, number plate lights, turn signals, hazard warning lights: checking operation	73
3.54	Luggage compartment lighting: checking operation	74
3.55	Luggage compartment: removing protective film and felt pieces	74
3.56	Glove compartment light, interior lighting and reading light: checking operation	75
3.57	Horn: checking operation	75
3.58	Passenger airbag: checking key switch on/off and setting to "on"	76
3.59	Owner's literature: checking that all documents are present	76
3.60	Owner's Manual: attaching vehicle data sticker	76
3.61	Service Schedule: affixing vehicle data sticker	77
3.62	Service Schedule: entering Delivery Inspection	77
3.63	Seat belts: checking retainers for latch plate and belt buckle, and checking locking action of automatic belt retractor	77
3.64	Vehicle interior: removing protective film (if present) and protective covers for seats	78
3.65	Vehicle interior: checking that it is clean and cleaning if necessary	78
3.66	Vehicle interior: removing any objects other than those protecting interior surfaces	78
3.67	Vehicle interior and exterior: checking for and documenting any damage	79
3.68	Instrument cluster: checking warning lamps	79
3.69	Warning triangle: checking availability	79
3.70	First-aid kit: checking and recording expiry date	79
3.71	Vehicle keys: checking operation and recording number of keys given to customer	79
3.72	Vehicle key: removing from ignition lock	80
3.73	Vehicle key(s), wheel covers and owner's literature: checking availability and recording number present	80
3.74	Sun visors: checking that they are folded up and folding up if necessary	80
3.75	Luggage compartment cover and sun blind: checking that they are rolled up and rolling up if necessary	80
3.76	Engine oil: draining	81
3.77	Engine oil: extracting	83
3.78	Engine oil: renewing oil filter	84
3.79	Engine oil: filling up	90
3.80	Engine oil: checking oil level and correcting if necessary	91
3.81	Spark plugs: renewing	92
3.82	Coolant level: checking (coolant level must reach at least top marking on coolant expansion tank)	104
3.83	Air filter: renewing filter element and cleaning housing	111
3.84	Dust and pollen filter: renewing	119
3.85	Water separator (fuel filter): draining	121

3.86	Fuel filter: renewing	122
3.87	Water separator filter: renewing	124
3.88	Fuel tank: adding fuel additive	126
3.89	Reducing agent (AdBlue®): filling up tank completely	126
3.90	Natural gas system: checking for damage and leaks	132
3.91	Filler connection for natural gas: checking condition and cleaning if necessary	141
3.92	Natural gas tank: renewing	142
3.93	Service display for checking natural gas system: resetting	142
3.94	Vehicle doors: removing edge protection	142
3.95	Vehicle exterior: checking unprotected areas for dirt, and cleaning if necessary	143
3.96	Vehicle exterior: removing protective film, if present	143
3.97	Vehicle cover: checking position and correcting if necessary	143
3.98	Vehicle cover: removing according to manufacturer's instructions	143
3.99	Paintwork, trims, side windows and wiper blades: checking cleanliness	143
3.100	Body: checking vehicle paintwork for damage and corrosion from below and with bonnet, rear lid and doors open	143
3.101	Vehicles parked outdoors: locking	144
3.102	Road test	144
3.103	Stock vehicles: observing measures specified in maintenance table for stock vehicles (see "Before handing vehicle over to customer")	144
3.104	Accessories: installing	145
3.105	Checklist "Documentation of cleaning and care routine": checking that list is present	145
3.106	"Stock vehicle maintenance" checklist: signing and placing in vehicle wallet	145
3.107	Cleaning and care: checking that required measures have been carried out on time	145
3.108	Stock vehicle care management: deciding and recording date of next check	146
3.109	Display instruments: setting time and date	146
3.110	Manual gearbox/automatic gearbox: selecting 1st gear/park	146
3.111	Dual clutch gearbox (S tronic): changing ATF	146
3.112	Dual clutch gearbox (S tronic): changing ATF and renewing exchangeable ATF filter	146
3.113	Dual clutch gearbox (S tronic): changing ATF and renewing exchangeable ATF filter (if fitted)	146
3.114	Interior mirror: calibrating compass	146
3.115	Instrument cluster: resetting driver information system	147
3.116	Poly V-belt for ancillaries: renewing	147
3.117	Toothed belt for coolant pump drive: checking	147
3.118	Toothed belt for camshaft drive: renewing	148
3.119	Toothed belt for camshaft drive and tensioning roller: renewing	148
4	Exhaust emissions test	149
4.1	Petrol engines: performing exhaust emissions test	149
4.2	Diesel engines: performing exhaust emissions test	159
5	Periodic technical inspection (PTI)	172