

Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on the high-voltage system	1
1.2 Safety precautions when working in the vicinity of high-voltage components	2
1.3 Safety precautions when working on vehicles with start/stop system	2
1.4 Safety precautions when using testers and measuring instruments during a road test	2
2 Repair instructions	4
2.1 Identification plates	4
2.2 Use of impact wrenches	4
2.3 Rules for cleanliness	5
2.4 Contact corrosion	5
2.5 Routing and attachment of pipes, hoses and wiring	5
91 - Radio, telephone, navigation	7
1 Safety information	7
2 Infotainment system	8
2.1 Layout - infotainment system	8
2.2 Overview of fitting locations - infotainment system	15
2.3 Removing and installing infotainment system display	17
2.4 Removing and installing control unit 1 for information electronics J794	19
2.5 Removing and installing multimedia system operating unit E380	22
2.6 Removing and installing driver side volume regulator E67	23
2.7 Removing and installing multimedia system button module E817	24
3 Sound system	25
3.1 Layout - sound system	25
3.2 Overview of fitting locations - sound system	31
3.3 Removing and installing digital sound package control unit/amplifier	41
3.4 Removing and installing rear treble loudspeakers R14/R16	48
3.5 Removing and installing front treble loudspeakers R20/R22	51
3.6 Removing and installing front treble loudspeakers 2 R220/R221	53
3.7 Removing and installing front mid-range loudspeakers	54
3.8 Removing and installing front mid-range loudspeakers 2 R276/R277	55
3.9 Removing and installing rear bass loudspeakers R15/R17	57
3.10 Removing and installing front bass loudspeakers R21/R23	59
3.11 Removing and installing subwoofer R211	61
3.12 Removing and installing rear subwoofers R239/R240	64
3.13 Removing and installing effect loudspeakers	65
3.14 Removing and installing centre loudspeaker	68
3.15 Removing and installing internal microphone R74	70
4 Aerial systems	73
4.1 Layout - aerial systems	73
4.2 Overview of fitting locations - aerial systems	79
4.3 Removing and installing aerial amplifier	104
4.4 Removing and installing window aerial suppression filter C18	120
4.5 Removing and installing GPS aerial	123
4.6 Removing and installing GSM aerial	124
4.7 Removing and installing satellite tuner aerial R172	125
4.8 Removing and installing traffic data aerial	127
4.9 Removing and installing dedicated short-range communication aerial	128
4.10 Removing and installing emergency call module aerial R263	128
4.11 Removing and installing emergency call module aerial 2 R322	135
4.12 Removing and installing emergency call module aerial 3 R323	139

4.13	Removing and installing roof aerial	140
4.14	Removing and installing bumper aerials	141
4.15	Removing and installing LTE aerials	142
4.16	Removing and installing aerial for Bluetooth R152	148
4.17	Removing and installing wireless data transfer aerial R336/R366	149
4.18	Removing and installing near field communication control unit 2 J1170	153
4.19	Removing and installing near field communication aerial 2 R351	154
5	Telephone system	155
5.1	Layout - telephone	155
5.2	Overview of fitting locations - telephone system	167
5.3	Assembly overview - microphone unit	174
5.4	Removing and installing microphone unit in front roof module R164	182
5.5	Removing and installing control unit for seat belt microphone	184
5.6	Removing and installing aerial amplifier for mobile telephone R86	185
5.7	Removing and installing telephone bracket	187
6	Navigation system	188
6.1	Layout - navigation system	188
6.2	Overview of fitting locations - navigation system	196
6.3	Removing and installing chip card reader control unit	199
7	TV system	201
7.1	Layout - TV system	201
7.2	Overview of fitting locations - TV system	203
7.3	Removing and installing TV tuner	204
8	Reversing camera system	209
8.1	Layout - reversing camera system	209
8.2	Overview of fitting locations - reversing camera system	209
8.3	Removing and installing reversing camera R189	210
8.4	Removing and installing reversing camera system control unit J772	212
8.5	Calibrating reversing camera system	213
9	Multifunction steering wheel	220
9.1	Layout - multifunction steering wheel	220
9.2	Assembly overview - multi-function steering wheel	220
9.3	Removing and installing multifunction buttons in steering wheel E441/E440	222
9.4	Removing and installing tiptronic switches in steering wheel E439/E438	227
10	Connection for external multimedia devices	229
10.1	Layout - connection for external multimedia devices	229
10.2	Removing and installing connection for external multimedia devices	231
10.3	Removing and installing USB connection 1 U41	232
10.4	Removing and installing USB charging socket 1 U37	233
11	Overhead view camera	235
11.1	Layout - overhead view camera system	235
11.2	Overview of fitting locations - overhead view camera	236
11.3	Removing and installing control unit for overhead view camera J928	237
11.4	Removing and installing rear overhead view camera R246	238
11.5	Removing and installing front overhead view camera R243	240
11.6	Removing and installing right and left overhead view cameras R244/R245	241
11.7	Calibrating overhead view camera	241
12	Online services	246
12.1	Layout - online services	246
12.2	Overview of fitting locations - mobile online services	251
12.3	Removing and installing emergency call module control unit and communication unit J949	260
12.4	Removing and installing emergency battery, telematics A16	262
12.5	Removing and installing loudspeaker for emergency call module R335	263