

## Contents

|  |           |
|--|-----------|
| <b>00 - Technical data</b>   | <b>1</b>  |
| <b>1 Safety information</b>  | <b>1</b>  |
| 1.1 Safety precautions when working on vehicles with start/stop system                 | 1         |
| 1.2 Safety precautions when using testers and measuring instruments during a road test | 1         |
| 1.3 Safety precautions when working on the convertible roof                            | 1         |
| 1.4 Safety precautions when working on the cooling system                              | 2         |
| 1.5 Safety precautions when working on vehicles with natural gas systems               | 2         |
| <b>2 Repair instructions</b>   | <b>4</b>  |
| 2.1 Routing and attachment of pipes, hoses and wiring                                  | 4         |
| 2.2 Contact corrosion  | 4         |
| 2.3 Installation requirements for self-adhesive components                             | 4         |
| 2.4 General information on using adhesives   | 6         |
| 2.5 Secure threaded connections  | 7         |
| 2.6 Rules for cleanliness  | 7         |
| 2.7 Identification plates  | 7         |
| 2.8 Use of impact wrenches   | 8         |
| <b>50 - Body - front</b>   | <b>9</b>  |
| <b>1 Lock carrier</b>  | <b>9</b>  |
| 1.1 Assembly overview - lock carrier   | 9         |
| 1.2 Assembly overview - actuator   | 11        |
| 1.3 Removing and installing lock carrier   | 13        |
| 1.4 Removing and installing bracket for bumper cover                                   | 18        |
| 1.5 Removing and installing spring element for bracket for bumper cover                | 19        |
| 1.6 Removing and installing actuator   | 21        |
| <b>2 Wing</b>  | <b>22</b> |
| 2.1 Assembly overview - wing   | 22        |
| 2.2 Assembly overview - wing covers  | 24        |
| 2.3 Assembly overview - repair set for wing  | 26        |
| 2.4 Removing and installing wing   | 27        |
| 2.5 Removing and installing wing panel brace   | 29        |
| 2.6 Removing and installing connecting piece and wing panel brace (outside)            | 32        |
| 2.7 Removing and installing front cover for wing                                       | 35        |
| 2.8 Removing and installing rear cover for wing  | 36        |
| 2.9 Removing and installing closure plate  | 37        |
| <b>3 Bulkhead</b>  | <b>38</b> |
| 3.1 Assembly overview - bulkhead   | 38        |
| 3.2 Assembly overview - plenum chamber cover   | 38        |
| 3.3 Removing and installing plenum chamber bulkhead                                    | 39        |
| 3.4 Removing and installing plenum chamber cover                                       | 41        |
| 3.5 Removing and installing cover (side) for plenum chamber cover                      | 42        |
| <b>55 - Bonnet, rear lid</b>   | <b>44</b> |
| <b>1 Bonnet</b>  | <b>44</b> |
| 1.1 Assembly overview - bonnet   | 44        |
| 1.2 Assembly overview - insulation and impact guard on bonnet                          | 45        |
| 1.3 Assembly overview - Bowden cable   | 46        |
| 1.4 Removing and installing bonnet   | 48        |
| 1.5 Adjusting bonnet   | 49        |
| 1.6 Removing and installing hinges   | 54        |
| 1.7 Resetting hinge  | 55        |
| 1.8 Removing and installing striker  | 55        |
| 1.9 Removing and installing gas strut  | 56        |



|          |   |            |
|----------|---|------------|
| 1.10     | Releasing gas from gas strut  | 57         |
| 1.11     | Removing and installing insulation  | 57         |
| 1.12     | Removing and installing impact guard  | 58         |
| 1.13     | Removing and installing Bowden cable  | 59         |
| 1.14     | Removing and installing bonnet lock   | 63         |
| 1.15     | Removing and installing operating lever for bonnet lock                                     | 64         |
| 1.16     | Removing and installing operating lever for arrester  | 64         |
| 1.17     | Removing and installing mounting bracket for operating lever for bonnet lock                | 65         |
| 1.18     | Removing and installing mounting bracket with Bowden cable for operating lever for arrester | 65         |
| <b>2</b> | <b>Rear lid</b>   | <b>67</b>  |
| 2.1      | Assembly overview - rear lid  | 67         |
| 2.2      | Assembly overview - sensor-operated rear lid opening  | 78         |
| 2.3      | Assembly overview - rear lid power opening  | 80         |
| 2.4      | Removing and installing rear lid  | 83         |
| 2.5      | Adjusting rear lid  | 87         |
| 2.6      | Removing and installing handle trim   | 97         |
| 2.7      | Removing and installing hinges  | 98         |
| 2.8      | Removing and installing mounting for gas strut  | 100        |
| 2.9      | Removing and installing rear lid seal   | 101        |
| 2.10     | Removing and installing roof frame cover  | 104        |
| 2.11     | Removing and installing adjusting buffers   | 107        |
| 2.12     | Removing and installing stop for adjusting buffer   | 108        |
| 2.13     | Removing and installing gas strut   | 109        |
| 2.14     | Releasing gas from gas strut  | 110        |
| 2.15     | Removing and installing extension spring  | 110        |
| 2.16     | Removing and installing rear lid lock   | 110        |
| 2.17     | Removing and installing cable for rear lid lock   | 112        |
| 2.18     | Removing and installing lock cylinder   | 112        |
| 2.19     | Removing and installing striker   | 113        |
| 2.20     | Removing and installing power latching motor for rear lid V382                              | 113        |
| 2.21     | Removing and installing Bowden cable for power latching system                              | 114        |
| 2.22     | Removing and installing motor for rear lid V444 / V445                                      | 115        |
| 2.23     | Adapting motor for rear lid V444 / V445   | 117        |
| 2.24     | Preparing rear lid drive unit VX69 / rear lid drive unit 2 VX77 for disposal                | 118        |
| 2.25     | Removing and installing rear lid control unit J605  | 119        |
| 2.26     | Removing and installing rear lid power opening control unit J938                            | 120        |
| 2.27     | Removing and installing rear lid power opening sender G750 / G760                           | 122        |
| <b>3</b> | <b>Tank flap unit</b>   | <b>124</b> |
| 3.1      | Assembly overview - tank flap unit  | 124        |
| 3.2      | Removing and installing tank flap unit  | 124        |
| 3.3      | Removing and installing trim panel for tank flap  | 126        |
| 3.4      | Removing and installing drain hose for tank flap unit                                       | 126        |
| 3.5      | Removing and installing manual release cable  | 127        |
| <b>4</b> | <b>Convertible roof compartment lid</b>   | <b>128</b> |
| 4.1      | Assembly overview - convertible roof compartment lid  | 128        |
| 4.2      | Removing and installing convertible roof compartment lid                                    | 131        |
| 4.3      | Adjusting convertible roof compartment lid  | 133        |
| 4.4      | Removing and installing convertible roof compartment seal                                   | 137        |
| 4.5      | Removing and installing mounting for outer convertible roof compartment seal                | 137        |
| 4.6      | Removing and installing hinge for convertible roof compartment lid                          | 138        |
| 4.7      | Removing and installing adjusting buffer  | 138        |
| 4.8      | Removing and installing bump stop   | 139        |
| 4.9      | Removing and installing striker   | 139        |
| 4.10     | Removing and installing lock unit for convertible roof compartment lid                      | 139        |
| 4.11     | Removing and installing trim for convertible roof compartment lid                           | 140        |

|  |            |
|--|------------|
| <b>57 - Front doors, door components, central locking</b>  | <b>141</b> |
| <b>1 Door</b>  | <b>141</b> |
| 1.1 Assembly overview - door   | 141        |
| 1.2 Assembly overview - door seals   | 143        |
| 1.3 Removing and installing door   | 147        |
| 1.4 Adjusting door   | 147        |
| 1.5 Removing and installing door arrester  | 154        |
| 1.6 Removing and installing inner door seal  | 155        |
| 1.7 Removing and installing retainer for inner door seal   | 158        |
| 1.8 Removing and installing door seal for roof trim strip  | 159        |
| 1.9 Removing and installing door seal at A-pillar  | 160        |
| 1.10 Removing and installing outer door seal   | 161        |
| <b>2 Door components</b>   | <b>174</b> |
| 2.1 Assembly overview - window regulator   | 174        |
| 2.2 Assembly overview - door handle and door lock  | 175        |
| 2.3 Assembly overview - window guides and window slot seals  | 177        |
| 2.4 Removing and installing window regulator   | 180        |
| 2.5 Removing and installing window regulator motor   | 182        |
| 2.6 Removing and installing door handle  | 183        |
| 2.7 Removing and installing door handle trim   | 184        |
| 2.8 Removing and installing trim strip for door handle   | 185        |
| 2.9 Removing and installing mounting bracket   | 185        |
| 2.10 Removing and installing operating cable for exterior door handle                                | 186        |
| 2.11 Removing and installing lock cylinder   | 187        |
| 2.12 Removing and installing housing   | 188        |
| 2.13 Removing and installing door lock   | 188        |
| 2.14 Removing and installing cover for door lock   | 189        |
| 2.15 Removing and installing striker   | 190        |
| 2.16 Removing and installing operating cable for interior door handle                                | 190        |
| 2.17 Removing and installing inner door cover  | 190        |
| 2.18 Removing and installing window guide  | 191        |
| 2.19 Removing and installing window guide  | 192        |
| 2.20 Removing and installing inner window slot seal  | 192        |
| 2.21 Removing and installing outer window slot seal  | 194        |
| <b>3 Central locking system</b>  | <b>197</b> |
| 3.1 Overview of fitting locations - central locking system   | 197        |
| 3.2 Removing and installing driver door control unit J386 and front passenger door control unit J387 | 201        |
| 3.3 Removing and installing rear left door control unit J388 and rear right door control unit J389   | 201        |
| 3.4 Removing and installing convenience system central control unit J393                             | 202        |
| 3.5 Removing and installing bonnet contact switch F266   | 203        |
| 3.6 Removing and installing tank filler flap locking motor V155                                      | 203        |
| <b>58 - Rear doors, door components</b>  | <b>205</b> |
| <b>1 Door</b>  | <b>205</b> |
| 1.1 Assembly overview - door   | 205        |
| 1.2 Assembly overview - door seals   | 209        |
| 1.3 Removing and installing door   | 211        |
| 1.4 Adjusting door   | 211        |
| 1.5 Removing and installing door arrester  | 218        |
| 1.6 Removing and installing inner door seal  | 219        |
| 1.7 Removing and installing retainer for inner door seal   | 220        |
| 1.8 Removing and installing outer door seal  | 222        |
| <b>2 Door components</b>   | <b>235</b> |



|           |  |            |
|-----------|--|------------|
| 2.1       | Assembly overview - window regulator                                 | 235        |
| 2.2       | Assembly overview - door handle and door lock                        | 239        |
| 2.3       | Assembly overview - window guides and window slot seals              | 241        |
| 2.4       | Removing and installing window regulator                             | 244        |
| 2.5       | Removing and installing mounting for side window                     | 249        |
| 2.6       | Removing and installing window regulator motor                       | 250        |
| 2.7       | Removing and installing door handle                                  | 251        |
| 2.8       | Removing and installing door handle trim                             | 251        |
| 2.9       | Removing and installing trim strip for door handle                   | 253        |
| 2.10      | Removing and installing mounting bracket                             | 253        |
| 2.11      | Removing and installing operating cable for exterior door handle     | 255        |
| 2.12      | Removing and installing housing                                      | 256        |
| 2.13      | Removing and installing door lock                                    | 256        |
| 2.14      | Removing and installing striker                                      | 257        |
| 2.15      | Removing and installing operating cable for interior door handle     | 258        |
| 2.16      | Removing and installing inner door cover                             | 258        |
| 2.17      | Removing and installing window guide                                 | 260        |
| 2.18      | Removing and installing window guide                                 | 260        |
| 2.19      | Removing and installing inner window slot seal                       | 261        |
| 2.20      | Removing and installing outer window slot seal                       | 264        |
| <b>60</b> | <b>- Sunroof</b>   | <b>267</b> |
| <b>1</b>  | <b>Repair instructions</b>   | <b>267</b> |
| 1.1       | Minimum drying times for bonded sunroofs                             | 267        |
| 1.2       | Tools and materials required for installation and removal            | 267        |
| 1.3       | Preparing new glass trim for installation                            | 270        |
| 1.4       | Preparing a new sunroof frame for installation                       | 272        |
| 1.5       | Preparing body flange for installation                               | 273        |
| 1.6       | Cleaning off adhesive sealant  | 275        |
| <b>2</b>  | <b>Sliding sunroof</b>   | <b>277</b> |
| 2.1       | Assembly overview - sliding sunroof                                  | 277        |
| 2.2       | Assembly overview - adhesive bead on sliding sunroof                 | 288        |
| 2.3       | Assembly overview - sunroof roller blind                             | 292        |
| 2.4       | Assembly overview - wind deflector                                   | 296        |
| 2.5       | Removing and installing sliding sunroof frame                        | 299        |
| 2.6       | Removing and installing drain pipe                                   | 314        |
| 2.7       | Removing and installing glass trim                                   | 315        |
| 2.8       | Removing and installing glass panel                                  | 317        |
| 2.9       | Adjusting glass panel  | 319        |
| 2.10      | Removing and installing sliding sunroof adjustment control unit J245 | 324        |
| 2.11      | Adapting sliding sunroof adjustment control unit J245                | 326        |
| 2.12      | Removing and installing sliding sunroof motor V1                     | 326        |
| 2.13      | Adapting sliding sunroof motor V1                                    | 327        |
| 2.14      | Removing and installing cable for sunroof drive                      | 328        |
| 2.15      | Removing and installing boot   | 329        |
| 2.16      | Removing and installing rubber strip                                 | 330        |
| 2.17      | Removing and installing side trim                                    | 331        |
| 2.18      | Removing and installing slide and tilt mechanism                     | 331        |
| 2.19      | Removing and installing sliding sunroof seals                        | 334        |
| 2.20      | Removing and installing sunroof roller blind                         | 338        |
| 2.21      | Removing and installing sunroof roller blind motor V260              | 346        |
| 2.22      | Adapting sunroof roller blind motor V260                             | 348        |
| 2.23      | Removing and installing sunroof sun blind                            | 349        |
| 2.24      | Removing and installing slide  | 349        |
| 2.25      | Removing and installing wind deflector                               | 350        |
| 2.26      | Removing and installing mounting for wind deflector                  | 354        |

|           |   |            |
|-----------|---|------------|
| 2.27      | Removing and installing spring for wind deflector                                       | 355        |
| 2.28      | Emergency opening   | 356        |
| <b>3</b>  | <b>Water drain hoses</b>  | <b>357</b> |
| 3.1       | Assembly overview - water drain hoses   | 357        |
| 3.2       | Cleaning water drain hoses  | 360        |
| 3.3       | Removing and installing water drain hoses   | 361        |
| <b>61</b> | <b>Convertible roof, hardtop, canopy</b>  | <b>366</b> |
| <b>1</b>  | <b>Convertible roof</b>   | <b>366</b> |
| 1.1       | Assembly overview - convertible roof  | 366        |
| 1.2       | Assembly overview - convertible roof frame  | 367        |
| 1.3       | Assembly overview - main mounting for convertible roof                                  | 368        |
| 1.4       | Assembly overview - convertible roof locking mechanism                                  | 369        |
| 1.5       | Removing and installing convertible roof  | 371        |
| 1.6       | Removing and installing retaining plate for convertible roof                            | 373        |
| 1.7       | Removing and installing convertible roof locking mechanism                              | 373        |
| 1.8       | Removing and installing convertible roof locking element                                | 374        |
| 1.9       | Removing and installing mounting with convertible roof lock motor V223                  | 374        |
| 1.10      | Service position of convertible roof and convertible roof compartment lid               | 375        |
| 1.11      | Manual operation  | 376        |
| <b>2</b>  | <b>Convertible roof cover</b>   | <b>377</b> |
| 2.1       | Assembly overview - convertible roof cover and convertible roof headliner               | 377        |
| 2.2       | Assembly overview - tensioning cables and control cables for convertible roof cover     | 378        |
| 2.3       | Assembly overview - tensioning cables and control cables for convertible roof headliner | 379        |
| 2.4       | Assembly overview - tensioning and control cable repair kit                             | 380        |
| 2.5       | Removing and installing convertible roof cover  | 384        |
| 2.6       | Removing and installing convertible roof headliner                                      | 388        |
| 2.7       | Removing and installing tensioning cable for convertible roof cover                     | 392        |
| 2.8       | Removing and installing tensioning cable for rear window operating lever                | 394        |
| 2.9       | Procedure for repairing tensioning and control cables                                   | 395        |
| <b>3</b>  | <b>Attachments</b>  | <b>398</b> |
| 3.1       | Assembly overview - convertible roof seals  | 398        |
| 3.2       | Assembly overview - convertible roof trim   | 400        |
| 3.3       | Assembly overview - convertible roof frame attachments                                  | 400        |
| 3.4       | Removing and installing convertible roof seals  | 401        |
| 3.5       | Removing and installing convertible roof trim   | 404        |
| 3.6       | Removing and installing connecting rod  | 405        |
| 3.7       | Removing and installing damper  | 406        |
| 3.8       | Removing and installing mounting for interior light (rear)                              | 406        |
| 3.9       | Removing and installing rear window operating lever                                     | 407        |
| <b>4</b>  | <b>Hydraulic system</b>   | <b>408</b> |
| 4.1       | Overview of fitting locations - hydraulic system  | 408        |
| 4.2       | Assembly overview - hydraulic system  | 409        |
| 4.3       | Assembly overview - hydraulic pump  | 411        |
| 4.4       | Removing and installing hydraulic pump  | 413        |
| 4.5       | Removing and installing hydraulic pump with hydraulic cylinders                         | 413        |
| 4.6       | Removing and installing hydraulic pump motor  | 416        |
| 4.7       | Removing and installing hydraulic cylinders   | 418        |
| 4.8       | Removing and installing hydraulic line  | 420        |
| 4.9       | Checking fluid level in hydraulic system  | 422        |
| 4.10      | Filling and bleeding hydraulic system   | 423        |
| <b>5</b>  | <b>Electrical and electronic components</b>   | <b>426</b> |
| 5.1       | Overview of fitting locations - electrical and electronic components                    | 426        |
| 5.2       | Removing and installing convertible roof actuation control unit J256                    | 430        |



|           |   |            |
|-----------|---|------------|
| 5.3       | Removing and installing convertible roof latch open switch F294 / convertible roof latch closed switch F295             | 431        |
| 5.4       | Removing and installing convertible roof stowed switch F171 / convertible roof front switch F202                        | 431        |
| 5.5       | Removing and installing tensioning strut top switch F408 / tensioning strut stowed switch, left F419                    | 432        |
| 5.6       | Removing and installing tensioning strut intermediate position switch F518 / tensioning strut stowed switch, right F420 | 434        |
| 5.7       | Removing and installing convertible roof box lid open switch F407   | 436        |
| 5.8       | Removing and installing rear ultrasonic sensor for passenger compartment monitoring system G981 / G982                  | 437        |
| <b>63</b> | <b>- Bumpers</b>  | <b>439</b> |
| <b>1</b>  | <b>Front bumper</b>   | <b>440</b> |
| 1.1       | Assembly overview - bumper cover  | 440        |
| 1.2       | Assembly overview - reflector   | 467        |
| 1.3       | Assembly overview - bumper carrier  | 468        |
| 1.4       | Removing and installing bumper cover  | 470        |
| 1.5       | Adjusting bumper cover  | 472        |
| 1.6       | Removing and installing side panel of bumper cover  | 473        |
| 1.7       | Removing and installing bumper cover mounting   | 473        |
| 1.8       | Removing and installing cover for headlight washer jet  | 474        |
| 1.9       | Removing and installing grille trim   | 474        |
| 1.10      | Removing and installing centre air intake grille  | 476        |
| 1.11      | Removing and installing side air intake grille  | 481        |
| 1.12      | Removing and installing side air intake grille - RS 4/RS 5 from product upgrade onwards                                 | 484        |
| 1.13      | Removing and installing trim for side air intake grille   | 484        |
| 1.14      | Removing and installing trim for air duct   | 485        |
| 1.15      | Removing and installing lower side air intake grille  | 486        |
| 1.16      | Removing and installing air duct  | 486        |
| 1.17      | Removing and installing front spoiler   | 490        |
| 1.18      | Removing and installing lower part of spoiler   | 491        |
| 1.19      | Removing and installing spoiler (side)  | 494        |
| 1.20      | Removing and installing trim strip  | 495        |
| 1.21      | Removing and installing trim strip (centre)   | 495        |
| 1.22      | Removing and installing trim strip (side)   | 495        |
| 1.23      | Removing and installing underbody guard   | 496        |
| 1.24      | Removing and installing closure plate for bumper cover  | 498        |
| 1.25      | Removing and installing reflector   | 500        |
| 1.26      | Removing and installing lock carrier cover  | 500        |
| 1.27      | Removing and installing bumper carrier  | 502        |
| 1.28      | Removing and installing moulded foam insert   | 505        |
| 1.29      | Removing and installing mounting for moulded foam insert  | 507        |
| <b>2</b>  | <b>Rear bumper</b>  | <b>509</b> |
| 2.1       | Assembly overview - bumper cover  | 509        |
| 2.2       | Assembly overview - bumper cover mounting   | 538        |
| 2.3       | Assembly overview - bumper carrier  | 539        |
| 2.4       | Removing and installing bumper cover  | 542        |
| 2.5       | Removing and installing upper section of bumper cover   | 544        |
| 2.6       | Removing and installing lower section of bumper cover   | 545        |
| 2.7       | Removing and installing base plate for bumper cover   | 546        |
| 2.8       | Removing and installing underbody guard   | 551        |
| 2.9       | Removing and installing bumper cover mounting   | 552        |
| 2.10      | Removing and installing closure plate   | 553        |
| 2.11      | Removing and installing trim strip for bumper cover   | 554        |
| 2.12      | Removing and installing bumper cover trim   | 560        |
| 2.13      | Removing and installing tailpipe trim   | 563        |

|           |   |            |
|-----------|---|------------|
| 2.14      | Removing and installing reflector                                     | 566        |
| 2.15      | Removing and installing bumper carrier                                | 571        |
| <b>64</b> | <b>- Glazing</b>  | <b>573</b> |
| <b>1</b>  | <b>Repair instructions</b>  | <b>573</b> |
| 1.1       | Minimum drying times for bonded windows                               | 573        |
| 1.2       | Repairing windscreen  | 573        |
| 1.3       | Tools and materials required for installation and removal             | 574        |
| 1.4       | Preparing undamaged windows for installation                          | 578        |
| 1.5       | Preparing new windows for installation                                | 578        |
| 1.6       | Preparing body flange for installation                                | 580        |
| 1.7       | Cleaning off adhesive sealant   | 580        |
| <b>2</b>  | <b>Windscreen</b>   | <b>581</b> |
| 2.1       | Assembly overview - windscreen  | 581        |
| 2.2       | Removing and installing windscreen                                    | 584        |
| <b>3</b>  | <b>Rear window</b>  | <b>591</b> |
| 3.1       | Assembly overview - rear window                                       | 591        |
| 3.2       | Removing and installing rear window                                   | 594        |
| <b>4</b>  | <b>Side windows</b>   | <b>612</b> |
| 4.1       | Assembly overview - rear side window                                  | 612        |
| 4.2       | Removing and installing rear side window                              | 618        |
| 4.3       | Adjusting rear side window  | 629        |
| <b>5</b>  | <b>Door windows</b>   | <b>636</b> |
| 5.1       | Assembly overview - front door window                                 | 636        |
| 5.2       | Assembly overview - rear door window                                  | 637        |
| 5.3       | Removing and installing front door window                             | 640        |
| 5.4       | Adjusting front door window   | 642        |
| 5.5       | Removing and installing rear door window                              | 654        |
| 5.6       | Adjusting rear door window  | 657        |
| <b>66</b> | <b>- Exterior equipment</b>   | <b>664</b> |
| <b>1</b>  | <b>Radiator grille/front trim</b>                                     | <b>664</b> |
| 1.1       | Assembly overview - radiator grille                                   | 664        |
| 1.2       | Removing and installing radiator grille                               | 670        |
| 1.3       | Preparing new radiator grille for installation                        | 673        |
| 1.4       | Removing and installing closure plate                                 | 674        |
| 1.5       | Removing and installing number plate holder                           | 676        |
| 1.6       | Removing and installing mounting bracket for front parking aid sender | 680        |
| <b>2</b>  | <b>Spoilers</b>   | <b>681</b> |
| 2.1       | Assembly overview - spoilers  | 681        |
| 2.2       | Removing and installing spoiler                                       | 683        |
| 2.3       | Removing and installing spoiler (side)                                | 691        |
| <b>3</b>  | <b>Strips/trim panels/extensions</b>                                  | <b>694</b> |
| 3.1       | Assembly overview - trim strip and covers                             | 694        |
| 3.2       | Assembly overview - sill panel trim                                   | 700        |
| 3.3       | Assembly overview - side member trim                                  | 702        |
| 3.4       | Assembly overview - water deflector strip                             | 706        |
| 3.5       | Assembly overview - trim panel for A-pillar                           | 707        |
| 3.6       | Assembly overview - trim panel for B-pillar                           | 708        |
| 3.7       | Assembly overview - trim panel for C-pillar                           | 710        |
| 3.8       | Assembly overview - wheel arch covers                                 | 711        |
| 3.9       | Removing and installing trim strip                                    | 712        |
| 3.10      | Removing and installing wing trim panel                               | 721        |
| 3.11      | Removing and installing side panel trim                               | 722        |
| 3.12      | Removing and installing cover   | 723        |



|           |  |            |
|-----------|--|------------|
| 3.13      | Adjustment dimensions for covers                                 | 726        |
| 3.14      | Removing and installing sill panel trim                          | 727        |
| 3.15      | Removing and installing side member trim                         | 729        |
| 3.16      | Removing and installing bracket for side member trim             | 738        |
| 3.17      | Removing and installing mounting                                 | 738        |
| 3.18      | Removing and installing fastening strip for side member trim     | 739        |
| 3.19      | Removing and installing trim strip for side member trim          | 741        |
| 3.20      | Removing and installing water deflector strip                    | 743        |
| 3.21      | Removing and installing trim panel for A-pillar                  | 744        |
| 3.22      | Removing and installing trim panel for B-pillar on door          | 745        |
| 3.23      | Removing and installing trim panel for B-pillar                  | 746        |
| 3.24      | Removing and installing trim panel for C-pillar on door          | 747        |
| 3.25      | Removing and installing wheel arch covers                        | 748        |
| <b>4</b>  | <b>Noise insulation</b>  | <b>755</b> |
| 4.1       | Assembly overview - noise insulation                             | 755        |
| 4.2       | Removing and installing noise insulation                         | 759        |
| <b>5</b>  | <b>Underbody cladding</b>  | <b>761</b> |
| 5.1       | Assembly overview - underbody cladding                           | 761        |
| 5.2       | Assembly overview - underbody struts                             | 764        |
| 5.3       | Removing and installing front underbody cladding                 | 768        |
| 5.4       | Removing and installing underbody cladding for tunnel            | 768        |
| 5.5       | Removing and installing centre underbody cladding                | 768        |
| 5.6       | Removing and installing rear underbody cladding                  | 769        |
| 5.7       | Removing and installing underbody cladding for spare wheel       | 771        |
| 5.8       | Removing and installing side underbody cladding                  | 771        |
| 5.9       | Removing and installing tunnel cross-piece                       | 772        |
| 5.10      | Removing and installing diagonal struts                          | 772        |
| 5.11      | Removing and installing underbody guard                          | 775        |
| <b>6</b>  | <b>Roof strips/roof rails</b>                                    | <b>776</b> |
| 6.1       | Assembly overview - roof rail                                    | 776        |
| 6.2       | Removing and installing roof rail                                | 777        |
| 6.3       | Removing and installing compensation element                     | 778        |
| <b>7</b>  | <b>Exterior mirrors</b>  | <b>780</b> |
| 7.1       | Assembly overview - exterior mirror                              | 780        |
| 7.2       | Removing and installing exterior mirror                          | 782        |
| 7.3       | Removing and installing mirror glass                             | 783        |
| 7.4       | Removing and installing mirror adjustment unit                   | 785        |
| 7.5       | Removing and installing mirror cover                             | 785        |
| 7.6       | Removing and installing mirror trim                              | 785        |
| <b>8</b>  | <b>Wheel housing liners</b>                                      | <b>787</b> |
| 8.1       | Assembly overview - front wheel housing liner                    | 787        |
| 8.2       | Assembly overview - rear wheel housing liner                     | 790        |
| 8.3       | Removing and installing front wheel housing liner                | 791        |
| 8.4       | Removing and installing wheel spoiler (front)                    | 792        |
| 8.5       | Removing and installing drive shaft cover                        | 793        |
| 8.6       | Removing and installing rear wheel housing liner                 | 793        |
| 8.7       | Removing and installing spoiler for luggage compartment recess   | 794        |
| <b>9</b>  | <b>Lettering and badges</b>                                      | <b>795</b> |
| 9.1       | Assembly overview - lettering and badges                         | 795        |
| 9.2       | Dimensions - lettering and badges at rear                        | 796        |
| 9.3       | Dimensions - lettering and badges on sides                       | 801        |
| 9.4       | General notes on renewing lettering and badges                   | 803        |
| 9.5       | Renewing lettering and badges on side                            | 804        |
| 9.6       | Removing and installing lettering and badges for radiator grille | 806        |
| <b>10</b> | <b>Towing bracket</b>  | <b>813</b> |



|           |   |            |
|-----------|---|------------|
| 10.1      | Assembly overview - towing bracket                                  | 813        |
| 10.2      | Removing and installing trailer detector control unit J345          | 814        |
| 10.3      | Removing and installing trailer articulation angle sensor G820      | 814        |
| <b>11</b> | <b>Heat shields</b>   | <b>816</b> |
| 11.1      | Overview of fitting locations - heat shields                        | 816        |
| 11.2      | Assembly overview - heat shields                                    | 818        |
| 11.3      | Removing and installing heat shield on bonnet                       | 822        |
| 11.4      | Removing and installing heat shield (front) for longitudinal member | 823        |
| 11.5      | Removing and installing heat shield (rear) for longitudinal member  | 824        |
| 11.6      | Removing and installing heat shield for plenum chamber bulkhead     | 824        |
| 11.7      | Removing and installing heat shield (top front) for tunnel          | 825        |
| 11.8      | Removing and installing heat shield for tunnel (gearbox)            | 827        |
| 11.9      | Removing and installing heat shield for propshaft                   | 828        |
| 11.10     | Removing and installing heat shield for exhaust system (centre)     | 828        |
| 11.11     | Removing and installing heat shield for luggage compartment recess  | 830        |
| 11.12     | Removing and installing heat shield for rear silencer               | 830        |