

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 General notes</b> .....	<b>1</b>
1.1 Type plates .....	1
1.2 Notes on operation of auxiliary/supplementary heater on vehicles with diesel engine .....	2
1.3 Starting conditions for auxiliary/supplementary heater .....	2
1.4 Notes on auxiliary/supplementary heater .....	3
1.5 Operating sequence for auxiliary/supplementary heater .....	11
1.6 Operation of heater coolant shut-off valve N279 .....	15
1.7 Rules for cleanliness when working on the auxiliary/supplementary heater and fuel system .....	16
1.8 Overview of components for auxiliary/supplementary heater in vehicle .....	18
<b>2 Safety precautions</b> .....	<b>19</b>
2.1 Safety precautions when working on the fuel system .....	19
2.2 Safety precautions when working on vehicles with start/stop system .....	19
2.3 Safety precautions when using testers and measuring instruments during a road test .....	20
2.4 Safety precautions when working on the cooling system .....	20
2.5 Safety precautions when working on vehicles with auxiliary/supplementary heater .....	20
<b>3 Repair instructions</b> .....	<b>22</b>
3.1 Rules for cleanliness .....	22
3.2 General notes .....	22
3.3 General repair instructions .....	23
3.4 Contact corrosion .....	24
3.5 Checking heating output .....	24
3.6 Routing and attaching pipes, hoses and wiring .....	24
3.7 Notes on general repairs .....	24
<b>82 - Auxiliary heating</b> .....	<b>26</b>
<b>1 Overview of fitting locations - auxiliary/supplementary heater</b> .....	<b>26</b>
1.1 Overview of fitting locations - components not located in passenger compartment .....	26
1.2 Overview of fitting locations - components in passenger compartment (front) .....	33
<b>2 Auxiliary/supplementary heater</b> .....	<b>39</b>
2.1 General notes .....	39
2.2 Overview of fitting locations - auxiliary/supplementary heater .....	40
2.3 Exploded view - components inside auxiliary/supplementary heater .....	48
2.4 Removing and installing auxiliary/supplementary heater .....	51
2.5 Dismantling and assembling auxiliary/supplementary heater .....	62
2.6 Removing and installing air intake silencer .....	70
2.7 Removing and installing circulation pump V55 .....	71
2.8 Removing and installing exhaust system for auxiliary/supplementary heater .....	74
2.9 Removing and installing temperature sensor G18 and temperature sensor 2 for supplementary and auxiliary heating G587 .....	77
2.10 Pin assignment for auxiliary/supplementary heater .....	79
2.11 Checking electrical components on auxiliary/supplementary heater .....	80
<b>3 Coolant circuit with auxiliary/supplementary heater</b> .....	<b>88</b>
3.1 Connection diagram - coolant hoses .....	88
3.2 Removing and installing heater coolant shut-off valve, operation .....	95
3.3 Bleeding coolant circuit .....	104
3.4 Removing and installing non-return valve for coolant .....	106
<b>4 Fuel supply system</b> .....	<b>115</b>
4.1 Overview of fitting locations - fuel supply system .....	115
4.2 Fuel take-off from fuel tank .....	122
4.3 Releasing quick-release coupling at fuel line for auxiliary/supplementary heater .....	128
4.4 Routing of fuel line to auxiliary/supplementary heater .....	129



4.5	Checking CO2 content in exhaust gas of auxiliary/supplementary heater .....	130
4.6	Checking fuel delivery rate .....	134
4.7	Removing and installing metering pump V54 .....	138
<b>5</b>	<b>Auxiliary/supplementary heater control .....</b>	<b>142</b>
5.1	Functional description .....	142
5.2	Switching auxiliary/supplementary heater and auxiliary ventilation on and off .....	143
<b>6</b>	<b>Further control components .....</b>	<b>148</b>
6.1	Removing and installing ambient temperature sensor .....	148
6.2	Removing and installing remote control receiver for auxiliary heater R64 .....	148
6.3	Functional description of remote control for auxiliary/supplementary heater .....	149