

Contents

| | |
|--|------------|
| 00 - Technical data | 1 |
| 1 Identification | 1 |
| 1.1 Gearbox identification | 1 |
| 2 Safety information | 2 |
| 2.1 Safety precautions when working on vehicle | 2 |
| 2.2 Safety precautions when working on vehicles with start/stop system | 2 |
| 2.3 Safety precautions when using testers and measuring instruments during a road test | 2 |
| 3 Repair instructions | 4 |
| 3.1 Rules for cleanliness | 4 |
| 3.2 General notes | 4 |
| 3.3 General repair instructions | 5 |
| 3.4 Contact corrosion | 7 |
| 3.5 Use of impact wrenches | 7 |
| 4 Technical data | 9 |
| 4.1 Capacities | 9 |
| 4.2 Oil distribution | 10 |
| 5 Overview - power transmission | 12 |
| 32 - Torque converter | 13 |
| 1 Torque converter | 13 |
| 37 - Controls, housing | 14 |
| 1 Selector mechanism | 14 |
| 1.1 Assembly overview - selector mechanism | 14 |
| 1.2 Assembly overview - manual release mechanism for parking lock | 16 |
| 1.3 Checking selector mechanism | 17 |
| 1.4 Manual release from position P | 21 |
| 1.5 Removing and installing selector lever handle | 23 |
| 1.6 Detaching and attaching selector lever boot on selector lever handle | 25 |
| 1.7 Removing and installing selector mechanism | 26 |
| 1.8 Removing and installing manual release cable for parking lock | 27 |
| 1.9 Renewing seal for parking lock shaft | 33 |
| 2 Removing and installing gearbox | 37 |
| 2.1 Removing gearbox | 37 |
| 2.2 Installing gearbox | 78 |
| 2.3 Tightening torques for gearbox | 86 |
| 3 Assembly mountings | 88 |
| 3.1 Assembly overview - assembly mountings | 88 |
| 3.2 Removing and installing tunnel cross member | 89 |
| 4 Transporting gearbox | 94 |
| 5 Securing to engine and gearbox support | 96 |
| 6 ATF circuit | 97 |
| 6.1 Assembly overview - ATF circuit | 97 |
| 6.2 Removing and installing ATF cooler | 100 |
| 6.3 Removing and installing ATF lines | 101 |
| 7 ATF | 104 |
| 7.1 Overview of fitting locations - drain and inspection plugs | 104 |
| 7.2 Tools for filling ATF | 104 |
| 7.3 Checking ATF level | 106 |
| 7.4 Draining and filling ATF | 109 |



| | |
|---|------------|
| 38 - Gears, control | 112 |
| 1 ATF system | 112 |
| 1.1 Removing and installing oil pan | 112 |
| 2 Mechatronic unit | 114 |
| 39 - Final drive - front differential | 115 |
| 1 Final drive | 115 |
| 1.1 Assembly overview - final drive | 115 |
| 1.2 Removing and installing O-ring on cover for front final drive | 118 |
| 2 Gear oil | 120 |
| 2.1 Checking gear oil level | 120 |
| 2.2 Draining and filling gear oil | 127 |
| 3 Gear oil cooler and pipes | 141 |
| 3.1 Removing and installing gear oil cooler | 141 |
| 4 Oil seals | 144 |
| 4.1 Renewing left oil seal | 144 |
| 4.2 Renewing right oil seal | 147 |
| 5 Differential | 149 |
| 5.1 Removing and installing left flange shaft | 149 |
| 5.2 Removing and installing right flange shaft | 151 |
| 6 Centre differential | 154 |
| 7 Gearbox control system | 155 |
| 7.1 Overview of fitting locations - gearbox control system | 155 |