

Contents

| | |
|--|-----------|
| 00 - Technical data | 1 |
| 1 Identification | 1 |
| 1.1 Engine number/engine data | 1 |
| 2 Safety information | 2 |
| 2.1 Safety precautions when working on the high-voltage system | 2 |
| 2.2 Safety precautions when working in the vicinity of high-voltage components | 3 |
| 2.3 Safety precautions when working on the fuel supply system | 3 |
| 2.4 Safety precautions when working on vehicles with start/stop system | 4 |
| 2.5 Safety precautions when using testers and measuring instruments during a road test | 4 |
| 2.6 Safety precautions when working on the cooling system | 4 |
| 2.7 Safety precautions when working on the exhaust system | 5 |
| 2.8 Safety precautions when working on the ignition system | 5 |
| 3 Repair instructions | 6 |
| 3.1 Identification plates | 6 |
| 3.2 Use of impact wrenches | 6 |
| 3.3 Safety precautions when working on the subframe | 7 |
| 3.4 Rules for cleanliness | 7 |
| 3.5 Performing adaptations after renewing a component | 8 |
| 3.6 General notes | 9 |
| 3.7 General repair instructions | 9 |
| 3.8 Foreign material in engine | 10 |
| 3.9 Cleaning engine | 10 |
| 3.10 Contact corrosion | 10 |
| 3.11 Routing and attachment of pipes, hoses and wiring | 10 |
| 3.12 Nuts, bolts | 11 |
| 3.13 Installing radiators and condensers | 11 |
| 3.14 Checking vacuum system | 11 |
| 10 - Removing and installing engine | 13 |
| 1 Safety information | 13 |
| 2 Removing and installing engine | 14 |
| 2.1 Removing engine | 14 |
| 2.2 Securing engine to engine and gearbox support | 14 |
| 2.3 Installing engine | 15 |
| 3 Assembly mountings | 16 |
| 4 Engine cover panel | 17 |
| 4.1 Removing and installing engine cover panel | 17 |
| 13 - Crankshaft group | 18 |
| 1 Safety information | 18 |
| 2 Cylinder block (pulley end) | 19 |
| 2.1 Assembly overview - cylinder block (pulley end) | 19 |
| 2.2 Removing and installing poly V-belt | 28 |
| 2.3 Removing and installing poly V-belt tensioner | 30 |
| 2.4 Removing and installing vibration damper | 34 |
| 2.5 Removing and installing bracket for ancillaries | 51 |
| 2.6 Removing and installing engine support | 58 |
| 3 Cylinder block (gearbox end) | 59 |
| 3.1 Assembly overview - cylinder block (gearbox end) | 59 |
| 3.2 Removing and installing drive plate | 62 |
| 3.3 Removing and installing dual-mass flywheel | 64 |
| 3.4 Removing and installing sealing flange (gearbox end) | 66 |



| | | |
|-----------|---|------------|
| 3.5 | Renewing needle bearing in drive plate | 69 |
| 4 | Crankshaft | 72 |
| 4.1 | Assembly overview - crankshaft | 72 |
| 4.2 | Crankshaft dimensions | 75 |
| 4.3 | Allocation of main bearing shells | 75 |
| 4.4 | Measuring axial clearance of crankshaft | 77 |
| 4.5 | Measuring radial clearance of crankshaft | 78 |
| 4.6 | Removing and installing sender wheel | 79 |
| 5 | Balance shaft | 81 |
| 5.1 | Assembly overview - balance shaft | 81 |
| 5.2 | Removing and installing balance shaft | 84 |
| 5.3 | Renewing oil seal for balance shaft (inlet side) | 89 |
| 6 | Pistons and conrods | 91 |
| 6.1 | Assembly overview - pistons and conrods | 91 |
| 6.2 | Removing and installing pistons | 96 |
| 6.3 | Removing and installing oil spray jets | 98 |
| 6.4 | Checking pistons and cylinder bores | 100 |
| 6.5 | Separating parts of new conrod | 102 |
| 6.6 | Checking radial clearance of conrod bearings | 103 |
| 15 | Cylinder head, valve gear | 104 |
| 1 | Safety information | 104 |
| 2 | Timing chain cover | 105 |
| 2.1 | Assembly overview - timing chain cover | 105 |
| 2.2 | Removing and installing timing chain cover | 109 |
| 2.3 | Renewing oil seal for vibration damper | 115 |
| 3 | Chain drive | 118 |
| 3.1 | Assembly overview - camshaft timing chains | 118 |
| 3.2 | Assembly overview - drive chain for balance shaft | 121 |
| 3.3 | Removing and installing bearing saddle | 124 |
| 3.4 | Removing and installing camshaft timing chain | 130 |
| 3.5 | Checking timing chain | 148 |
| 3.6 | Checking valve timing | 150 |
| 4 | Cylinder head | 156 |
| 4.1 | Assembly overview - cylinder head | 156 |
| 4.2 | Removing and installing cylinder head | 160 |
| 4.3 | Checking compression | 167 |
| 5 | Valve gear | 172 |
| 5.1 | Assembly overview - valve gear | 172 |
| 5.2 | Removing and installing camshaft | 177 |
| 5.3 | Installing ball for slider | 199 |
| 5.4 | Removing and installing cam adjustment actuators | 200 |
| 5.5 | Removing and installing camshaft control valve 1 N205 | 201 |
| 5.6 | Removing and installing valve stem oil seals | 202 |
| 6 | Inlet and exhaust valves | 215 |
| 6.1 | Checking valve guides | 215 |
| 6.2 | Checking valves | 216 |
| 6.3 | Valve dimensions | 216 |
| 17 | Lubrication | 217 |
| 1 | Safety information | 217 |
| 2 | Sump/oil pump | 218 |
| 2.1 | Assembly overview - sump/oil pump | 218 |
| 2.2 | Engine oil | 226 |

| | | |
|-----------|---|------------|
| 2.3 | Removing and installing lower part of sump | 226 |
| 2.4 | Removing and installing oil pump | 229 |
| 2.5 | Removing and installing upper part of sump | 232 |
| 2.6 | Removing and installing oil level and oil temperature sender G266 | 237 |
| 3 | Engine oil cooler | 239 |
| 3.1 | Assembly overview - engine oil cooler | 239 |
| 3.2 | Removing and installing engine oil cooler | 239 |
| 3.3 | Removing and installing mechanical switching valve | 240 |
| 4 | Crankcase breather | 242 |
| 4.1 | Assembly overview - crankcase breather system | 242 |
| 4.2 | Removing and installing oil separator | 243 |
| 4.3 | Removing and installing tank breather pressure sensor 1 G950 | 245 |
| 5 | Oil filter/oil pressure switches | 246 |
| 5.1 | Assembly overview - oil filter | 246 |
| 5.2 | Assembly overview - oil pressure switches/oil pressure control | 247 |
| 5.3 | Removing and installing oil pressure switch F22 | 251 |
| 5.4 | Removing and installing oil pressure switch for reduced oil pressure F378 | 251 |
| 5.5 | Removing and installing stage 3 oil pressure switch F447 | 252 |
| 5.6 | Removing and installing valve for oil pressure control N428 | 256 |
| 5.7 | Removing and installing piston cooling jet control valve N522 | 257 |
| 5.8 | Checking oil pressure | 258 |
| 5.9 | Checking oil pressure and oil pressure switch | 261 |
| 19 | Cooling | 262 |
| 1 | Safety information | 262 |
| 2 | Cooling system/coolant | 263 |
| 2.1 | Connection diagram - coolant hoses | 263 |
| 2.2 | Checking cooling system for leaks | 263 |
| 2.3 | Draining and filling cooling system | 268 |
| 3 | Coolant pump/thermostat assembly | 271 |
| 3.1 | Assembly overview - coolant pump/thermostat | 271 |
| 3.2 | Assembly overview - electric coolant pump | 273 |
| 3.3 | Assembly overview - coolant temperature senders | 273 |
| 3.4 | Removing and installing electric coolant pump | 275 |
| 3.5 | Removing and installing coolant pump | 275 |
| 3.6 | Removing and installing toothed belt for coolant pump | 277 |
| 3.7 | Removing and installing actuator for engine temperature regulation N493 | 280 |
| 3.8 | Removing and installing coolant temperature sender G62 | 283 |
| 3.9 | Removing and installing radiator outlet coolant temperature sender G83 | 284 |
| 3.10 | Removing and installing coolant valves | 284 |
| 4 | Coolant pipes | 285 |
| 5 | Radiator/radiator fans | 286 |
| 21 | Turbocharging/supercharging | 287 |
| 1 | Safety information | 287 |
| 2 | Turbocharger | 288 |
| 2.1 | Assembly overview - turbocharger | 288 |
| 2.2 | Removing and installing turbocharger | 294 |
| 2.3 | Removing and installing turbocharger air recirculation valve N249 | 304 |
| 2.4 | Removing and installing charge pressure positioner V465 | 305 |
| 3 | Charge air system | 307 |
| 3.1 | Assembly overview - charge air system | 307 |
| 3.2 | Assembly overview - hose connections for charge air system | 307 |
| 3.3 | Removing and installing charge air cooler | 308 |



| | | |
|-----------|---|------------|
| 3.4 | Removing and installing charge pressure sender G31 | 308 |
| 3.5 | Checking charge air system for leaks | 308 |
| 24 | Mixture preparation - injection | 310 |
| 1 | Safety information | 310 |
| 2 | Injection system | 311 |
| 2.1 | Overview of fitting locations - injection system | 311 |
| 2.2 | Checking fuel system for leaks | 311 |
| 3 | Air filter | 312 |
| 4 | Intake manifold | 313 |
| 4.1 | Assembly overview - intake manifold | 313 |
| 4.2 | Removing and installing intake manifold | 316 |
| 4.3 | Removing and installing throttle valve module GX3 | 317 |
| 4.4 | Cleaning throttle valve module GX3 | 318 |
| 4.5 | Removing and installing intake manifold flap valve N316 | 319 |
| 4.6 | Checking intake manifold change-over function | 319 |
| 5 | Injectors | 322 |
| 5.1 | Assembly overview - fuel rail with injectors | 322 |
| 5.2 | Removing and installing fuel rail | 326 |
| 5.3 | Removing and installing injectors | 327 |
| 5.4 | Cleaning injectors | 343 |
| 6 | Senders and sensors | 345 |
| 6.1 | Removing and installing intake air temperature sender G42/intake manifold pressure sender G71 | 345 |
| 6.2 | Removing and installing fuel pressure sender G247 | 346 |
| 6.3 | Checking fuel pressure sender G247 | 347 |
| 6.4 | Removing and installing fuel pressure sender for low pressure G410 | 352 |
| 6.5 | Removing and installing pressure differential sender for particulate filter G1037 | 353 |
| 7 | High-pressure pump | 356 |
| 7.1 | Assembly overview - high-pressure pump | 356 |
| 7.2 | Removing and installing high-pressure pump | 362 |
| 7.3 | Removing and installing high-pressure pipe | 367 |
| 8 | Lambda probe | 373 |
| 8.1 | Assembly overview - Lambda probe | 373 |
| 8.2 | Removing and installing Lambda probe | 376 |
| 9 | Engine control unit | 381 |
| 26 | Exhaust system | 382 |
| 1 | Safety information | 382 |
| 2 | Exhaust pipes/silencers | 383 |
| 2.1 | Assembly overview - silencers | 383 |
| 2.2 | Separating exhaust pipes/silencers | 383 |
| 2.3 | Removing and installing front silencers | 383 |
| 2.4 | Removing and installing silencers | 383 |
| 2.5 | Stress-free alignment of exhaust system | 383 |
| 2.6 | Checking exhaust system for leaks | 383 |
| 3 | Emission control system | 384 |
| 3.1 | Assembly overview - emission control system | 384 |
| 3.2 | Removing and installing catalytic converter | 388 |
| 3.3 | Removing and installing particulate filter | 388 |
| 4 | Exhaust gas temperature regulation | 389 |
| 5 | Secondary air system | 390 |
| 5.1 | Assembly overview - secondary air system | 390 |
| 5.2 | Removing and installing secondary air pump motor V101 | 392 |

| | | |
|-----------|--|------------|
| 5.3 | Removing and installing secondary air inlet valve N112 | 393 |
| 5.4 | Removing and installing sender 1 for secondary air pressure G609 | 393 |
| 5.5 | Removing and installing resonator for secondary air system | 394 |
| 28 | - Ignition system | 396 |
| 1 | Safety information | 396 |
| 2 | Ignition system | 397 |
| 2.1 | Assembly overview - ignition system | 397 |
| 2.2 | Removing and installing ignition coils | 399 |
| 2.3 | Removing and installing knock sensor 1 G61 | 402 |
| 2.4 | Removing and installing Hall senders | 403 |
| 2.5 | Removing and installing engine speed sender G28 | 405 |