

## Contents

<b>00 - Technical data</b>	<b>1</b>
1 Identification	1
2 Safety information	2
3 Repair instructions	3
<b>10 - Removing and installing engine</b>	<b>4</b>
1 Removing and installing engine	4
1.1 Removing engine	4
1.2 Securing engine to engine and gearbox support	23
1.3 Installing engine	23
2 Assembly mountings	31
2.1 Assembly overview - assembly mountings	31
2.2 Supporting engine in installation position	34
2.3 Removing and installing engine mountings	36
2.4 Removing and installing gearbox mounting	39
3 Engine cover panel	41
<b>13 - Crankshaft group</b>	<b>42</b>
1 Cylinder block (pulley end)	42
1.1 Assembly overview - cylinder block (pulley end)	42
1.2 Assembly overview - sealing flange (pulley end)	42
1.3 Removing and installing poly V-belt	42
1.4 Removing and installing poly V-belt tensioner	42
1.5 Removing and installing vibration damper	42
1.6 Removing and installing bracket for ancillaries	42
1.7 Removing and installing engine support	43
1.8 Removing and installing sealing flange (pulley end)	47
2 Cylinder block (gearbox end)	48
3 Crankshaft	49
4 Pistons and conrods	50
<b>15 - Cylinder head, valve gear</b>	<b>51</b>
1 Toothed belt drive	51
2 Cylinder head	52
3 Valve gear	53
3.1 Assembly overview - valve gear	53
3.2 Removing and installing camshaft oil seal	53
3.3 Removing and installing valve stem oil seals	53
4 Inlet and exhaust valves	54
<b>17 - Lubrication</b>	<b>55</b>
1 Sump/oil pump	55
1.1 Assembly overview - sump/oil pump	55
1.2 Engine oil	55
1.3 Removing and installing sump	55
1.4 Removing and installing oil pump	55
1.5 Removing and installing oil level and oil temperature sender G266	55
2 Engine oil cooler	56
3 Oil filter/oil pressure switches	57
<b>19 - Cooling</b>	<b>58</b>



<b>1</b>	<b>Cooling system/coolant</b>	<b>58</b>
1.1	Connection diagram - coolant hoses	58
1.2	Checking cooling system for leaks	62
1.3	Draining and filling cooling system	62
1.4	Checking filling quality of cooling system	70
<b>2</b>	<b>Coolant pump/thermostat assembly</b>	<b>71</b>
2.1	Assembly overview - coolant pump/thermostat	71
2.2	Assembly overview - electric coolant pump	71
2.3	Assembly overview - coolant temperature senders	72
2.4	Removing and installing electric coolant pump	72
2.5	Removing and installing coolant pump	76
2.6	Removing and installing thermostat	76
2.7	Checking thermostat	76
2.8	Removing and installing coolant valve for cylinder head N489	76
2.9	Removing and installing coolant temperature sender G62	77
<b>3</b>	<b>Coolant pipes</b>	<b>78</b>
3.1	Assembly overview - coolant pipes	78
3.2	Removing and installing coolant pipes	80
3.3	Removing and installing coolant pipes for gearbox	97
<b>4</b>	<b>Radiator/radiator fan</b>	<b>99</b>
4.1	Exploded view - radiators/radiator fan	99
4.2	Removing and installing radiator	104
4.3	Removing and installing radiator blind (top)	110
4.4	Removing and installing radiator blind (bottom)	111
4.5	Removing and installing radiator blind control motor (top)	111
4.6	Removing and installing radiator blind control motor (bottom)	113
4.7	Removing and installing water radiator for charge air cooling circuit	115
4.8	Removing and installing radiator cowl	117
4.9	Removing and installing radiator fan V7	120
<b>21</b>	<b>- Turbocharging/supercharging</b>	<b>121</b>
1	Turbocharger	121
2	Charge air system	122
<b>23</b>	<b>- Mixture preparation - injection</b>	<b>123</b>
<b>1</b>	<b>Injection system</b>	<b>123</b>
1.1	Overview - fuel system	123
1.2	Overview of fitting locations - injection system	123
1.3	Filling and bleeding fuel system	132
1.4	Checking fuel system for leaks	132
<b>2</b>	<b>Vacuum system</b>	<b>133</b>
2.1	Connection diagram - vacuum system	133
2.2	Checking vacuum system	133
<b>3</b>	<b>Air filter</b>	<b>134</b>
3.1	Assembly overview - air filter housing	134
3.2	Removing and installing air filter housing	136
<b>4</b>	<b>Intake manifold</b>	<b>139</b>
<b>5</b>	<b>Injectors/high-pressure reservoir (rail)</b>	<b>140</b>
<b>6</b>	<b>High-pressure pump</b>	<b>141</b>
<b>7</b>	<b>Senders and sensors</b>	<b>142</b>
7.1	Removing and installing air mass meter G70	142
7.2	Removing and installing fuel temperature sender G81	143
7.3	Removing and installing fuel pressure sender G247	143
7.4	Checking fuel pressure regulating valve N276	143

7.5	Removing and installing fuel pressure regulating valve N276 .....	143
7.6	Removing and installing pressure differential sender G505 .....	144
<b>8</b>	<b>Lambda probe .....</b>	<b>145</b>
<b>9</b>	<b>Engine control unit .....</b>	<b>146</b>
9.1	Assembly overview - engine/motor control unit .....	146
9.2	Removing and installing engine control unit J623 .....	146
<b>26 - Exhaust system .....</b>		<b>148</b>
<b>1</b>	<b>Exhaust pipes/silencers .....</b>	<b>148</b>
1.1	Exploded view - silencers .....	148
1.2	Removing and installing front exhaust pipe .....	154
1.3	Separating exhaust pipes/silencers .....	158
1.4	Removing and installing silencers .....	159
1.5	Stress-free alignment of exhaust system .....	161
1.6	Checking exhaust system for leaks .....	162
<b>2</b>	<b>Emission control system .....</b>	<b>163</b>
<b>3</b>	<b>SCR (selective catalytic reduction) system .....</b>	<b>164</b>
3.1	Assembly overview - reducing agent tank .....	164
3.2	Draining reducing agent tank .....	166
3.3	Removing and installing reducing agent tank .....	170
3.4	Removing and installing injector for reducing agent N474 .....	173
3.5	Removing and installing control unit for reducing agent metering system J880 .....	173
3.6	Removing and installing reducing agent quality sensor G849 .....	174
<b>4</b>	<b>Exhaust gas temperature regulation .....</b>	<b>176</b>
<b>5</b>	<b>Exhaust gas recirculation .....</b>	<b>177</b>
<b>28 - Glow plug system .....</b>		<b>178</b>
<b>1</b>	<b>Glow plug system .....</b>	<b>178</b>
1.1	Assembly overview - glow plug system .....	178
1.2	Removing and installing glow plug .....	178
1.3	Removing and installing automatic glow period control unit J179 .....	178
1.4	Removing and installing Hall sender G40 .....	179
1.5	Removing and installing engine speed sender G28 .....	179