

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Identification</b>	<b>1</b>
1.1 Engine number/engine data	1
<b>2 Safety information</b>	<b>2</b>
2.1 Safety precautions when working on the fuel supply system	2
2.2 Safety precautions when working on vehicles with start/stop system	2
2.3 Safety precautions when using testers and measuring instruments during a road test	3
2.4 Safety precautions when working on the cooling system	3
2.5 Safety precautions when working on the exhaust system	3
2.6 Safety precautions when working on the SCR system	4
2.7 Safety precautions when working on the glow plug system	5
2.8 Safety precautions when working on the subframe	5
<b>3 Repair instructions</b>	<b>7</b>
3.1 Rules for cleanliness	7
3.2 General notes	7
3.3 General repair instructions	8
3.4 Performing adaptions after renewing a component	9
3.5 Cleaning engine	10
3.6 Nuts, bolts	10
3.7 Identification plates	10
3.8 Use of impact wrenches	11
3.9 Foreign material in engine	11
3.10 Contact corrosion	11
3.11 Routing and attachment of pipes, hoses and wiring	12
3.12 Installing radiators and condensers	12
<b>10 - Removing and installing engine</b>	<b>13</b>
<b>1 Removing and installing engine</b>	<b>13</b>
1.1 Removing engine	13
1.2 Securing engine to engine and gearbox support	13
1.3 Installing engine	14
<b>2 Assembly mountings</b>	<b>15</b>
<b>3 Engine cover panel</b>	<b>16</b>
3.1 Removing and installing engine cover panel	16
<b>13 - Crankshaft group</b>	<b>17</b>
<b>1 Cylinder block (pulley end)</b>	<b>17</b>
1.1 Assembly overview - cylinder block (pulley end)	17
1.2 Assembly overview - sealing flange (pulley end)	20
1.3 Removing and installing poly V-belt	22
1.4 Removing and installing poly V-belt tensioner	23
1.5 Removing and installing vibration damper	23
1.6 Removing and installing bracket for ancillaries	26
1.7 Removing and installing engine support	27
1.8 Removing and installing sealing flange (pulley end)	27
<b>2 Cylinder block (gearbox end)</b>	<b>31</b>
2.1 Assembly overview - cylinder block (gearbox end)	31
2.2 Removing and installing drive plate	32
2.3 Renewing cylinder block sealing cap (gearbox end)	34
2.4 Removing and installing sealing flange (gearbox end)	36
<b>3 Crankshaft</b>	<b>46</b>
3.1 Assembly overview - crankshaft	46



3.2	Crankshaft dimensions .....	46
3.3	Measuring axial clearance of crankshaft .....	47
<b>4</b>	<b>Pistons and conrods .....</b>	<b>48</b>
4.1	Assembly overview - pistons and conrods .....	48
4.2	Removing and installing pistons .....	52
4.3	Measuring piston projection at TDC .....	53
4.4	Checking pistons and cylinder bores .....	56
4.5	Separating parts of new conrod .....	58
4.6	Checking radial clearance of conrod bearings .....	58
<b>15 - Cylinder head, valve gear .....</b>	<b>60</b>	
<b>1</b>	<b>Toothed belt drive .....</b>	<b>60</b>
1.1	Assembly overview - toothed belt guard .....	60
1.2	Assembly overview - toothed belt .....	60
1.3	Removing and installing toothed belt guard .....	62
1.4	Detaching toothed belt from camshaft .....	65
1.5	Removing and installing toothed belt .....	72
<b>2</b>	<b>Cylinder head .....</b>	<b>85</b>
2.1	Assembly overview - cylinder head .....	85
2.2	Assembly overview - cylinder head cover .....	88
2.3	Removing and installing cylinder head .....	90
2.4	Removing and installing cylinder head cover .....	98
2.5	Removing and installing seals for injectors .....	100
2.6	Removing and installing camshaft housing .....	101
2.7	Checking compression .....	106
<b>3</b>	<b>Valve gear .....</b>	<b>109</b>
3.1	Assembly overview - valve gear .....	109
3.2	Removing and installing camshaft oil seal .....	111
3.3	Removing and installing valve stem oil seals .....	114
<b>4</b>	<b>Inlet and exhaust valves .....</b>	<b>125</b>
4.1	Checking valve guides .....	125
4.2	Checking valves .....	126
4.3	Valve dimensions .....	126
<b>17 - Lubrication .....</b>	<b>127</b>	
<b>1</b>	<b>Sump/oil pump .....</b>	<b>127</b>
1.1	Assembly overview - sump/oil pump .....	127
1.2	Engine oil .....	130
1.3	Removing and installing sump .....	130
1.4	Removing and installing oil pump .....	135
1.5	Removing and installing oil level and oil temperature sender G266 .....	135
<b>2</b>	<b>Engine oil cooler .....</b>	<b>137</b>
<b>3</b>	<b>Oil filter/oil pressure switches .....</b>	<b>138</b>
3.1	Assembly overview - oil filter housing/oil pressure switch .....	138
3.2	Removing and installing oil pressure switch F22 .....	140
3.3	Removing and installing oil pressure switch for reduced oil pressure F378 .....	142
3.4	Removing and installing oil filter housing .....	144
3.5	Removing and installing valve for oil pressure control N428 .....	147
3.6	Checking oil pressure .....	147
<b>19 - Cooling .....</b>	<b>149</b>	
<b>1</b>	<b>Cooling system/coolant .....</b>	<b>149</b>
1.1	Connection diagram - coolant hoses .....	149
1.2	Checking cooling system for leaks .....	149
1.3	Draining and filling cooling system .....	153

1.4	Checking filling quality .....	153
<b>2</b>	<b>Coolant pump/thermostat assembly .....</b>	<b>156</b>
2.1	Assembly overview - coolant pump/thermostat .....	156
2.2	Assembly overview - electric coolant pump .....	158
2.3	Assembly overview - coolant temperature senders .....	158
2.4	Removing and installing electric coolant pump .....	159
2.5	Removing and installing coolant pump .....	159
2.6	Removing and installing thermostat .....	160
2.7	Checking thermostat .....	160
2.8	Removing and installing coolant valve for cylinder head N489 .....	160
2.9	Removing and installing coolant temperature sender G62 .....	161
<b>3</b>	<b>Coolant pipes .....</b>	<b>164</b>
<b>4</b>	<b>Radiator/radiator fan .....</b>	<b>165</b>
<b>21</b>	<b>- Turbocharging/supercharging .....</b>	<b>166</b>
1	Turbocharger .....	166
1.1	Assembly overview - turbocharger .....	166
1.2	Removing and installing turbocharger .....	171
1.3	Renewing vacuum unit for turbocharger .....	176
<b>2</b>	<b>Charge air system .....</b>	<b>183</b>
2.1	Assembly overview - charge air system .....	183
2.2	Assembly overview - hose connections for charge air system .....	186
2.3	Removing and installing charge pressure sender G31 .....	186
2.4	Removing and installing charge air temperature sender .....	187
2.5	Checking charge air system for leaks .....	188
<b>23</b>	<b>- Mixture preparation - injection .....</b>	<b>194</b>
1	<b>Injection system .....</b>	<b>194</b>
1.1	Overview - fuel system .....	194
1.2	Overview of fitting locations - injection system .....	194
1.3	Filling and bleeding fuel system .....	194
1.4	Checking fuel system for leaks .....	195
<b>2</b>	<b>Vacuum system .....</b>	<b>196</b>
2.1	Connection diagram - vacuum system .....	196
2.2	Checking vacuum system .....	196
<b>3</b>	<b>Air filter .....</b>	<b>197</b>
<b>4</b>	<b>Intake manifold .....</b>	<b>198</b>
4.1	Assembly overview - intake manifold .....	198
4.2	Removing and installing throttle valve module J338 .....	202
4.3	Removing and installing intake manifold .....	204
<b>5</b>	<b>Injectors/high-pressure reservoir (rail) .....</b>	<b>210</b>
5.1	Assembly overview - injectors .....	210
5.2	Assembly overview - high-pressure reservoir (rail) .....	212
5.3	Checking injectors .....	214
5.4	Performing adaption of correction values for injectors .....	214
5.5	Checking return flow rate of injectors with engine running .....	216
5.6	Checking return flow rate of injectors at starter cranking speed .....	219
5.7	Checking for injectors sticking open .....	221
5.8	Removing and installing injectors .....	224
5.9	Removing and installing high-pressure pipes .....	228
5.10	Removing and installing high-pressure reservoir (rail) .....	231
<b>6</b>	<b>High-pressure pump .....</b>	<b>233</b>
6.1	Assembly overview - high-pressure pump .....	233
6.2	Removing and installing high-pressure pump .....	234



6.3	Checking fuel pressure regulating valve N276 for dirt/swarf if high-pressure pump is defective .....	239
<b>7</b>	<b>Senders and sensors .....</b>	<b>242</b>
7.1	Removing and installing air mass meter G70 .....	242
7.2	Removing and installing fuel temperature sender G81 .....	242
7.3	Removing and installing fuel pressure sender G247 .....	243
7.4	Checking fuel pressure regulating valve N276 .....	245
7.5	Removing and installing fuel pressure regulating valve N276 .....	247
7.6	Removing and installing pressure differential sender G505 .....	249
7.7	Removing and installing exhaust gas pressure sensor 1 G450 .....	250
<b>8</b>	<b>Lambda probe .....</b>	<b>252</b>
8.1	Assembly overview - Lambda probe .....	252
8.2	Removing and installing Lambda probe .....	254
8.3	Removing and installing NOx sender .....	256
<b>9</b>	<b>Engine control unit .....</b>	<b>260</b>
<b>26</b>	<b>- Exhaust system .....</b>	<b>261</b>
<b>1</b>	<b>Exhaust pipes/silencers .....</b>	<b>261</b>
1.1	Assembly overview - silencers .....	261
1.2	Removing and installing front exhaust pipe .....	261
1.3	Separating exhaust pipes/silencers .....	261
1.4	Removing and installing silencers .....	261
1.5	Stress-free alignment of exhaust system .....	261
1.6	Checking exhaust system for leaks .....	261
<b>2</b>	<b>Emission control system .....</b>	<b>262</b>
2.1	Assembly overview - emission control system .....	262
2.2	Removing and installing catalytic converter .....	264
2.3	Removing and installing emission control module .....	265
2.4	Removing and installing exhaust flap control unit J883 .....	276
<b>3</b>	<b>SCR (selective catalytic reduction) system .....</b>	<b>278</b>
3.1	Assembly overview - reducing agent tank .....	278
3.2	Assembly overview - control unit for SCR system .....	278
3.3	Assembly overview - delivery unit .....	278
3.4	Assembly overview - injector for reducing agent .....	278
3.5	Releasing pressure in SCR system .....	279
3.6	Disconnecting reducing agent supply line .....	280
3.7	Draining reducing agent tank .....	283
3.8	Removing and installing reducing agent tank .....	283
3.9	Removing and installing injector for reducing agent N474 .....	283
3.10	Removing and installing control unit for reducing agent metering system J880 .....	285
3.11	Removing and installing pump for reducing agent V437 .....	285
3.12	Removing and installing pressure sender for reducing agent metering system G686 .....	285
3.13	Removing and installing connection for SCR supply line .....	285
<b>4</b>	<b>Exhaust gas temperature regulation .....</b>	<b>286</b>
4.1	Assembly overview - exhaust gas temperature regulation .....	286
4.2	Removing and installing exhaust gas temperature senders .....	288
<b>5</b>	<b>Exhaust gas recirculation .....</b>	<b>295</b>
5.1	Assembly overview - exhaust gas recirculation system .....	295
5.2	Removing and installing exhaust gas recirculation control motor V338 .....	297
5.3	Removing and installing exhaust gas recirculation control motor 2 V339 .....	298
5.4	Removing and installing exhaust gas recirculation cooler .....	300
5.5	Checking exhaust gas recirculation cooler for leaks .....	302
5.6	Removing and installing exhaust gas recirculation temperature sensor G98 .....	306
<b>28</b>	<b>- Glow plug system .....</b>	<b>309</b>

---

<b>1</b>	<b>Glow plug system</b>	<b>309</b>
1.1	Assembly overview - glow plug system	309
1.2	Removing and installing glow plug	311
1.3	Removing and installing automatic glow period control unit J179	315
1.4	Removing and installing Hall sender G40	316
1.5	Removing and installing engine speed sender G28	316