

Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on vehicles with natural gas systems	1
1.2 Safety precautions when working on the fuel system	3
1.3 Safety precautions when working on vehicles with start/stop system	4
1.4 Safety precautions when using testers and measuring instruments during a road test	4
2 Repair instructions	5
2.1 Rules for cleanliness	5
2.2 General repair instructions	5
2.3 Test conditions	6
2.4 Contact corrosion	6
20 - Fuel supply system	7
1 Fuel system	7
1.1 Overview of fitting locations - fuel system	7
2 Fuel tank	9
2.1 Exploded view - fuel tank	9
2.2 Assembly overview - natural gas fuel tank	11
2.3 Exploded view - shut-off mechanism for tank	18
2.4 Assembly overview - filler neck	20
2.5 Draining fuel tank	21
2.6 Discharging natural gas fuel tanks	23
2.7 Dissipating pressure in high-pressure natural gas pipe	41
2.8 Removing and installing natural gas fuel tanks with mounting bracket	44
2.9 Removing natural gas fuel tanks with mounting bracket from scissor-type assembly platform	53
2.10 Removing and installing fuel tanks	56
2.11 Removing and installing solenoid on fuel tank shut-off valve N361/N362	87
2.12 Removing and installing filler connection	90
2.13 Determining residual pressure in natural gas fuel tank	93
3 Fuel delivery unit/fuel gauge sender	94
3.1 Exploded view - fuel delivery unit/fuel gauge sender	94
4 Plug-in connectors	97
4.1 Disconnecting plug-in connectors	97
5 Activated charcoal filter system	105
5.1 Connection diagram - activated charcoal filter system	105
5.2 Assembly overview - activated charcoal filter system	105
5.3 Removing and installing activated charcoal filter	106
6 Accelerator mechanism	108
6.1 Assembly overview - accelerator pedal module	108
6.2 Removing and installing accelerator pedal module with accelerator position sender G79/G185	109
7 Fuel pump	110
7.1 Checking fuel system pressurisation pump G6	110
7.2 Removing and installing fuel pump control unit J538	115