

## Contents

|  |           |
|--|-----------|
| <b>00 - Technical data</b> .....   | <b>1</b>  |
| <b>1 Technical data</b> .....  | <b>1</b>  |
| 1.1 Running gear .....   | 1         |
| 1.2 Steering .....   | 1         |
| <b>2 General</b> .....   | <b>2</b>  |
| 2.1 General information .....  | 2         |
| 2.2 Contact corrosion .....  | 2         |
| 2.3 Repairing thread in longitudinal member .....                                | 3         |
| <b>3 Proper disposal of oil and gas-filled components</b> .....                  | <b>4</b>  |
| 3.1 Releasing gas from shock absorbers .....                                     | 4         |
| 3.2 Draining steering damper .....   | 5         |
| 3.3 Draining power-assisted steering box .....                                   | 5         |
| <b>4 Checking shock absorbers</b> .....  | <b>6</b>  |
| 4.1 Shock absorber leakage .....   | 6         |
| 4.2 Shock absorber noise .....   | 6         |
| 4.3 Checking shock absorber following removal .....                              | 6         |
| 4.4 Checking shock absorbers on shock tester .....                               | 7         |
| <b>40 - Front suspension</b> .....   | <b>9</b>  |
| <b>1 Front suspension</b> .....  | <b>9</b>  |
| 1.1 Exploded view of front suspension .....                                      | 9         |
| 1.2 Exploded view of subframe .....  | 13        |
| 1.3 Removing and installing subframe .....                                       | 15        |
| <b>2 Front suspension strut</b> .....  | <b>19</b> |
| 2.1 Exploded view of front suspension strut .....                                | 19        |
| 2.2 Removing and installing suspension strut .....                               | 20        |
| 2.3 Exploded view of shock absorber, coil spring and wheel bearing housing ..... | 21        |
| 2.4 Removing and installing wheel bearing with suspension strut removed .....    | 27        |
| 2.5 Removing and installing coil spring .....                                    | 29        |
| 2.6 Removing and installing shock absorber .....                                 | 31        |
| <b>3 Front drive shaft</b> .....   | <b>32</b> |
| 3.1 General .....  | 32        |
| 3.2 Exploded view of drive shaft .....   | 32        |
| 3.3 Removing and installing drive shafts .....                                   | 36        |
| 3.4 Exploded view of drive shaft with constant velocity joint .....              | 36        |
| 3.5 Quantities and type of grease .....  | 39        |
| 3.6 Plastic boot (Hytrell) .....   | 40        |
| 3.7 Exploded view of drive shaft with triple roller joint .....                  | 40        |
| 3.8 Quantities and type of grease .....  | 43        |
| <b>42 - Rear suspension</b> .....  | <b>44</b> |
| <b>1 Rear suspension - Front-wheel drive vehicles</b> .....                      | <b>44</b> |
| 1.1 General .....  | 44        |
| 1.2 Exploded view of rear suspension .....                                       | 44        |
| 1.3 Exploded view of rear axle beam .....  | 45        |
| 1.4 Removing and installing rear axle .....                                      | 47        |
| <b>2 Rear suspension strut - Front-wheel drive vehicles</b> .....                | <b>51</b> |
| 2.1 Removing and installing suspension strut .....                               | 51        |
| 2.2 Exploded view of suspension strut .....                                      | 55        |
| 2.3 Dismantling and assembling suspension strut .....                            | 57        |
| <b>3 Rear wheel bearings - Front-wheel drive vehicles</b> .....                  | <b>61</b> |
| 3.1 General .....  | 61        |



|           |  |            |
|-----------|--|------------|
| 3.2       | Exploded view of wheel bearings - Vehicles with drum brakes                | 61         |
| 3.3       | Exploded view of wheel bearings - Vehicles with disc brakes                | 65         |
| <b>4</b>  | <b>Rear suspension - Four-wheel drive vehicles</b>                         | <b>71</b>  |
| 4.1       | General  | 71         |
| 4.2       | Exploded view of rear subframe   | 71         |
| 4.3       | Exploded view of rear suspension   | 75         |
| 4.4       | Exploded view of trapezium link  | 80         |
| 4.5       | Removing and installing trapezium link                                     | 84         |
| 4.6       | Exploded view of support for trapezium link with bonded rubber bush        | 85         |
| 4.7       | Replacing bonded rubber bush for trapezium link support                    | 87         |
| 4.8       | Removing and installing transverse link                                    | 89         |
| 4.9       | Exploded view of connecting link   | 90         |
| 4.10      | Exploded view of anti-roll bar   | 91         |
| 4.11      | Removing and installing anti-roll bar                                      | 91         |
| <b>5</b>  | <b>Rear suspension strut - Four-wheel drive vehicles</b>                   | <b>92</b>  |
| 5.1       | Removing and installing suspension strut                                   | 92         |
| 5.2       | Exploded view of suspension strut  | 95         |
| 5.3       | Dismantling and assembling suspension strut                                | 97         |
| 5.4       | Exploded view of suspension strut with self-levelling suspension           | 102        |
| 5.5       | Dismantling and assembling suspension strut with self-levelling suspension | 104        |
| <b>6</b>  | <b>Rear wheel bearing - Four-wheel drive vehicles</b>                      | <b>110</b> |
| 6.1       | Exploded view of wheel bearing   | 110        |
| 6.2       | Removing and installing wheel bearing housing                              | 114        |
| <b>7</b>  | <b>Rear drive shaft - Four-wheel drive vehicles</b>                        | <b>116</b> |
| 7.1       | General  | 116        |
| 7.2       | Exploded view of drive shaft   | 116        |
| 7.3       | Removing and installing drive shaft  | 119        |
| 7.4       | Quantities and type of grease  | 120        |
| <b>43</b> | <b>Self-levelling suspension</b>   | <b>122</b> |
| <b>1</b>  | <b>Self-levelling suspension - Front-wheel drive vehicles</b>              | <b>122</b> |
| 1.1       | General  | 122        |
| 1.2       | Exploded view of self-levelling suspension                                 | 122        |
| 1.3       | Checking operation of control valve  | 129        |
| 1.4       | Checking control valve for leaks   | 129        |
| 1.5       | Checking pressure container  | 130        |
| 1.6       | Adjusting self-levelling suspension  | 132        |
| <b>2</b>  | <b>Self-levelling suspension - Four-wheel drive vehicles</b>               | <b>134</b> |
| 2.1       | General  | 134        |
| 2.2       | Exploded view of self-levelling suspension                                 | 134        |
| 2.3       | Checking operation of control valve  | 139        |
| 2.4       | Checking control valve for leaks   | 139        |
| 2.5       | Checking pressure container  | 140        |
| 2.6       | Adjusting self-levelling suspension  | 142        |
| <b>44</b> | <b>Wheels, tyres, vehicle geometry</b>                                     | <b>144</b> |
| <b>1</b>  | <b>Wheels and tyres</b>  | <b>144</b> |
| 1.1       | General  | 144        |
| 1.2       | Exploded view of steel disc wheel  | 144        |
| 1.3       | Exploded view of light alloy wheel   | 146        |
| 1.4       | Balancing wheels on vehicle  | 147        |
| <b>2</b>  | <b>Wheel alignment</b>   | <b>148</b> |
| 2.1       | General  | 148        |
| 2.2       | Test prerequisites for wheel alignment                                     | 148        |
| 2.3       | Wheel alignment specifications - Front-wheel drive vehicles                | 149        |

|           |  |            |
|-----------|--|------------|
| 2.4       | Wheel alignment specifications - Four-wheel drive vehicles except Audi S6 Plus                                   | 149        |
| 2.5       | Wheel alignment specifications - Audi S6 Plus  | 150        |
| 2.6       | Adjusting front axle camber  | 150        |
| 2.7       | Adjusting front axle toe   | 151        |
| 2.8       | Checking rear axle camber - Front-wheel drive vehicles   | 152        |
| 2.9       | Adjusting rear axle camber - Four-wheel drive vehicles   | 152        |
| 2.10      | Adjusting rear axle toe - Four-wheel drive vehicles  | 152        |
| <b>48</b> | <b>- Steering</b>  | <b>154</b> |
| <b>1</b>  | <b>Power-assisted steering</b>   | <b>154</b> |
| 1.1       | General  | 154        |
| 1.2       | Exploded view of power-assisted steering   | 154        |
| 1.3       | Exploded view of track rods  | 157        |
| 1.4       | Removing and installing power-assisted steering box  | 159        |
| <b>2</b>  | <b>Power-assisted steering - Audi S4/S6</b>  | <b>165</b> |
| 2.1       | General  | 165        |
| 2.2       | Exploded view of power-assisted steering   | 165        |
| 2.3       | Exploded view of track rods  | 169        |
| 2.4       | Removing and installing power-assisted steering box  | 170        |
| <b>3</b>  | <b>Power-assisted steering box</b>   | <b>177</b> |
| 3.1       | General  | 177        |
| 3.2       | Exploded view of power-assisted steering box   | 177        |
| 3.3       | Adjusting steering box   | 179        |
| <b>4</b>  | <b>Servotronic</b>   | <b>180</b> |
| 4.1       | General  | 180        |
| 4.2       | Exploded view of Servotronic   | 180        |
| 4.3       | Checking power supply for Servotronic - Vehicles up to Model Year 1993   | 182        |
| 4.4       | Checking power supply for Servotronic - Vehicles as of Model Year 1994   | 183        |
| 4.5       | Checking Servotronic solenoid valve N119 - Vehicles up to Model Year 1993  | 183        |
| 4.6       | Checking Servotronic solenoid valve N119 - Vehicles as of Model Year 1994  | 184        |
| 4.7       | Checking vehicle speed signal - Vehicles as of Model Year 1994   | 185        |
| 4.8       | Checking wiring between Servotronic control unit J236 and connector point "1" - Vehicles up to Model Year 1993   | 186        |
| 4.9       | Checking wiring between Servotronic solenoid valve N119 and connector point "1" - Vehicles up to Model Year 1993 | 187        |
| 4.10      | Checking valve wiring for short to voltage   | 188        |
| 4.11      | Checking valve wiring for short to earth   | 189        |
| <b>5</b>  | <b>Steering wheels</b>   | <b>191</b> |
| 5.1       | Safety precautions when working on airbag  | 191        |
| 5.2       | Exploded view of steering wheel with airbag  | 191        |
| 5.3       | Removing and installing steering wheel with airbag   | 192        |
| 5.4       | Exploded view of steering wheel without airbag   | 193        |
| 5.5       | Removing and installing steering wheel   | 194        |
| 5.6       | Removing and installing steering column switch   | 195        |
| 5.7       | Exploded view of steering column switch for adjustable steering column   | 195        |
| 5.8       | Removing and installing steering column switch for adjustable steering column                                    | 196        |
| <b>6</b>  | <b>Steering column with column tube</b>  | <b>198</b> |
| 6.1       | Exploded view of steering column with column tube  | 198        |
| 6.2       | Removing and installing column tube with steering column   | 199        |
| <b>7</b>  | <b>Adjustable steering column with column tube up to Model Year 1994</b>   | <b>202</b> |
| 7.1       | General  | 202        |
| 7.2       | Exploded view of adjustable steering column with column tube   | 202        |
| 7.3       | Removing and installing column tube with adjustable steering column  | 205        |
| 7.4       | Replacing steering column adjustment cable   | 208        |
| 7.5       | Adjusting steering column adjustment cable   | 210        |



|           |  |            |
|-----------|--|------------|
| <b>8</b>  | <b>Adjustable steering column - Vehicles as of Model Year 1995</b>                       | <b>211</b> |
| 8.1       | General  | 211        |
| 8.2       | Exploded view of adjustable steering column  | 211        |
| 8.3       | Replacing steering column adjustment cable   | 213        |
| 8.4       | Adjusting steering column adjustment cable   | 214        |
| <b>9</b>  | <b>Hydraulic pipes, reservoir</b>  | <b>215</b> |
| 9.1       | General  | 215        |
| 9.2       | Exploded view of hydraulic fluid circuit for power-assisted steering                     | 215        |
| 9.3       | Exploded view of reservoir   | 217        |
| <b>10</b> | <b>Vane pump</b>   | <b>218</b> |
| 10.1      | General  | 218        |
| 10.2      | Exploded view of vane pump - Vehicles with 4-cyl. engine                                 | 218        |
| 10.3      | Exploded view of vane pump - Vehicles with 5-cyl. engine                                 | 221        |
| 10.4      | Exploded view of vane pump - Vehicles with 6-cyl. 2V engine                              | 222        |
| 10.5      | Removing and installing vane pump - Vehicles with 6-cyl. 2V engine                       | 224        |
| 10.6      | Exploded view of vane pump - Vehicles with 6-cyl. 5V engine                              | 226        |
| 10.7      | Removing and installing vane pump - Vehicles with 6-cyl. 5V engine                       | 227        |
| <b>11</b> | <b>Vane pump delivery pressure</b>   | <b>231</b> |
| 11.1      | Checking delivery pressure of vane pump - Vehicles with 4-cyl. engine                    | 231        |
| 11.2      | Checking delivery pressure of vane pump - Vehicles with 5-cyl. engine                    | 233        |
| 11.3      | Checking delivery pressure of vane pump - Vehicles with 6-cyl. 2V engine                 | 235        |
| 11.4      | Checking delivery pressure of vane pump - Vehicles with 6-cyl. 5V engine                 | 237        |
| 11.5      | Checking delivery pressure of vane pump - Audi S4/S6 and Audi S6 Plus with 8-cyl. engine | 239        |
| <b>12</b> | <b>Tandem pump</b>   | <b>242</b> |
| 12.1      | General  | 242        |
| 12.2      | Exploded view - Vehicles with 4-cyl. engine  | 242        |
| 12.3      | Exploded view - Vehicles with 5-cyl. engine  | 245        |
| 12.4      | Exploded view - Audi S4/S6 with 5-cyl. turbo engine                                      | 247        |
| 12.5      | Exploded view - Vehicles with 6-cyl. engines   | 249        |
| 12.6      | Removing and installing tandem pump - Vehicles with 6-cyl. engines                       | 251        |
| 12.7      | Exploded view - Audi S4/S6 and Audi S6 Plus with 8-cyl. engine                           | 253        |
| <b>13</b> | <b>Plunger pump delivery</b>   | <b>255</b> |
| 13.1      | Checking delivery of plunger pump - Vehicles with 4-cyl. engine                          | 255        |
| 13.2      | Checking delivery of plunger pump - Vehicles with 5-cyl. engine                          | 256        |
| 13.3      | Checking delivery of plunger pump - Vehicles with 6-cyl. 2V and 5V engine                | 257        |
| 13.4      | Checking delivery of plunger pump - Audi S4/S6 and Audi S6 Plus with 8-cyl. engine       | 259        |
| <b>14</b> | <b>Removing and installing tandem pump</b>   | <b>262</b> |
| 14.1      | General  | 262        |
| 14.2      | Removing and installing tandem pump - Audi S4/S6 with 5-cyl. turbo engine                | 262        |
| 14.3      | Removing and installing tandem pump - Audi S4/S6 with 8-cyl. engine                      | 266        |
| 14.4      | Checking and adjusting poly V-belt alignment - Audi S4/S6 with 5-cyl. and 8-cyl. engine  | 270        |
| 14.5      | Removing and installing tandem pump - Audi S6 Plus with 8-cyl. engine                    | 271        |
| 14.6      | Checking and adjusting poly V-belt alignment - Audi S6 Plus with 8-cyl. engine           | 274        |
| <b>15</b> | <b>Checking fluid level, bleeding steering system, checking for leaks</b>                | <b>276</b> |
| 15.1      | Checking power steering fluid level  | 276        |
| 15.2      | Bleeding steering system   | 276        |
| 15.3      | Checking steering system for leaks   | 277        |