

## Contents

<b>01 - Self-diagnosis</b> .....	<b>1</b>
<b>1 Self-diagnosis of driver and front passenger airbag system (Airbag II)</b> .....	<b>1</b>
1.1 Self-diagnosis of driver and front passenger airbag system (Airbag II) .....	1
1.2 General .....	1
1.3 Connecting V.A.G 1551 fault reader .....	2
1.4 Initiating airbag system self-diagnosis .....	2
1.5 Interrogating fault memory .....	3
1.6 Erasing fault memory .....	4
1.7 Fault table .....	4
<b>2 Self-diagnosis of driver and front passenger airbag system BTU (Basic Triggering Unit; Airbag IV and V)</b> .....	<b>7</b>
2.1 Self-diagnosis of driver and front passenger airbag system BTU (Basic Triggering Unit; Airbag IV and V) .....	7
2.2 General .....	7
2.3 Initiating airbag system self-diagnosis .....	7
2.4 Fault table for the airbag system BTU (Airbag IV and V) .....	8
2.5 Coding control unit .....	12
2.6 Reading measured value block .....	13
<b>3 Programming or erasing vehicle keys for radio-operated remote control</b> .....	<b>16</b>
3.1 Programming or erasing vehicle keys for radio-operated remote control .....	16
<b>4 Self-diagnosis of central locking</b> .....	<b>17</b>
4.1 Self-diagnosis of central locking .....	17
4.2 General information .....	17
4.3 Initiating self-diagnosis of the central locking .....	18
4.4 Interrogating fault memory .....	19
4.5 Fault table for the central locking .....	20
4.6 Final control diagnosis .....	22
4.7 Erasing fault memory .....	24
4.8 Ending output .....	25
4.9 Encoding control unit .....	25
4.10 Reading measured value block .....	29
4.11 Connecting V.A.G 1551 fault reader .....	31
<b>50 - Body front</b> .....	<b>33</b>
<b>1 Body, front</b> .....	<b>33</b>
1.1 Body, front .....	33
1.2 Removing and installing lock support with ancillary components .....	33
<b>2 Removing and installing front wing</b> .....	<b>36</b>
2.1 Removing and installing front wing .....	36
<b>3 Removing and installing noise insulation</b> .....	<b>39</b>
3.1 Removing and installing noise insulation .....	39
<b>55 - Bonnet, Flaps</b> .....	<b>41</b>
<b>1 Bonnet</b> .....	<b>41</b>
1.1 Bonnet .....	41
1.2 Removing and installing bonnet .....	41
1.3 Degassing telescopic strut .....	48
1.4 Removing and installing bonnet Bowden cable .....	49
<b>2 Boot lid, tailgate</b> .....	<b>51</b>
2.1 Boot lid, tailgate .....	51
2.2 Removing and installing boot lid (Saloon) .....	51
2.3 Removing and installing tailgate (Avant) .....	55
2.4 Unhinging tailgate (Avant) .....	59



2.5	Tailgate lock with operating components (Avant) . . . . .	60
<b>57</b>	<b>- Front doors/Door components/Central locking system . . . . .</b>	<b>69</b>
<b>1</b>	<b>Front door . . . . .</b>	<b>69</b>
1.1	Front door . . . . .	69
1.2	Removing and installing door shell and door component carrier . . . . .	69
1.3	Removing and installing impact absorber for front door component carrier . . . . .	73
1.4	Front window lifter and door window - exploded view . . . . .	74
1.5	Removing and installing window lifter and door window from/on door component carrier . . . . .	79
1.6	Removing and installing front window lifters (riveted) . . . . .	80
<b>2</b>	<b>Door lock with operating components - exploded view . . . . .</b>	<b>83</b>
2.1	Door lock with operating components - exploded view . . . . .	83
<b>3</b>	<b>Front door handle - exploded view . . . . .</b>	<b>88</b>
3.1	Front door handle - exploded view . . . . .	88
<b>4</b>	<b>Adjusting door - adjustment sequence . . . . .</b>	<b>91</b>
4.1	Adjusting door - adjustment sequence . . . . .	91
4.2	Adjusting door shell . . . . .	91
4.3	Adjusting door component carrier . . . . .	92
<b>5</b>	<b>Central locking . . . . .</b>	<b>93</b>
5.1	Central locking . . . . .	93
5.2	Central locking >05.94 - exploded view . . . . .	94
5.3	Central locking 06.94 >- exploded view . . . . .	99
<b>58</b>	<b>- Rear doors/Door components . . . . .</b>	<b>102</b>
<b>1</b>	<b>Rear door . . . . .</b>	<b>102</b>
1.1	Rear door . . . . .	102
1.2	Door shell and door component carrier - exploded view . . . . .	102
1.3	Removing and installing impact absorber for rear door component carrier . . . . .	106
1.4	Removing and installing impact absorber for rear side impact bar . . . . .	107
1.5	Rear window lifter and door window - exploded view . . . . .	108
<b>2</b>	<b>Rear door lock with operating components - exploded view . . . . .</b>	<b>114</b>
2.1	Rear door lock with operating components - exploded view . . . . .	114
<b>3</b>	<b>Rear door handle - exploded view . . . . .</b>	<b>118</b>
3.1	Rear door handle - exploded view . . . . .	118
<b>4</b>	<b>Adjusting door - adjustment sequence . . . . .</b>	<b>121</b>
4.1	Adjusting door - adjustment sequence . . . . .	121
4.2	Adjusting door shell . . . . .	121
4.3	Adjusting door component carrier . . . . .	122
<b>60</b>	<b>- Sliding/tilting roof . . . . .</b>	<b>124</b>
<b>1</b>	<b>Sliding/tilting roof . . . . .</b>	<b>124</b>
1.1	Sliding/tilting roof . . . . .	124
1.2	Sliding/tilting roof - exploded viewä 03.94 . . . . .	124
1.3	Removing and installing draught deflector . . . . .	127
1.4	Replace sliding/tilting roof panel seal . . . . .	127
1.5	Removing and installing sliding roof panel . . . . .	128
1.6	Removing and installing sliding roof headliner . . . . .	128
1.7	Removing and installing sliding roof motor . . . . .	130
1.8	Testing and adjusting motor zero setting . . . . .	130
1.9	Removing and installing guide plate with cable . . . . .	131
1.10	Adjusting height of sliding roof panel . . . . .	132
1.11	Sliding/tilting roof 04.94 >exploded view . . . . .	134
1.12	Removing and installing sliding roof motor . . . . .	136
1.13	Adjusting zero position (motor) . . . . .	136
1.14	Replacing panel seal . . . . .	137
1.15	Removing and installing frame . . . . .	138

1.16	Removing and installing draught deflector . . . . .	139
1.17	Removing and installing rain channel . . . . .	140
1.18	Removing and installing guide plate . . . . .	141
1.19	Sliding/tilting roof - exploded view Glass panel 04.94 ä . . . . .	143
1.20	Removing and installing sliding roof panel . . . . .	146
1.21	Removing and installing sliding roof headliner . . . . .	147
<b>2</b>	<b>Cleaning water drainage tubes . . . . .</b>	<b>148</b>
2.1	Cleaning water drainage tubes . . . . .	148
<b>63</b>	<b>- Bumpers . . . . .</b>	<b>149</b>
<b>1</b>	<b>Front bumper . . . . .</b>	<b>149</b>
1.1	Front bumper . . . . .	149
1.2	Front bumper >03.92 - exploded view . . . . .	149
1.3	Removing and installing front bumper 04.92 >05.94 . . . . .	152
1.4	Front bumper 06.94 > - exploded view . . . . .	154
<b>2</b>	<b>Rear bumper . . . . .</b>	<b>157</b>
2.1	Rear bumper . . . . .	157
2.2	Rear bumper, Saloon >03.92 - exploded view . . . . .	157
2.3	Removing and installing rear bumper, Saloon 04.92 >05.94 . . . . .	160
2.4	Rear bumper, Saloon 06.94>-exploded view . . . . .	161
2.5	Rear bumper, Avant - exploded view . . . . .	163
<b>64</b>	<b>- Glazing . . . . .</b>	<b>168</b>
<b>1</b>	<b>Flush-bonded windows . . . . .</b>	<b>168</b>
1.1	Flush-bonded windows . . . . .	168
1.2	Removing and installing flush-bonded windows - general . . . . .	168
<b>2</b>	<b>Removing and installing windscreen . . . . .</b>	<b>171</b>
2.1	Removing and installing windscreen . . . . .	171
2.2	Removal . . . . .	171
2.3	Installation . . . . .	175
<b>3</b>	<b>Removing and installing rear window . . . . .</b>	<b>179</b>
3.1	Removing and installing rear window . . . . .	179
3.2	Removal and installation (Saloon) . . . . .	179
3.3	Removal and installation (Avant) . . . . .	183
<b>4</b>	<b>Removing and installing side window . . . . .</b>	<b>189</b>
4.1	Removing and installing side window . . . . .	189
4.2	Removal and installation (Saloon > 05.94) . . . . .	190
4.3	Removal and installation (Saloon 06.94 >) . . . . .	192
4.4	Removal and installation (Avant) . . . . .	197
<b>66</b>	<b>- Exterior equipment . . . . .</b>	<b>207</b>
<b>1</b>	<b>Wheel housing liners . . . . .</b>	<b>207</b>
1.1	Wheel housing liners . . . . .	207
1.2	Removing and installing front wheel housing liner . . . . .	207
1.3	Removing and installing rear wheel housing liner . . . . .	209
<b>2</b>	<b>B-pillar trim . . . . .</b>	<b>210</b>
2.1	B-pillar trim . . . . .	210
2.2	Removing and installing B-pillar trim . . . . .	210
<b>3</b>	<b>Protective trim strips . . . . .</b>	<b>212</b>
3.1	Protective trim strips . . . . .	212
3.2	Removing and installing protective trim strips . . . . .	212
<b>4</b>	<b>Gap covering for side member . . . . .</b>	<b>215</b>
4.1	Gap covering for side member . . . . .	215
4.2	Removing and installing gap covering for side member . . . . .	215
<b>5</b>	<b>Roof trim strip . . . . .</b>	<b>218</b>



5.1	Roof trim strip . . . . .	218
5.2	Removing and installing roof trim strip . . . . .	218
<b>6</b>	<b>Roof rail (Avant) . . . . .</b>	<b>220</b>
6.1	Roof rail (Avant) . . . . .	220
6.2	Removing and installing roof rail . . . . .	220
<b>7</b>	<b>Exterior mirrors . . . . .</b>	<b>221</b>
7.1	Exterior mirrors . . . . .	221
7.2	Removing and installing exterior mirrors > 05.94 . . . . .	221
7.3	Removing and installing exterior mirrors > 06.93 . . . . .	224
7.4	Removing and installing exterior mirrors 06.94 ä . . . . .	227
<b>8</b>	<b>Removing and installing window slot seal . . . . .</b>	<b>230</b>
8.1	Removing and installing window slot seal . . . . .	230
<b>68</b>	<b>- Interior equipment . . . . .</b>	<b>231</b>
<b>1</b>	<b>Seat belts . . . . .</b>	<b>231</b>
1.1	Seat belts . . . . .	231
1.2	Safety rules for handling pyrotechnic belt tensioners . . . . .	231
1.3	Testing belt tensioners . . . . .	231
1.4	Seat belt anchorage points - overview . . . . .	232
1.5	A - Removing and installing tube for ten cable . . . . .	234
1.6	B - Removing and installing three-point seat belt, B-pillar > 05.94 . . . . .	236
1.7	B - Removing and installing three-point seat belt, B-pillar 06.94 ä . . . . .	238
1.8	C - Removing and installing rear three-point seat belt, Saloon . . . . .	243
1.9	C - Removing and installing rear three-point seat belt, Avant . . . . .	245
1.10	D - Anchorage point, floor group, centre . . . . .	245
1.11	E - Anchorage point, floor group, centre without retractor . . . . .	246
1.12	E - Anchorage point, floor group, centre with retractor . . . . .	246
1.13	F - Anchorage point, floor group, outer . . . . .	247
1.14	G - Anchorage point, seat frame . . . . .	247
1.15	Function test on seat belts with retractor function . . . . .	247
<b>2</b>	<b>Repairing procon ten system, Audi 100 &gt; 5.94 . . . . .</b>	<b>248</b>
2.1	Repairing procon ten system, Audi 100 > 5.94 . . . . .	248
2.2	Testing procon ten system after an accident . . . . .	248
2.3	Removing and installing procon ten system . . . . .	249
2.4	Removing ten cables . . . . .	250
2.5	Removing procon cable . . . . .	253
2.6	Installing ten cables . . . . .	256
2.7	Installing procon cable . . . . .	263
2.8	Removing and installing cable grab . . . . .	269
2.9	Removing and installing relay block (left) . . . . .	272
2.10	Removing and installing stop block (right) . . . . .	273
2.11	Labelling of ten cables . . . . .	274
<b>3</b>	<b>Repairing procon ten system, Audi S4 &gt; 5.94 . . . . .</b>	<b>274</b>
3.1	Repairing procon ten system, Audi S4 > 5.94 . . . . .	274
3.2	Removing and installing procon ten system . . . . .	275
3.3	Removing ten cables . . . . .	276
3.4	Removing procon cable . . . . .	278
3.5	Installing ten cables . . . . .	281
3.6	Installing procon cable . . . . .	286
3.7	Removing and installing cable grab . . . . .	290
3.8	Removing and installing relay block (left) . . . . .	292
3.9	Removing and installing stop block (right) . . . . .	293
3.10	Labelling of ten cables . . . . .	294
<b>4</b>	<b>Removing and installing interior mirror . . . . .</b>	<b>294</b>
4.1	Removing and installing interior mirror . . . . .	294
4.2	Affixing holder plate for interior mirror . . . . .	295

5	<b>Partition grille (Avant)</b> .....	<b>296</b>
5.1	Partition grille (Avant) .....	296
5.2	Retrofitting partition grille .....	296
<b>69</b>	<b>- Passenger protection</b> .....	<b>299</b>
1	<b>Airbag</b> .....	<b>299</b>
1.1	Airbag .....	299
1.2	General safety rules .....	299
2	<b>Repairing airbag</b> .....	<b>300</b>
2.1	Repairing airbag .....	300
2.2	Repairing airbagä 06.92 .....	300
2.3	Repairing driver and front passenger airbag07.92 > (Airbag II) .....	304
2.4	Repairing driver and front passenger airbag07.93 > (Airbag IV and V) .....	310
2.5	Removing and installing driver airbag for sports steering wheel .....	313
2.6	Retrofitting sports steering wheel airbag .....	317
<b>70</b>	<b>- Trim/Insulation</b> .....	<b>318</b>
1	<b>Door trims</b> .....	<b>318</b>
1.1	Door trims .....	318
1.2	Removing and installing front door trim .....	318
1.3	Removing and installing rear door trim .....	322
1.4	Removing and installing rear door trim impact absorber .....	328
2	<b>Trims</b> .....	<b>329</b>
2.1	Trims .....	329
2.2	Removing and installing A-pillar trim .....	329
2.3	Removing and installing inside door sill .....	331
2.4	Removing and installing B-pillar trim .....	332
2.5	Removing C/D-pillar trim (Saloon) .....	333
2.6	Removing and installing parcel shelf .....	334
2.7	Removing and installing C-pillar trim (Avant) .....	336
2.8	Removing and installing D-pillar trim (Avant) .....	337
2.9	Removing and installing roof frame trim (Avant) .....	337
2.10	Removing and installing boot side trim (Avant) .....	338
2.11	Removing and installing tailgate trims (Avant) .....	339
2.12	Removing and installing sun blind (Avant) .....	341
3	<b>Roof trim</b> .....	<b>342</b>
3.1	Roof trim .....	342
3.2	Replacing moulded headliner .....	342
3.3	Removing moulded headliner .....	343
3.4	Installing moulded headliner .....	348
4	<b>Dash panel</b> .....	<b>350</b>
4.1	Dash panel .....	350
4.2	Removing and installing dash panel .....	350
4.3	Removing dash panel centre section .....	355
4.4	Removing and installing centre console at rear .....	357
4.5	Removing and installing centre console at front .....	361
4.6	Removing and installing shelf and glove compartment .....	365
4.7	Removing and installing glove compartment lock cylinder .....	367
<b>72</b>	<b>- Seat frames</b> .....	<b>369</b>
1	<b>Front seat</b> .....	<b>369</b>
1.1	Front seat .....	369
1.2	Removing and installing front seat .....	369
1.3	Removing and installing seat back .....	370
2	<b>Rear seat</b> .....	<b>373</b>
2.1	Rear seat .....	373



2.2	Removing and installing rear seat bench (Saloon) . . . . .	373
2.3	Removing and installing rear seat back (Saloon) . . . . .	374
2.4	Removing and installing rear seat bench (Avant) . . . . .	376
2.5	Removing and installing rear seat back (Avant) . . . . .	378
<b>74</b>	<b>- Seats - Upholstery, Covers . . . . .</b>	<b>383</b>
<b>1</b>	<b>Front seat . . . . .</b>	<b>383</b>
1.1	Front seat . . . . .	383
1.2	Removing and installing seat cover . . . . .	383
1.3	Removing and installing seat back cover . . . . .	384
1.4	Replacing seat heater element . . . . .	386
1.5	Replacing seat back heater element . . . . .	387
<b>2</b>	<b>Rear seat . . . . .</b>	<b>388</b>
2.1	Rear seat . . . . .	388
2.2	Removing and installing rear seat cover . . . . .	388
2.3	Removing and installing rear seat back cover (Saloon) . . . . .	389
2.4	Removing and installing rear seat back cover (Avant) . . . . .	389
2.5	Replacing rear seat heater element . . . . .	390
2.6	Replacing rear seat back heater element . . . . .	390
<b>3</b>	<b>Frame-type head restraints . . . . .</b>	<b>391</b>
3.1	Frame-type head restraints . . . . .	391
3.2	Removing and installing frame-type head restraint cover . . . . .	391