

Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Gearbox identification	1
1.2 Code letters, gearbox allocation, ratios, capacities	2
2 Identification of rear final drive	5
2.1 Identification of rear final drive	5
2.2 Code letters, allocation, ratios and capacities	6
3 Transmission layout	8
3.1 Transmission layout	8
3.2 Notes on engine output/brake test and towing/tow starting	9
4 Calculations	10
4.1 Calculations	10
4.2 Calculating transmission ratios "i"	10
5 General repair instructions	10
5.1 General repair instructions	10
30 - Clutch	14
1 Servicing clutch mechanism	14
1.1 Servicing clutch mechanism	14
1.2 Assembly overview - pedal cluster (LHD vehicles)	15
1.3 Assembly overview - pedal cluster (RHD vehicles)	22
1.4 Hydraulic system - general layout	29
1.5 Bleeding clutch system	32
2 Servicing clutch release mechanism	34
2.1 Servicing clutch release mechanism	34
3 Servicing clutch	38
3.1 Servicing clutch	38
34 - Controls, Housing	46
1 Servicing selector mechanism	46
1.1 Servicing selector mechanism	46
1.2 Adjusting gear selector mechanism	50
1.3 Checking gear stick adjustment	51
2 Removing and installing gearbox	52
2.1 Removing and installing gearbox	52
2.2 Removing	52
2.3 Securing gearbox to repair stand	61
2.4 Transporting the gearbox	62
2.5 Installing	63
3 Checking oil level in gearbox	64
3.1 Checking oil level in gearbox	64
4 Removing and installing cover with Torsen differential	65
4.1 Removing and installing cover with Torsen differential	65
5 Dismantling and assembling gearbox	68
5.1 Dismantling and assembling gearbox	68
5.2 Overview	68
5.3 Assembly overview	70
5.4 Removing and installing input shaft ball bearing and multi-function sender	71
5.5 Removing and installing input shaft, drive pinion, hollow shaft, selector rods, gearbox cover and cover with Torsen differential	74
5.6 Removing and installing input shaft ball bearing, multi-function sender, input shaft, drive pinion, selector rods, gearbox cover and cover with Torsen differential	78



6	Servicing cover for Torsen differential, removing and installing Torsen differential	87
6.1	Servicing cover for Torsen differential, removing and installing Torsen differential	87
7	Dismantling and assembling selector mechanism in gearbox	94
7.1	Dismantling and assembling selector mechanism in gearbox	94
35 - Gears, Shafts		102
1	Dismantling and assembling input shaft	102
1.1	Dismantling and assembling input shaft	102
2	Adjusting input shaft	116
2.1	Adjusting input shaft	116
3	Dismantling and assembling drive pinion and hollow shaft	118
3.1	Dismantling and assembling drive pinion and hollow shaft	118
4	Removing and installing reverse gear wheel	139
4.1	Removing and installing reverse gear wheel	139
39 - Final drive, Differential rear		141
1	Renewing seal for flange shaft	141
1.1	Renewing seal for flange shaft	141
2	Renewing oil seal for flange shaft/propshaft	144
2.1	Renewing oil seal for flange shaft/propshaft	144
3	Removing and installing speedometer sender and drive wheel	146
3.1	Removing and installing speedometer sender and drive wheel	146
3.2	Removing and installing speedometer sender -G22	147
3.3	Removing and installing speedometer drive wheel	147
4	Removing and installing differential	149
4.1	Removing and installing differential	149
5	Dismantling and assembling differential	153
5.1	Dismantling and assembling differential	153
6	Adjusting drive pinion and crown wheel	162
6.1	Adjusting drive pinion and crown wheel	162
6.2	Adjusting and marking of gear sets	163
6.3	Position of shims	165
6.4	Adjustment overview	165
6.5	Recommended sequence for readjusting final drive set	166
6.6	Adjusting drive pinion	167
6.7	Re-determining "S4" shim when fitting new gearbox cover	177
6.8	Adjusting crown wheel	178
7	Servicing propshaft	185
7.1	Servicing propshaft	185
7.2	Removing and installing propshaft	186
7.3	Measuring radial run-out at propshaft flange and marking	191
7.4	Adjusting propshaft	192
8	Checking oil level in rear final drive	196
8.1	Checking oil level in rear final drive	196
9	Renewing flange shaft oil seals	197
9.1	Renewing flange shaft oil seals	197
9.2	Renewing right flange shaft oil seal	197
9.3	Renewing left flange shaft oil seal	199
10	Replacing oil seal and grooved ball bearing for propshaft flange	204
10.1	Replacing oil seal and grooved ball bearing for propshaft flange	204
11	Removing and installing rear final drive	215
11.1	Removing and installing rear final drive	215
11.2	Securing rear final drive to repair stand	225

12	Dismantling and assembling rear final drive226
12.1	Dismantling and assembling rear final drive226
12.2	Overview226
12.3	Removing and installing differential together with differential lock229
12.4	Removing and installing differential without differential lock235
13	Dismantling and assembling differential240
13.1	Dismantling and assembling differential240
14	Removing and installing and dismantling and assembling drive pinion251
14.1	Removing and installing and dismantling and assembling drive pinion251
15	Servicing differential lock mechanism - vehicles > 05.94261
15.1	Servicing differential lock mechanism - vehicles > 05.94261
15.2	Removing and installing switch for differential lock261
15.3	Routing of pipes and hoses262
15.4	Removing and installing vacuum unit265
15.5	Dismantling and assembling differential lock267
15.6	Adjusting left flange shaft273
16	Adjusting drive pinion and crown wheel274
16.1	Adjusting drive pinion and crown wheel274
16.2	Adjusting and marking of gear sets275
16.3	Recommended sequence for readjusting final drive set276
16.4	Adjustment overview277
16.5	Position of shims278
16.6	Adjusting drive pinion279
16.7	Adjusting crown wheel286