

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Identification of gearbox</b> .....	<b>1</b>
1.1 Identification of gearbox .....	1
<b>2 Code letters, assembly allocation, ratios and equipment</b> .....	<b>2</b>
2.1 Code letters, assembly allocation, ratios and equipment .....	2
<b>3 Identification of rear final drive</b> .....	<b>4</b>
3.1 Identification of rear final drive .....	4
<b>4 Code letters, assembly allocation and ratios</b> .....	<b>5</b>
4.1 Code letters, assembly allocation and ratios .....	5
<b>5 Capacities</b> .....	<b>6</b>
5.1 Capacities .....	6
<b>6 Repair instructions</b> .....	<b>7</b>
6.1 Repair instructions .....	7
<b>32 - Torque converter</b> .....	<b>10</b>
<b>1 Torque converter</b> .....	<b>10</b>
1.1 Torque converter .....	10
1.2 Identification of torque converter .....	10
1.3 Checking torque converter .....	11
1.4 Draining torque converter .....	11
1.5 Renewing oil seal for torque converter .....	12
1.6 Installing torque converter .....	12
<b>37 - Controls, Housing</b> .....	<b>14</b>
<b>1 Servicing shift mechanism</b> .....	<b>14</b>
1.1 Servicing shift mechanism .....	14
1.2 Checking ignition key removal lock .....	14
1.3 Checking shift mechanism .....	14
1.4 Dismantling and assembling shift mechanism .....	15
1.5 Adjusting selector lever cable .....	24
1.6 Removing, installing and adjusting locking cable .....	27
<b>2 Checking gearbox</b> .....	<b>29</b>
2.1 Checking gearbox .....	29
2.2 Checking shift points .....	29
2.3 Checking stall speed .....	29
2.4 Measuring main pressure .....	29
2.5 Fault finding table for "4-speed automatic gearbox" .....	29
<b>3 Removing and installing gearbox</b> .....	<b>29</b>
3.1 Removing and installing gearbox .....	29
3.2 Securing gearbox to repair stand .....	38
3.3 Removing and installing left gearbox support .....	39
<b>4 Checking or changing ATF</b> .....	<b>42</b>
4.1 Checking or changing ATF .....	42
4.2 Checking ATF level .....	42
4.3 Changing ATF or topping up after repairs .....	47
<b>5 Gearbox with shift elements</b> .....	<b>49</b>
5.1 Gearbox with shift elements .....	49
5.2 Gearbox schematic diagram .....	49
5.3 Position of shift elements .....	51
<b>6 Dismantling and assembling gearbox</b> .....	<b>52</b>
6.1 Dismantling and assembling gearbox .....	52
6.2 Rules for cleanliness when working on automatic gearbox .....	52



6.3	Removing and installing ATF pipes . . . . .	52
6.4	Removing and installing ATF pipes, 5-cylinder engine . . . . .	53
6.5	Removing and installing ATF pipes, 6-cylinder engine . . . . .	57
6.6	Cleaning ATF pipes and oil cooler . . . . .	59
6.7	Removing and installing multi-function switch -F125 . . . . .	60
6.8	Adjusting multi-function switch -F125 . . . . .	61
<b>38</b>	<b>- Gears, Control . . . . .</b>	<b>64</b>
<b>1</b>	<b>Removing and installing oil pan, oil strainer and valve body . . . . .</b>	<b>64</b>
1.1	Removing and installing oil pan, oil strainer and valve body . . . . .	64
1.2	Removing and installing oil pan . . . . .	64
1.3	Removing and installing oil strainer . . . . .	65
1.4	Removing and installing wiring harness in gearbox . . . . .	65
1.5	Removing and installing valve body . . . . .	66
1.6	Renewing internal oil pipe . . . . .	68
<b>2</b>	<b>Dismantling and assembling ATF pump . . . . .</b>	<b>69</b>
2.1	Dismantling and assembling ATF pump . . . . .	69
<b>39</b>	<b>- Rear final drive, Differential . . . . .</b>	<b>78</b>
<b>1</b>	<b>Removing and installing speedometer sender -G22 and drive wheel for speedometer sender . . . . .</b>	<b>78</b>
1.1	Removing and installing speedometer sender -G22 and drive wheel for speedometer sender . . . . .	78
<b>2</b>	<b>Gear oil in front final drive . . . . .</b>	<b>79</b>
2.1	Gear oil in front final drive . . . . .	79
2.2	Checking oil level in front final drive . . . . .	79
2.3	Changing gear oil in front final drive or filling after repairs . . . . .	80
<b>3</b>	<b>Servicing front final drive . . . . .</b>	<b>80</b>
3.1	Servicing front final drive . . . . .	80
3.2	Renewing oil seal for right flange shaft . . . . .	87
3.3	Renewing right oil seal for input shaft . . . . .	89
3.4	Renewing oil seal for left flange shaft . . . . .	92
3.5	Renewing left oil seal for input shaft . . . . .	95
3.6	Renewing oil seals for drive pinion shaft . . . . .	97
<b>4</b>	<b>Servicing intermediate drive for front final drive . . . . .</b>	<b>99</b>
4.1	Servicing intermediate drive for front final drive . . . . .	99
4.2	Removing and installing front intermediate drive with transfer gearbox . . . . .	106
4.3	Dismantling front intermediate drive . . . . .	114
4.4	Renewing ATF breather . . . . .	117
4.5	Renewing oil seals in front intermediate drive . . . . .	118
<b>5</b>	<b>Gear oil in transfer gearbox . . . . .</b>	<b>120</b>
5.1	Gear oil in transfer gearbox . . . . .	120
5.2	Checking oil level in transfer gearbox . . . . .	120
5.3	Changing gear oil in transfer gearbox or filling after repairs . . . . .	121
<b>6</b>	<b>Servicing transfer gearbox and rear intermediate drive . . . . .</b>	<b>122</b>
6.1	Servicing transfer gearbox and rear intermediate drive . . . . .	122
6.2	Removing and installing vibration damper on transfer gearbox . . . . .	130
6.3	Renewing oil seal for rear flange shaft . . . . .	131
6.4	Sealing cover plate of transfer gearbox . . . . .	133
6.5	Removing and installing transfer gearbox . . . . .	134
6.6	Renewing oil seals in transfer gearbox . . . . .	137
6.7	Renewing gasket for housing end cover for rear intermediate drive . . . . .	139
6.8	Dismantling rear intermediate drive . . . . .	141
6.9	Checking axial clearance of Torsen differential and adjusting . . . . .	142
<b>7</b>	<b>Servicing propshaft . . . . .</b>	<b>147</b>
7.1	Servicing propshaft . . . . .	147

7.2	Removing and installing propshaft . . . . .	148
7.3	Adjusting propshaft . . . . .	152
7.4	Balancing propshaft/flange on rear final drive . . . . .	156
<b>8</b>	<b>Checking oil level in rear final drive . . . . .</b>	<b>160</b>
8.1	Checking oil level in rear final drive . . . . .	160
<b>9</b>	<b>Replacing oil seal and grooved ball bearing for propshaft flange . . . . .</b>	<b>161</b>
9.1	Replacing oil seal and grooved ball bearing for propshaft flange . . . . .	161
9.2	Measuring and marking radial run-out at flange for propshaft . . . . .	172
<b>10</b>	<b>Removing and installing oil seals for flange shafts . . . . .</b>	<b>173</b>
10.1	Removing and installing oil seals for flange shafts . . . . .	173
10.2	Renewing right flange shaft oil seal . . . . .	173
10.3	Renewing left flange shaft oil seal . . . . .	176
<b>11</b>	<b>Removing and installing rear final drive . . . . .</b>	<b>180</b>
11.1	Removing and installing rear final drive . . . . .	180
<b>12</b>	<b>Dismantling and assembling rear final drive . . . . .</b>	<b>190</b>
12.1	Dismantling and assembling rear final drive . . . . .	190
12.2	Assembly overview . . . . .	190
12.3	Removing and installing differential together with differential lock . . . . .	193
12.4	Removing and installing differential (version without differential lock) . . . . .	198
12.5	Dismantling and assembling differential . . . . .	204
12.6	Removing and installing drive pinion . . . . .	215
<b>13</b>	<b>Servicing differential lock mechanism - vehicles &gt; 05.94 . . . . .</b>	<b>224</b>
13.1	Servicing differential lock mechanism - vehicles > 05.94 . . . . .	224
13.2	Removing and installing switch for differential lock . . . . .	224
13.3	Routing of pipes and hoses . . . . .	225
13.4	Removing and installing vacuum unit . . . . .	228
13.5	Dismantling and assembling differential lock . . . . .	230
13.6	Adjusting left flange shaft . . . . .	236
<b>14</b>	<b>Adjusting drive pinion and crown wheel . . . . .</b>	<b>237</b>
14.1	Adjusting drive pinion and crown wheel . . . . .	237
14.2	Adjustment and markings of final drive set . . . . .	238
14.3	Recommended sequence for readjusting final drive set . . . . .	238
14.4	Adjustment overview . . . . .	239
14.5	Position of shims . . . . .	240
<b>15</b>	<b>Adjusting drive pinion . . . . .</b>	<b>240</b>
15.1	Adjusting drive pinion . . . . .	240
<b>16</b>	<b>Adjusting crown wheel . . . . .</b>	<b>247</b>
16.1	Adjusting crown wheel . . . . .	247