

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Gearbox identification</b> .....	<b>1</b>
1.1 Gearbox identification .....	1
<b>2 Information on "Automatic gearbox 01N"</b> .....	<b>2</b>
2.1 Information on "Automatic gearbox 01N" .....	2
2.2 Two gearbox generations .....	2
2.3 Self-diagnosis .....	2
<b>3 Code letters, mechanical unit assignment, transmission ratios, equipment</b> .....	<b>2</b>
3.1 Code letters, mechanical unit assignment, transmission ratios, equipment .....	2
<b>4 Filling quantities</b> .....	<b>6</b>
4.1 Filling quantities .....	6
<b>5 Repairs using an exchange component</b> .....	<b>7</b>
5.1 Repairs using an exchange component .....	7
5.2 Scope of supply of the exchange components .....	8
<b>6 General repair instructions</b> .....	<b>15</b>
6.1 General repair instructions .....	15
<b>32 - Torque converter</b> .....	<b>17</b>
<b>1 Torque converter</b> .....	<b>17</b>
1.1 Torque converter .....	17
1.2 Allocation of torque converter .....	18
1.3 Identification of torque converter .....	18
1.4 Removing slide bearing from the turbine shaft .....	19
1.5 Replacing torque converter sealing ring .....	21
1.6 Draining torque converter .....	22
1.7 Checking torque converter .....	23
1.8 Installing torque converter .....	23
<b>37 - Controls, Housing</b> .....	<b>25</b>
<b>1 Servicing shift mechanism</b> .....	<b>25</b>
1.1 Servicing shift mechanism .....	25
1.2 Dismantling and assembling shift mechanism .....	25
1.3 Removing, installing and adjusting selector lever cable .....	36
1.4 Checking shift mechanism .....	38
1.5 Removing, installing and adjusting locking cable .....	39
1.6 Checking ignition key lock .....	40
<b>2 Checking gearbox</b> .....	<b>41</b>
2.1 Checking gearbox .....	41
2.2 Measuring main pressure .....	41
<b>3 Removing and installing gearbox</b> .....	<b>45</b>
3.1 Removing and installing gearbox .....	45
3.2 Transporting the automatic gearbox .....	53
3.3 Mounting gearbox on assembly stand .....	55
3.4 Removing and installing gearbox support .....	57
<b>4 Checking and topping up ATF level</b> .....	<b>59</b>
4.1 Checking and topping up ATF level .....	59
4.2 Checking ATF level .....	60
4.3 Changing ATF or filling up after repairs .....	65
<b>5 Gearbox with selector elements</b> .....	<b>67</b>
5.1 Gearbox with selector elements .....	67
5.2 Position of selector elements .....	68
<b>6 Dismantling and assembling gearbox</b> .....	<b>69</b>



6.1	Dismantling and assembling gearbox . . . . .	69
6.2	Rules for cleanliness when working on the automatic gearbox . . . . .	69
6.3	Removing and installing ATF lines . . . . .	69
6.4	1.8 l Engine . . . . .	70
6.5	2.0 l Engine . . . . .	72
6.6	Diesel engine . . . . .	74
6.7	Cleaning ATF lines and ATF cooler . . . . .	75
<b>7</b>	<b>Dismantling and assembling planetary gearbox . . . . .</b>	<b>76</b>
7.1	Dismantling and assembling planetary gearbox . . . . .	76
7.2	Dismantling planetary gearbox - overview . . . . .	77
7.3	Dismantling planetary gearbox . . . . .	81
7.4	Assembling planetary gearbox -overview- . . . . .	87
7.5	I - Installing planet carrier . . . . .	88
7.6	II - Installing components from reverse gear brake -B1- up to circlip for -B2- supporting tube . . . . .	90
7.7	III - Installing components from large sun gear up to reverse gear clutch -K2- . . . . .	93
7.8	IV - Installing components from supporting tube for -B2- up to ATF pump . . . . .	98
7.9	Assembling planetary gearbox . . . . .	102
7.10	Pressing clutch -K1- onto -K3- . . . . .	113
7.11	Planetary gearbox adjustments - overview . . . . .	115
7.12	I - Adjusting planet carrier . . . . .	116
7.13	II - Adjusting reverse gear brake -B1- - overview . . . . .	122
7.14	III - Adjusting clutch play between -K1- and -K2- . . . . .	127
7.15	IV - 2nd and 4th gear brake -B2- . . . . .	132
<b>38</b>	<b>- Gears, Hydraulic controls . . . . .</b>	<b>146</b>
<b>1</b>	<b>Dismantling and assembling ATF pump . . . . .</b>	<b>146</b>
1.1	Dismantling and assembling ATF pump . . . . .	146
<b>2</b>	<b>Dismantling and assembling freewheel with -B1- piston . . . . .</b>	<b>150</b>
2.1	Dismantling and assembling freewheel with -B1- piston . . . . .	150
<b>3</b>	<b>Dismantling and assembling 1st to 3rd gear clutch -K1- . . . . .</b>	<b>153</b>
3.1	Dismantling and assembling 1st to 3rd gear clutch -K1- . . . . .	153
<b>4</b>	<b>Dismantling and assembling reverse gear clutch -K2- . . . . .</b>	<b>159</b>
4.1	Dismantling and assembling reverse gear clutch -K2- . . . . .	159
<b>5</b>	<b>Dismantling and assembling 3rd and 4th gear clutch -K3- with turbine shaft . . . . .</b>	<b>164</b>
5.1	Dismantling and assembling 3rd and 4th gear clutch -K3- with turbine shaft . . . . .	164
<b>6</b>	<b>Removing and installing valve body . . . . .</b>	<b>170</b>
6.1	Removing and installing valve body . . . . .	170
6.2	Removing and installing oil pan . . . . .	176
6.3	Removing and installing ATF screen . . . . .	177
6.4	Removing and installing valve body . . . . .	178
6.5	Operating rod for manual selector valve . . . . .	179
6.6	Removing and installing conductor strip with 10-pin connector . . . . .	181
<b>7</b>	<b>Dismantling and assembling parking lock . . . . .</b>	<b>183</b>
7.1	Dismantling and assembling parking lock . . . . .	183
<b>8</b>	<b>Removing and installing gearbox housing sender . . . . .</b>	<b>191</b>
8.1	Removing and installing gearbox housing sender . . . . .	191
8.2	Removing and installing speedometer sender -G22 . . . . .	191
8.3	Removing and installing gearbox speed sender -G38 . . . . .	192
8.4	Removing and installing road speed sender -G68 . . . . .	193
<b>39</b>	<b>- Final drive, Differential . . . . .</b>	<b>194</b>
<b>1</b>	<b>Checking oil in final drive . . . . .</b>	<b>194</b>
1.1	Checking oil in final drive . . . . .	194
<b>2</b>	<b>Replacing flange shaft sealing rings . . . . .</b>	<b>195</b>

2.1	Replacing flange shaft sealing rings . . . . .	195
2.2	Replacing left flange shaft sealing ring . . . . .	195
2.3	Replacing right flange shaft sealing ring . . . . .	197
2.4	Removing and installing grooved ball bearing for output shaft of drive flange . . . . .	200
<b>3</b>	<b>Dismantling and assembling final drive . . . . .</b>	<b>202</b>
3.1	Dismantling and assembling final drive . . . . .	202
3.2	Repair overview of final drive . . . . .	202
3.3	Removing and installing input gear . . . . .	203
3.4	Removing and installing drive pinion . . . . .	211
3.5	Removing and installing differential . . . . .	223
3.6	Dismantling and assembling differential . . . . .	228
3.7	Removing and installing differential bevel gears . . . . .	238
<b>4</b>	<b>Adjusting final drive . . . . .</b>	<b>239</b>
4.1	Adjusting final drive . . . . .	239
4.2	Overview of adjustments . . . . .	240
4.3	Adjustment overview . . . . .	242
4.4	Adjusting input gear . . . . .	242
<b>5</b>	<b>Adjusting drive pinion and crown wheel . . . . .</b>	<b>244</b>
5.1	Adjusting drive pinion and crown wheel . . . . .	244
5.2	Adjusting and marking of final drive sets . . . . .	245
5.3	Readjustment sequence for final drive set . . . . .	246
5.4	Adjusting drive pinion . . . . .	250
5.5	Adjusting crown wheel . . . . .	257