

Contents

01 - Self-diagnosis, Electrical test	1
1 Self-diagnosis function	1
1.1 Self-diagnosis function	1
1.2 Technical data for self-diagnosis	2
2 Electrical/electronic	3
2.1 Electrical/electronic	3
2.2 Electrical/electronic components and fitting locations	3
2.3 Removing and installing automatic gearbox control unit -J217	9
2.4 Adjusting kickdown switch -F8	10
3 Performing self-diagnosis	10
3.1 Performing self-diagnosis	10
3.2 Safety precautions	11
3.3 Notes on brake and performance tests and towing	11
3.4 Connecting vehicle diagnostic, testing and information system VAS 5051 or fault reader V.A.G 1551 and selecting functions	11
3.5 List of selectable functions	14
4 Interrogating fault memory	14
4.1 Interrogating fault memory	14
4.2 Fault table	15
5 Final control diagnosis	21
5.1 Final control diagnosis	21
6 Erasing fault memory	23
6.1 Erasing fault memory	23
7 Reading measured value block	24
7.1 Reading measured value block	24
7.2 Display group overview	25
8 Electrical test	31
8.1 Electrical test	31
8.2 Connecting test box V.A.G 1598 A	32
8.3 Test table	33
8.4 Testing wiring connection between automatic gearbox control unit -J217 and gearbox	40
9 Testing wiring of diagnostic connectors	43
9.1 Testing wiring of diagnostic connectors	43
9.2 Testing voltage supply of black diagnostic connector	44
9.3 Testing wiring connection between white diagnostic connector and gearbox control unit	44