

## Contents

<b>01 - Self-diagnosis . . . . .</b>	<b>1</b>
<b>1 Motronic self-diagnosis . . . . .</b>	<b>1</b>
1.1 Motronic self-diagnosis . . . . .	1
1.2 Technical data of self-diagnosis . . . . .	1
1.3 Safety precautions . . . . .	1
1.4 Connecting vehicle diagnostic, testing and information system VAS 5051/ fault reader V.A.G 1551 and selecting functions . . . . .	1
<b>2 Interrogating and erasing fault memory . . . . .</b>	<b>4</b>
2.1 Interrogating and erasing fault memory . . . . .	4
2.2 Fault table . . . . .	6
2.3 Fault codes 00515 - 16507 . . . . .	6
2.4 Fault codes 16514 - 18020 . . . . .	15
<b>3 Final control diagnosis . . . . .</b>	<b>24</b>
3.1 Final control diagnosis . . . . .	24
<b>4 Basic setting . . . . .</b>	<b>26</b>
4.1 Basic setting . . . . .	26
<b>5 Encoding control unit . . . . .</b>	<b>28</b>
5.1 Encoding control unit . . . . .	28
5.2 Encoding table . . . . .	29
<b>6 Reading measured value block . . . . .</b>	<b>29</b>
6.1 Reading measured value block . . . . .	29
6.2 List of display groups . . . . .	30
6.3 Display specifications . . . . .	34
6.4 Display groups 008 to 099 . . . . .	41
<b>7 Checking wiring of diagnostic connectors . . . . .</b>	<b>51</b>
7.1 Checking wiring of diagnostic connectors . . . . .	51
7.2 Checking power supply for "black" diagnostic connector . . . . .	52
7.3 Checking wiring between "white" diagnostic connector and engine control unit . . . . .	52
<b>24 - Mixture preparation, Injection . . . . .</b>	<b>55</b>
<b>1 Servicing Motronic injection system . . . . .</b>	<b>55</b>
1.1 Servicing Motronic injection system . . . . .	55
1.2 Safety precautions . . . . .	55
1.3 Rules for cleanliness . . . . .	55
1.4 Technical data . . . . .	56
1.5 Exploded view of fitting locations . . . . .	57
1.6 Removing and installing intake-manifold changeover system components . . . . .	60
1.7 Removing and installing throttle valve control part . . . . .	62
1.8 Wiring and component check using test box V.A.G 1598/19 . . . . .	64
1.9 Replacing engine control unit . . . . .	65
1.10 Checking idling speed . . . . .	67
1.11 Checking system pressure, fuel pressure regulator and holding pressure . . . . .	70
1.12 Checking injectors . . . . .	73
1.13 Dismantling and assembling fuel rail with injectors . . . . .	79
1.14 Removing and installing injectors . . . . .	80
1.15 Checking injection quantity, freedom from leaks and spray pattern of injectors . . . . .	81
1.16 Checking fuel pump relay -J17 and actuation . . . . .	83
1.17 Checking air-mass meter -G70 . . . . .	89
1.18 Checking intake system for leaks (unmetered air) . . . . .	92
<b>2 Checking intake manifold changeover . . . . .</b>	<b>93</b>
2.1 Checking intake manifold changeover . . . . .	93
2.2 Checking operation . . . . .	93
2.3 Checking for leaks in vacuum system for intake-manifold changeover . . . . .	94

2.4	Checking intake-manifold changeover valve -N156 . . . . .	96
<b>3</b>	<b>Checking Lambda control . . . . .</b>	<b>100</b>
3.1	Checking Lambda control . . . . .	100
3.2	Engine running problems following cold start . . . . .	101
3.3	Checking operation . . . . .	102
3.4	Checking Lambda probe heating . . . . .	104
3.5	Checking Lambda-probe signal wire and actuation . . . . .	106
3.6	Removing and installing Lambda probe . . . . .	108
<b>4</b>	<b>Checking fuel tank breather system . . . . .</b>	<b>109</b>
4.1	Checking fuel tank breather system . . . . .	109
4.2	Checking activated charcoal filter solenoid valve . . . . .	110
<b>5</b>	<b>Checking throttle valve control part . . . . .</b>	<b>113</b>
5.1	Checking throttle valve control part . . . . .	113
5.2	Adaption of throttle valve control part to engine control unit . . . . .	114
5.3	Checking idling switch -F60 . . . . .	115
5.4	Checking sender for throttle valve positioner and throttle valve potentiometer . . . . .	117
<b>6</b>	<b>Checking additional signals . . . . .</b>	<b>120</b>
6.1	Checking additional signals . . . . .	120
6.2	Checking air-conditioner compressor shutoff . . . . .	121
6.3	Checking speed increase for air conditioner . . . . .	122
6.4	Checking heated rear window signal - vehicles > 1996 . . . . .	123
6.5	Checking engine-speed signal . . . . .	124
6.6	Checking consumption signal for on-board computer . . . . .	125
6.7	Checking vehicle-speed signal . . . . .	125
6.8	Checking gear signal . . . . .	126
6.9	Checking ignition timing retardation on changing gear . . . . .	127
6.10	Checking output signal for throttle valve position . . . . .	129
<b>28 - Ignition system . . . . .</b>	<b>131</b>	
<b>1</b>	<b>Checking ignition system . . . . .</b>	<b>131</b>
1.1	Checking ignition system . . . . .	131
1.2	Safety precautions . . . . .	131
1.3	Technical data . . . . .	131
1.4	Removing and installing ignition system components . . . . .	132
1.5	Checking ignition coils . . . . .	136
1.6	Checking engine speed sender -G28 . . . . .	140
1.7	Checking intake-air temperature sender -G42 . . . . .	143
1.8	Checking coolant temperature sender -G62 . . . . .	146
1.9	Checking control unit power supply . . . . .	149
1.10	Checking knock sensors . . . . .	152
1.11	Checking Hall sender -G40 . . . . .	155