

Contents

01	Self-diagnosis	1
1	Mono-Motronic self-diagnosis	1
1.1	Mono-Motronic self-diagnosis	1
1.2	Technical data of self-diagnosis	1
1.3	Safety precautions	1
1.4	Connecting vehicle diagnostic, testing and information system VAS 5051/ fault reader V.A.G 1551 and selecting functions	1
2	Interrogating and erasing fault memory	4
2.1	Interrogating and erasing fault memory	4
2.2	Fault table	6
3	Final control diagnosis	11
3.1	Final control diagnosis	11
4	Basic setting	13
4.1	Basic setting	13
5	Encoding control unit	14
5.1	Encoding control unit	14
6	Reading measured value block	15
6.1	Reading measured value block	15
6.2	List of display groups	16
7	Checking wiring of diagnostic connectors	22
7.1	Checking wiring of diagnostic connectors	22
7.2	Checking power supply for "black" diagnostic connector	23
7.3	Checking wiring between "white" diagnostic connector and engine control unit	23
24	Mixture preparation, Injection	27
1	Servicing Mono-Motronic injection system	27
1.1	Servicing Mono-Motronic injection system	27
1.2	Safety precautions	27
1.3	Rules for cleanliness	27
1.4	Technical data	28
1.5	Exploded view of fitting locations	28
1.6	Removing and installing injection system components	31
1.7	Servicing top part of injection unit	36
1.8	Servicing bottom part of injection unit	39
1.9	Wiring and component check using test box V.A.G 1598/18	42
1.10	Replacing engine control unit	43
1.11	Checking idling speed	45
1.12	Checking system pressure, fuel pressure regulator and holding pressure	47
1.13	Checking injector	51
1.14	Checking overrun shutoff	54
1.15	Checking fuel-pump relay -J17 and actuation	56
1.16	Checking intake system for leaks (unmetered air)	62
2	Checking Lambda control	63
2.1	Checking Lambda control	63
2.2	Checking Lambda probe -G39 and Lambda control	64
2.3	Checking Lambda probe heater -Z19	66
2.4	Removing and installing Lambda probe	68
3	Checking fuel tank breather system	69
3.1	Checking fuel tank breather system	69
3.2	Checking activated charcoal filter solenoid valve -N80	70
4	Checking throttle valve potentiometer -G69	74
4.1	Checking throttle valve potentiometer -G69	74



4.2	Checking throttle valve positioner -V60	76
4.3	Checking throttle valve positioner sender -G127	79
4.4	Checking and adjusting idling switch -F60	82
5	Checking intake air preheating	85
5.1	Checking intake air preheating	85
6	Checking intake-manifold preheating	86
6.1	Checking intake-manifold preheating	86
6.2	Checking intake-manifold preheating heater element -N51	87
6.3	Checking intake-manifold preheating relay -J81	87
7	Checking additional signals	92
7.1	Checking additional signals	92
7.2	Checking speed increase for air conditioner	93
7.3	Checking air-conditioner compressor shutoff	93
7.4	Checking engine-speed signal	94
7.5	Checking vehicle-speed signal	94
8	Vacuum diagram	96
8.1	Vacuum diagram	96
28 - Ignition system		97
1	Checking ignition system	97
1.1	Checking ignition system	97
1.2	Safety precautions	97
1.3	Technical data	97
1.4	Servicing ignition system	98
1.5	Installing ignition distributor	101
1.6	Checking and adjusting ignition point	102
1.7	Checking ignition coil -N70	104
1.8	Checking output stage for ignition coil	106
1.9	Checking intake-air temperature sender -G42	109
1.10	Checking coolant temperature sender -G62	112
1.11	Checking control unit power supply	115
1.12	Checking Hall sender -G40	117