

Contents

01 - Self-diagnosis	1
1 Mono-Motronic self-diagnosis	1
1.1 Mono-Motronic self-diagnosis	1
1.2 List of control units	1
1.3 Technical data of self-diagnosis	1
1.4 Connecting vehicle diagnostic, testing and information system VAS 5051/ fault reader V.A.G 1551 and selecting functions	1
2 Interrogating and erasing fault memory	4
2.1 Interrogating and erasing fault memory	4
2.2 Fault table	6
3 Final control diagnosis	11
3.1 Final control diagnosis	11
4 Basic setting	13
4.1 Basic setting	13
5 Encoding control unit	15
5.1 Encoding control unit	15
6 Checking wiring of diagnostic connectors	17
6.1 Checking wiring of diagnostic connectors	17
6.2 Checking power supply for "black" diagnostic connector	18
6.3 Checking wiring between "white"/"brown" diagnostic connector and engine control unit	18
24 - Mixture preparation, Injection	21
1 Servicing Mono-Motronic injection system	21
1.1 Servicing Mono-Motronic injection system	21
1.2 Safety precautions	21
1.3 Rules for cleanliness	21
1.4 Technical data	22
1.5 Exploded view of fitting locations	22
1.6 Removing and installing injection system components	25
1.7 Servicing top part of injection unit	30
1.8 Servicing bottom part of injection unit	33
1.9 Wiring and component check using test box V.A.G 1598 A	37
1.10 Replacing engine control unit	38
1.11 Checking idling speed	40
1.12 Checking system pressure, fuel pressure regulator and holding pressure	42
1.13 Checking injector	46
1.14 Checking overrun shutoff	49
1.15 Checking fuel-pump relay -J17 and actuation	51
1.16 Checking intake system for leaks (unmetered air)	57
2 Checking Lambda control	58
2.1 Checking Lambda control	58
2.2 Checking Lambda probe and signal wire	59
2.3 Checking Lambda probe heating	60
2.4 Removing and installing Lambda probe	62
3 Checking fuel tank breather system	63
3.1 Checking fuel tank breather system	63
3.2 Checking activated charcoal filter solenoid valve -N80	64
4 Checking throttle valve potentiometer -G69	68
4.1 Checking throttle valve potentiometer -G69	68
4.2 Checking and adjusting throttle damper	70
4.3 Checking throttle valve positioner -V60	72
4.4 Checking idling-speed switch	74

5	Checking intake air preheating	78
5.1	Checking intake air preheating	78
6	Checking intake-manifold preheating	79
6.1	Checking intake-manifold preheating	79
6.2	Checking intake-manifold preheating heater element -N51	80
6.3	Checking intake-manifold preheating relay -J81	80
7	Checking additional signals	85
7.1	Checking additional signals	85
7.2	Checking speed increase for air conditioner	85
7.3	Checking air-conditioner compressor shutoff	86
7.4	Checking engine-speed signal	87
7.5	Checking vehicle-speed signal	87
8	Vacuum diagram	89
8.1	Vacuum diagram	89
28 - Ignition system	90	
1	Checking ignition system	90
1.1	Checking ignition system	90
1.2	Safety precautions	90
1.3	Technical data	90
1.4	Servicing ignition system	91
1.5	Installing ignition distributor	94
1.6	Checking and adjusting ignition point	95
1.7	Checking ignition coil 1 with output stage -N70	97
1.8	Checking output stage for ignition coil	99
1.9	Checking intake-air temperature sender -G42	102
1.10	Checking coolant temperature sender -G62	105
1.11	Checking control unit power supply	108
1.12	Checking Hall sender -G40	110