

## Indice

<b>00 Technical data</b>	<b>Page</b>
Technical data	00- 1
– Engine number	00- 1
– List of engines	00- 2
<b>10 Removing and installing engine</b>	<b>Page</b>
Removing and installing engine	10- 1
– Removing engine	10- 1
– Attaching engine to repair stand	10-18
– Installing engine	10-19
– Tightening torques	10-20
<b>13 Crankshaft group</b>	<b>Page</b>
Dismantling and assembling engine	13- 1
Dismantling and assembling crankcase, crankshaft and flywheel	13- 3
Removing and installing ribbed V-belt	13- 5
Removing and installing vibration damper	13- 7
– Removing and installing toothed belt	13- 8
– Renewing crankshaft seals	13-12
– Removing and inserting flywheel needle bearing	13-14
– Removing and installing flywheel/driven plate, installation dimensions	13-15
– Checking crankshaft axial and radial play	13-17
– Crankshaft dimensions	13-19
– Pistons and piston rings	13-20
– Checking cylinder bore	13-23
– Piston and cylinder dimensions	13-24
– Connecting rod, connecting rod bearings	13-25
<b>15 Valve gear</b>	<b>Page</b>
Servicing valve gear	15- 1
Removing and installing cylinder head	15- 3
– Installing cylinder head cover	15- 5
– Renewing cylinder head seals	15- 6
– Removing and installing cylinder head	15- 9
– Checking cylinder head for distortion	15-15
– Testing compression pressure	15-16
– Removing and installing camshaft	15-17
– Checking hydraulic bucket tappets	15-18
– Renewing valve stem seals	15-20
– Checking and reworking valves	15-22
– Checking and renewing valve guides	15-23
– Reworking valve seats	15-25

