

## Contents

<b>01</b>	<b>Self-diagnosis</b> .....	<b>1</b>
1	<b>Self-diagnosis</b> .....	1
1.1	Self-diagnosis .....	1
<b>23</b>	<b>Mixture preparation, Injection</b> .....	<b>2</b>
1	<b>Servicing diesel injection system</b> .....	<b>2</b>
1.1	Servicing diesel injection system .....	2
1.2	Rules for cleanliness .....	2
1.3	Repairing fuel injection system .....	3
1.4	Removing and installing injection pump .....	6
1.5	Checking and adjusting basic mechanical setting .....	10
1.6	Checking and adjusting start of delivery of injection pump .....	14
1.7	Adjusting idling speed, idling speed increase and cutoff speed .....	18
1.8	Basic setting of residual fuel quantity .....	20
1.9	Checking injectors and constant pressure valves .....	21
1.10	Removing and installing injectors .....	21
1.11	Removing and installing constant pressure valves .....	23
1.12	Repairing injectors .....	25
1.13	Checking and adjusting injectors .....	27
2	<b>Repairing injection pump</b> .....	<b>32</b>
2.1	Repairing injection pump .....	32
2.2	Removing and installing adjustment lever shaft with load impact damping .....	38
2.3	Removing and installing injection pump cover .....	41
2.4	Replacing bearing bush for adjustment lever in injection pump cover .....	45
2.5	Replace O-ring for adjustment lever shaft .....	46
2.6	Replacing O-ring on the shaft for idling speed increase .....	47
2.7	Replacing O-ring for fuel quantity adjustment screw .....	48
2.8	Replacing the O-ring on the front of the injection timing device cover .....	49
2.9	Replacing the O-ring on the rear of the injection timing device cover .....	50
2.10	Replacing O-ring for cold start acceleration actuator .....	50
2.11	Replacing O-rings on the pressure control valve .....	51
<b>28</b>	<b>Ignition system</b> .....	<b>52</b>
1	<b>Checking glow plug system</b> .....	<b>52</b>
1.1	Checking glow plug system .....	52
1.2	Checking function .....	52
1.3	Removing and installing glow plugs .....	54
1.4	Glow plugs with burnt heater elements .....	55
1.5	Checking glow plugs .....	55