

Contents

00 - Technical data	1
1 Technical data	1
1.1 Technical data	1
1.2 Engine number	1
1.3 Changes during the production period	1
1.4 Engine data	2
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Removing and installing engine	3
1.2 Removing	4
1.3 Attaching engine to repair stand	16
1.4 Installing	17
1.5 Tightening torques	19
13 - Crankshaft group	21
1 Dismantling and assembling engine	21
1.1 Dismantling and assembling engine	21
1.2 Ribbed belt drive for vane pump, alternator and viscous fan	21
1.3 Removing and installing ribbed belt	27
1.4 Removing and installing vibration damper	29
1.5 Toothed belt drive for camshafts	32
1.6 Removing and installing camshaft toothed belt	37
1.7 Toothed belt drive for injection pump	45
1.8 Removing and installing injection pump toothed belt	49
1.9 Positioning crankshaft to TDC with engine removed	52
2 Removing and installing crankshaft, flywheel and sealing flange	54
2.1 Removing and installing crankshaft, flywheel and sealing flange	54
2.2 Replacing crankshaft oil seal on pulley end	60
2.3 Removing and installing flywheel/drive plate	61
2.4 Removing and installing needle bearing in flywheel	64
2.5 Crankshaft dimensions	65
3 Dismantling and assembling pistons and conrods	66
3.1 Dismantling and assembling pistons and conrods	66
3.2 Checking piston projection at TDC	72
3.3 Piston and cylinder dimensions	74
3.4 Checking radial play of conrods	74
15 - Cylinder head, Valve gear	75
1 Removing and installing cylinder head	75
1.1 Removing and installing cylinder head	75
1.2 Removing and installing cylinder head cover	80
1.3 Removing cylinder head	82
1.4 Installing cylinder head	88
1.5 Checking compression	91
2 Servicing valve gear	93
2.1 Servicing valve gear	93
2.2 Checking camshaft axial play	101
2.3 Removing and installing camshaft	102
2.4 Checking hydraulic bucket tappets	106
2.5 Replacing valve stem seals	107
2.6 Reworking valve seats	110
2.7 Checking valve guides	112
2.8 Replacing valve guides	113



17 - Lubrication	115
1 Removing and installing parts of the lubrication system	115
1.1 Removing and installing parts of the lubrication system	115
1.2 Removing and installing oil pan	120
1.3 Removing and installing oil pump	123
1.4 Checking oil pressure and oil pressure switch	126
1.5 Engine oil	128
1.6 Checking oil level	128
1.7 Removing and installing parts of the crankcase vent - engine codes AAT, AEL	130
1.8 Diagram of connections for crankcase vent - engine codes AAT, AEL	132
19 - Cooling system	134
1 Removing and installing parts of the cooling system	134
1.1 Removing and installing parts of the cooling system	134
1.2 Parts of cooling system	135
1.3 Draining and filling cooling system	139
1.4 Removing and installing coolant pump	143
1.5 Removing, installing and checking coolant thermostat	144
1.6 Removing and installing viscous fan	144
1.7 Checking viscous fan	146
1.8 Removing and installing radiator	146
1.9 Checking cooling system for leaks	151
21 - Charging	153
1 Checking charge air system with turbocharger	153
1.1 Checking charge air system with turbocharger	153
1.2 Test requirements for checking exhaust turbocharging	154
1.3 Effects of leaks in intake or exhaust system	154
1.4 Test boost pressure	155
1.5 Diagram of connections for boost pressure control system	161
1.6 Checking solenoid valve for boost pressure limitation -N75	163
1.7 Checking intake manifold pressure sender -G71	167
2 Servicing charge air system with turbocharger	172
2.1 Servicing charge air system with turbocharger	172
2.2 Rules for cleanliness	172
2.3 Removing and installing turbocharger - overview	173
2.4 Removing and installing turbocharger	176
2.5 Removing and installing parts of charge air cooling system	179
2.6 Removing and installing charge air cooler (intercooler)	182
26 - Exhaust system	185
1 Removing and installing parts of exhaust system	185
1.1 Removing and installing parts of exhaust system	185
1.2 Vehicles with front-wheel drive	185
1.3 Stress-free alignment of the exhaust system - Vehicles with front wheel drive	192
1.4 Vehicles with four-wheel drive	195
1.5 Separating centre and rear silencers - Vehicles with four-wheel drive	200
1.6 Stress-free alignment of exhaust system - Vehicles with four-wheel drive	201
1.7 Check exhaust system for leaks	202
2 Exhaust gas recirculation system - engine codes AAT, AEL	203
2.1 Exhaust gas recirculation system - engine codes AAT, AEL	203
2.2 Removing and installing exhaust gas recirculation components	203
2.3 Diagram of exhaust gas recirculation connections with valve for old exhaust gas recirculation design	205
2.4 Diagram of exhaust gas recirculation connections with valve for new exhaust gas recirculation design	206

2.5	Checking mechanical EGR valve206
2.6	Checking EGR207
2.7	Checking EGR valve -N18212