

Contents

1	Overview of engines	1
2	Delivery Inspection	7
3	LongLife Service	10
4	Oil Change Service	15
5	Inspection Service	16
6	Description of work	20
6.1	Turbocharger: greasing rod linkage	20
6.2	Final drive (automatic gearbox): checking oil level, topping up with oil if necessary	20
6.3	Battery: checking	22
6.4	Battery: checking that battery terminals are securely seated	23
6.5	Battery: checking "no load" voltage before engine is started for first time	24
6.6	Battery: performing load test	25
6.7	Lights, electrical equipment, switches, displays and other driver-operated controls: checking operation	26
6.8	Tyres: checking condition, wear pattern, tread depth and correcting inflation pressures ..	27
6.9	Brake system: visual check for leaks and damage	28
6.10	Brake pads: checking thickness	29
6.11	Brake fluid level (depends on brake pad wear): checking	29
6.12	Brake fluid: changing (every 2 years)	30
6.13	Electric windows: checking positions	36
6.14	Self-diagnosis: interrogating fault memory with fault reader V.A.G 1551 or vehicle diagnostic, testing and information system VAS 5051	36
6.15	Vehicle keys: checking operation	38
6.16	Noise insulation: removing	38
6.17	Rear window wiper/washer system (Avant): checking jet settings and operation	39
6.18	Rear window wiper: eliminating juddering	40
6.19	Rear lid hinges: lubricating	41
6.20	Hydraulic system: checking for leaks, checking hydraulic fluid level and topping up if necessary	41
6.21	Interior monitoring: checking operation	42
6.22	Air conditioner: checking operation and setting temperature to 22 °C	42
6.23	Instrument cluster: setting the language	42
6.24	Crankcase pressure: checking (V6 TDI engines AFB, AKN)	44
6.25	Cooling system: checking antifreeze and topping up with coolant if necessary	45
6.26	V-belt and poly V-belt: renewing	48
6.27	Fuel filter: renewing (TDI engines)	50
6.28	Fuel filter: renewing (biturbo RS 6)	53
6.29	Fuel filter: draining (TDI engines up to chassis number 4BYN 002 887)	53
6.30	Radiator: cleaning	55
6.31	Poly V-belt and toothed belt: checking (RS 6 engines)	55
6.32	Bearing bushes for poly V-belt tensioner: checking	57
6.33	Air cleaner housing and snow strainer: cleaning; renewing filter element	57
6.34	Engine cover panel: removing	60
6.35	Engine (from above and below) and engine compartment: visual check for leaks and damage	62
6.36	multitronic gearbox 01J: checking ATF, changing ATF	63
6.37	Engine oil: draining or extracting, changing oil filter	67
6.38	Engine oil: filling up	70
6.39	Engine oil level: checking	72
6.40	Low range gearing: performing basic setting	72
6.41	Dust and pollen filter element: renewing	74
6.42	Road test	74
6.43	Tyre repair kit: checking	75
6.44	Wheel bolts: tightening to specified torque	76



6.45	Radio / Navigation System plus (chorus, concert, symphony): deactivating transport mode	76
6.46	Radio / Navigation System Plus: activating anti-theft coding by entering fixed code number	79
6.47	Service interval display: resetting > 1999 (X)	80
6.48	Service interval display: resetting LongLife Service from model year > 2000 (Y) onwards	82
6.49	Service interval display: resetting Inspection Service (fixed interval) from model year 2000 > Y onwards	98
6.50	Track rod ball joints: checking play, security and boots	110
6.51	Joints on front axle: checking play, attachment and boots	110
6.52	Windscreen wiper/washer system: checking jet settings and operation	111
6.53	Windscreen and headlight washer system: topping up with washer fluid	112
6.54	Headlight washer system: checking jet settings	113
6.55	Wiper blades: checking park position and checking for damage	113
6.56	Sliding/tilting sunroof: cleaning and lubricating	115
6.57	Lock carrier: pulling to front	118
6.58	Manual gearbox: checking oil level, topping up with oil if necessary	122
6.59	Headlights: checking settings and adjusting if necessary	123
6.60	Door hinges with arresters, lock cylinder and bonnet arrester hook: lubricating	128
6.61	Transport locks: removing	130
6.62	Telematics: renewing emergency backup battery	130
6.63	Underseal: visual check for damage	131
6.64	Steps required before disconnecting battery	131
6.65	Hoses for charge air cooler: cleaning	131
6.66	Plenum chamber: checking and cleaning water drain	132
6.67	Plenum chamber cover: removing	133
6.68	Winter tyres (factory-fitted)	133
6.69	Toothed belt for camshaft drive: checking (4-cyl. TDI engines up to chassis number 4BYN 002 887)	133
6.70	Spark plugs: renewing	134
6.71	Toothed belt: checking (2.5 ltr. TDI engines)	140
6.72	Toothed belt for camshaft drive: renewing	141
7		143
8	Lifting the vehicle	146
9	Tow-starting/towing	147
10	Vehicle tests carried out as part of inspection services and maintenance	151