

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Technical data</b> .....	<b>1</b>
1.1 Running gear .....	1
1.2 Steering .....	1
<b>2 Proper disposal procedures for oil-filled and gas-filled components</b> .....	<b>2</b>
2.1 Releasing gas from shock absorbers .....	2
2.2 Draining steering damper .....	3
2.3 Draining power steering rack .....	3
<b>3 Checking shock absorbers</b> .....	<b>4</b>
3.1 Leaks at shock absorbers .....	4
3.2 Noises from shock absorbers .....	4
3.3 Checking shock absorbers when removed .....	4
3.4 Checking shock absorbers on shock tester .....	5
<b>4 Subframe/body mountings</b> .....	<b>9</b>
4.1 Repairing damaged threads .....	9
<b>40 - Front suspension</b> .....	<b>10</b>
<b>1 General notes</b> .....	<b>10</b>
1.1 General information .....	10
1.2 Contact corrosion .....	10
1.3 Repairing threads in longitudinal member .....	11
<b>2 Mount with transverse brace, connection of upper links to wheel bearing housing</b> .....	<b>12</b>
2.1 Exploded view of mount with transverse brace, connection of upper links to wheel bearing housing .....	12
2.2 Removing and installing mount with transverse brace .....	15
2.3 Separating upper links from wheel bearing housing (steel) .....	15
<b>3 Suspension strut, explanatory notes on factory codes (PR nos.)</b> .....	<b>19</b>
3.1 Removing and installing suspension strut .....	19
3.2 Servicing suspension strut .....	21
3.3 Explanatory notes on weight codes used in production (PR numbers) .....	25
<b>4 Steel wheel bearing housing</b> .....	<b>26</b>
4.1 Removing and installing wheel bearing housing .....	26
4.2 Removing and installing front wheel bearing with wheel bearing housing removed .....	28
4.3 Removing and installing front wheel bearing with wheel bearing housing installed .....	34
<b>5 Aluminium wheel bearing housing</b> .....	<b>38</b>
5.1 Removing and installing aluminium wheel bearing housing .....	38
5.2 Servicing front wheel bearing .....	40
5.3 Removing and installing wheel bearing unit .....	42
<b>6 Lightweight wheel hub</b> .....	<b>47</b>
6.1 Servicing lightweight wheel hub .....	47
<b>7 Servicing mounting bracket (steel wheel bearing housing)</b> .....	<b>49</b>
7.1 Removing and installing mounting bracket (steel wheel bearing housing) .....	49
7.2 Replacing bush, front and rear upper link (steel wheel bearing housing) .....	52
<b>8 Servicing mounting bracket (aluminium wheel bearing housing)</b> .....	<b>54</b>
8.1 Removing and installing mounting bracket (aluminium wheel bearing housing) .....	54
<b>9 Servicing subframe</b> .....	<b>58</b>
9.1 Removing and installing subframe .....	58
9.2 Pre-tensioned bushes (4-cyl.) .....	61
9.3 Renewing subframe bushes .....	63
<b>10 Track control link (steel wheel bearing housing), vehicle level sender</b> .....	<b>66</b>
10.1 Removing and installing track control link .....	66

10.2	Renewing bush for track control link	67
10.3	Vehicle level senders	69
<b>11</b>	<b>Track control link (aluminium wheel bearing housing)</b>	<b>74</b>
11.1	Removing and installing track control link (aluminium wheel bearing housing)	74
<b>12</b>	<b>Guide link (steel wheel bearing housing)</b>	<b>76</b>
12.1	Removing and installing guide link	76
12.2	Renewing guide link bush	77
<b>13</b>	<b>Guide link (aluminium wheel bearing housing)</b>	<b>79</b>
13.1	Removing and installing guide link (aluminium wheel bearing housing)	79
<b>14</b>	<b>Anti-roll bar, connecting link</b>	<b>81</b>
14.1	Removing and installing anti-roll bar	81
14.2	Coupling rod with rubber bushes in place of coupling rod with ball joint was introduced for Model Year '99.	81
<b>15</b>	<b>Front axle (allroad)</b>	<b>83</b>
15.1	Exploded view of front axle (allroad)	83
15.2	Spacers	85
15.3	Transverse brace/support	86
<b>16</b>	<b>Drive shaft</b>	<b>87</b>
16.1	Removing and installing drive shaft	87
<b>17</b>	<b>Servicing drive shaft with inner constant velocity joint</b>	<b>89</b>
17.1	Exploded view	89
<b>18</b>	<b>Servicing drive shafts with triple roller joint AAR 2900</b>	<b>96</b>
18.1	Exploded view	96
18.2	Servicing outer constant velocity joint	98
18.3	Dismantling and assembling triple roller joint AAR 2900	99
<b>19</b>	<b>Servicing drive shafts with triple roller joint AAR 3300 i</b>	<b>106</b>
19.1	Exploded view	106
19.2	Servicing outer constant velocity joint	108
19.3	Dismantling and assembling triple roller joint AAR 3300 i	109
<b>42</b>	<b>Rear suspension</b>	<b>116</b>
<b>1</b>	<b>General notes</b>	<b>116</b>
1.1	General information	116
1.2	Contact corrosion	116
1.3	Repairing threads in longitudinal member	117
<b>2</b>	<b>Rear axle, mounting bracket, vehicle level sender (front-wheel drive vehicles)</b>	<b>118</b>
2.1	Exploded view of rear axle, mounting bracket, vehicle level sender (front-wheel drive vehicles)	118
2.2	Removing and installing rear axle with mounting bracket	120
2.3	Removing and installing mounting bracket	123
2.4	Vehicle level sender in vehicles with automatic headlight range control, front-wheel drive vehicles	127
<b>3</b>	<b>Wheel bearing (front-wheel drive)</b>	<b>128</b>
3.1	Exploded view of wheel bearing (front-wheel drive)	128
3.2	Removing and installing wheel bearing/wheel hub unit	128
<b>4</b>	<b>Shock absorber/spring (front-wheel drive vehicles)</b>	<b>131</b>
4.1	Removing and installing shock absorber/spring	131
4.2	Servicing shock absorber (front-wheel drive vehicles)	132
<b>5</b>	<b>Rear axle (four-wheel drive vehicles)</b>	<b>134</b>
5.1	Exploded view of rear axle (four-wheel drive vehicles)	134
5.2	Removing and installing subframe	136
5.3	Aligning subframe with vehicle	140
5.4	Replacing bonded rubber bushes for subframe (steel)	140
5.5	Replacing bonded rubber bushes for subframe (aluminium)	144

<b>6</b>	<b>Subframe, final drive (four-wheel drive vehicles)</b>	<b>151</b>
6.1	Exploded view of subframe, final drive (four-wheel drive vehicles)	151
6.2	Pressing out/pressing in bonded rubber bush for cross member	152
6.3	Pressing out/pressing in bonded rubber bush for gearbox support	153
<b>7</b>	<b>Shock absorber/spring (four-wheel drive vehicles)</b>	<b>154</b>
7.1	Removing and installing shock absorber/spring	154
7.2	Dismantling and assembling suspension strut	155
7.3	Retrofitting dust sleeve for shock absorber piston rod.	158
<b>8</b>	<b>Wheel bearing housing (steel), upper link, lower link, vehicle level sender , coupling rod for anti-roll bar (four-wheel drive vehicles)</b>	<b>160</b>
8.1	Exploded view of wheel bearing housing (steel), upper link, lower link, vehicle level sender , coupling rod for anti-roll bar (four-wheel drive vehicles)	160
8.2	Removing and installing wheel bearing housing	162
8.3	Pressing rear wheel bearing out and in with wheel bearing housing removed	164
8.4	Pressing rear wheel bearing out and in with wheel bearing housing fitted	168
8.5	Removing and installing bonded rubber bush for wheel bearing housing	171
8.6	Removing and installing upper suspension link	173
8.7	Renewing bonded rubber bush for upper link	174
8.8	Removing and installing lower wishbone	175
8.9	Servicing lower link	177
8.10	Vehicle level sender in vehicles with automatic headlight range control	179
8.11	Removing and installing coupling rod for anti-roll bar	180
<b>9</b>	<b>Servicing wheel bearing housing (aluminium), wheel bearing unit, coupling rod and link (four-wheel drive vehicles)</b>	<b>182</b>
9.1	Exploded view of wheel bearing housing (aluminium), wheel bearing unit, coupling rod and link (four-wheel drive vehicles)	182
9.2	Removing and installing bonded rubber bush for wheel bearing housing (aluminium)	185
9.3	Removing and installing wheel bearing unit	187
9.4	Removing and installing wheel bearing housing	191
9.5	Removing and installing coupling rod (plastic) for anti-roll bar	193
<b>10</b>	<b>Lightweight wheel hub</b>	<b>195</b>
10.1	Servicing lightweight wheel hub	195
<b>11</b>	<b>Stone deflector, spacers</b>	<b>197</b>
11.1	Removing and installing stone deflector	197
11.2	Spacers - allroad	197
<b>12</b>	<b>Drive shaft</b>	<b>198</b>
12.1	Removing and installing drive shafts	198
<b>13</b>	<b>Servicing drive shaft with constant velocity joint</b>	<b>200</b>
13.1	Exploded view of drive shaft with constant velocity joint	200
13.2	Servicing drive shaft with constant velocity joint	203
<b>14</b>	<b>Servicing rear drive shaft - allroad</b>	<b>206</b>
14.1	Exploded view	206
14.2	Servicing inner constant velocity joint	209
14.3	Servicing outer constant velocity joint	213
14.4	Checking outer constant velocity joint	215
14.5	Checking inner constant velocity joint	216
<b>43</b>	<b>Self-levelling suspension</b>	<b>218</b>
<b>1</b>	<b>Pneumatic adaptive rear suspension</b>	<b>218</b>
1.1	Electrical/electronic components and fitting locations	218
1.2	Air supply unit	219
1.3	Fault indication by way of adaptive suspension warning lamp K134	219
1.4	Layout of sound insulation box	219
<b>2</b>	<b>Servicing self-levelling suspension</b>	<b>220</b>
2.1	Exploded view: Air supply unit	220



2.2	Performing basic setting	221
2.3	Assignment of ground clearances (setting dimensions) for adaptive suspension	222
2.4	Charging system - 2-wheel air suspension	225
2.5	Functional check	226
2.6	Exploded view: Unit retainer	226
2.7	Exploded view: Front-wheel drive wire routing	229
2.8	Exploded view: Air spring damper (front-wheel drive)	231
2.9	Removing and installing air spring	233
2.10	Removing and installing shock absorber/spring	233
2.11	Exploded view of vehicle level sender (front-wheel drive)	234
2.12	Removing and installing vehicle level sender (front-wheel drive)	235
2.13	Exploded view: All-wheel drive wire routing	236
2.14	Exploded view: All-wheel drive air spring damper	237
2.15	Removing and installing shock absorber/spring	238
2.16	Exploded view of vehicle level sender (four-wheel drive)	240
2.17	Removing and installing vehicle level sender (four-wheel drive)	241
<b>3</b>	<b>Pneumatic adaptive suspension - allroad</b>	<b>242</b>
3.1	Fitting locations	242
3.2	Exploded view: Accumulator	243
3.3	Removing and installing vehicle level sender at rear axle	243
3.4	Basic setting procedure (allroad)	244
3.5	System charging (allroad)	244
3.6	System bleeding (allroad)	249
<b>4</b>	<b>Compressor (allroad)</b>	<b>255</b>
4.1	Exploded view	255
4.2	Removing and installing compressor	256
<b>5</b>	<b>Adaptive suspension control unit J197 (allroad)</b>	<b>258</b>
5.1	Removing and installing adaptive suspension control unit J197 (allroad)	258
<b>6</b>	<b>Front axle suspension strut (allroad)</b>	<b>260</b>
6.1	Removing and installing front axle suspension strut (allroad)	260
6.2	Removing and installing mounting bracket (allroad)	264
6.3	Unbolting upper link from allroad mounting bracket	265
6.4	Removing and installing air spring	265
<b>7</b>	<b>Rear axle air spring damper (allroad)</b>	<b>268</b>
7.1	Exploded view: Rear axle air spring damper (allroad)	268
7.2	Removing and installing shock absorber/spring	269
<b>8</b>	<b>Dynamic Ride Control DRC -RS 6-</b>	<b>270</b>
8.1	Fitting locations	270
8.2	Central valve and pipe connections for suspension struts	271
8.3	DRC fault-finding	272
8.4	DRC system pressure test	273
8.5	Discharging and charging Dynamic Ride Control (DRC)	275
8.6	Removing and installing central valve	285
8.7	Service installation of dust sleeve for shock absorber piston rod	286
<b>44</b>	<b>Wheels, tyres, vehicle geometry</b>	<b>287</b>
<b>1</b>	<b>Wheels and tyres</b>	<b>287</b>
<b>2</b>	<b>Tyre Pressure Monitoring System</b>	<b>288</b>
2.1	Overview of Tyre Pressure Monitoring System components	288
2.2	Servicing Tyre Pressure Monitoring System	288
2.3	Removing and installing receiving aerials	292
2.4	Activating and deactivating Tyre Pressure Monitoring System	293
<b>3</b>	<b>Wheel alignment</b>	<b>294</b>
3.1	General notes	294

3.2	Sequence of operations for checking and adjusting wheel alignment	295
3.3	Checking centre position of steering rack (mechanical method)	295
3.4	Vehicles with Electronic Stabilising Program (ESP)	296
3.5	Explanatory notes on factory codes (PR nos.)	296
3.6	Wheel alignment must be performed:	297
3.7	Wheel alignment specifications, front-wheel drive vehicles except V8 engine	298
3.8	Wheel alignment specifications, four-wheel drive vehicles except V8 engine	300
3.9	Wheel alignment specifications, vehicles with V8 engines	302
3.10	Requirements for test	304
3.11	Measurement procedure	305
3.12	Adjusting toe-in curve at front wheels	307
3.13	Move vehicle into starting position for measuring.	307
3.14	Checking rear axle camber (FWD vehicles)	310
3.15	Centralising toe setting at rear wheels (front-wheel drive vehicles)	310
3.16	Adjusting camber at rear wheels (four-wheel drive vehicles)	310
3.17	Adjusting rear axle toe (four-wheel drive vehicles)	311
3.18	Centralising camber at front wheels	311
3.19	Adjusting toe-constant "S"	313
3.20	Adjusting toe setting at front wheels	313
<b>48</b>	<b>- Steering</b>	<b>314</b>
<b>1</b>	<b>Steering wheel with airbag</b>	<b>314</b>
1.1	Removing and installing driver's airbag unit with standard steering wheel	314
1.2	Removing and installing driver's airbag unit for sports steering wheel	315
1.3	Removing and installing steering angle sender G85	316
1.4	Remove steering column switch.	317
<b>2</b>	<b>Steering column</b>	<b>319</b>
2.1	Removing and installing steering column	319
2.2	Checking steering column for damage	323
2.3	Removing and installing steering lock housing	324
<b>3</b>	<b>Electrically adjustable steering column, steering column/belt height adjustment control unit J352</b>	<b>325</b>
3.1	Exploded view of electrically adjustable steering column	325
3.2	Description of operation	326
3.3	Electrical adjustment	326
3.4	Steering column/belt height adjustment control unit J352	327
<b>4</b>	<b>Power-assisted steering rack (left-hand drive vehicles)</b>	<b>328</b>
4.1	Exploded view of power steering rack, left-hand drive vehicles including Model Year '98	328
4.2	Exploded view of power steering rack, left-hand drive vehicles as of Model Year '99	330
4.3	Removing and installing power steering rack (left-hand drive vehicles)	331
4.4	Removing and installing power steering rack (Audi RS 6)	336
<b>5</b>	<b>Power-assisted steering rack (right-hand drive vehicles)</b>	<b>337</b>
5.1	Exploded view of power steering rack, right-hand drive vehicles up to and including Model Year '98	337
5.2	Exploded view of power steering rack, right-hand drive vehicles as of Model Year '99	338
5.3	Removing and installing power steering rack (right-hand drive vehicles)	338
5.4	Removing and installing power steering rack, right-hand vehicles with 8-cyl. Petrol engine	344
5.5	Removing and installing power steering rack (Audi RS 6)	357
<b>6</b>	<b>Servicing power steering rack</b>	<b>359</b>
6.1	Steering rack without/with integrated steering damper	359
6.2	Steering rack with external steering damper	360
<b>7</b>	<b>Servotronic steering rack</b>	<b>362</b>
7.1	Servotronic steering rack - exploded view	362
7.2	Servicing Servotronic steering rack	363

7.3	Checking voltage supply for servotronic .....	363
7.4	Checking speed signal .....	364
7.5	Checking servotronic solenoid valve N119 .....	365
<b>8</b>	<b>Adjusting power steering rack .....</b>	<b>366</b>
<b>9</b>	<b>Removing and installing track rods .....</b>	<b>367</b>
<b>10</b>	<b>Checking fluid level, bleeding steering system and checking for leaks .....</b>	<b>369</b>
10.1	Checking fluid level of power steering .....	369
10.2	Bleeding steering system .....	369
10.3	Checking steering system for leaks .....	370
<b>11</b>	<b>Power steering pump, hydraulic pipes and hoses, fluid reservoir - vehicles with 4-cylinder petrol and diesel engine .....</b>	<b>371</b>
11.1	Exploded view - vehicles with 4-cyl. petrol and diesel engine .....	371
11.2	Checking delivery pressure of power steering pump, vehicles with 4-cyl. petrol and diesel engine .....	373
11.3	Exploded view of power steering pump, vehicles with 4-cyl. petrol and diesel engine .....	376
11.4	Removing and installing power steering pump - vehicles with 4-cyl. petrol and diesel engine .....	377
<b>12</b>	<b>Power steering pump, hydraulic pipes and hoses, fluid reservoir - vehicles with 6-cylinder Diesel engine .....</b>	<b>381</b>
12.1	Exploded view - vehicles with 6-cyl. Diesel engine .....	381
12.2	Checking delivery pressure of power steering pump, vehicles with 6-cyl. Diesel engine ..	383
12.3	Exploded view of power steering pump, vehicles with 6-cyl. Diesel engine .....	386
12.4	Removing and installing power steering pump - vehicles with 6-cyl. Diesel engine .....	387
<b>13</b>	<b>Power steering pump, hydraulic pipes and hoses, fluid reservoir - vehicles with 6-cylinder petrol engine .....</b>	<b>393</b>
13.1	Exploded view, vehicles with 6 cyl. 2.7 l petrol engine .....	393
13.2	Checking delivery pressure of power steering pump, vehicles with 6 cyl. 2.7 l petrol engine .....	395
13.3	Exploded view of power steering pump, vehicles with 6 cyl. 2.7 l petrol engine .....	397
13.4	Removing and installing power steering pump, vehicles with 6-cyl. 2.7 l petrol engine .....	399
13.5	Exploded view - vehicles with 6-cyl. 2.4l, 2.8l and 3.0l petrol engine .....	404
13.6	Checking delivery pressure of power steering pump - vehicles with 6-cyl. 2.4l, 2.8l and 3.0l petrol engine .....	407
13.7	Exploded view of power steering pump - vehicles with 6-cyl. 2.4l, 2.8l and 3.0l petrol engine .....	409
13.8	Removing and installing power steering pump - vehicles with 6-cyl. 2.4l, 2.8l and 3.0l petrol engine .....	411
<b>14</b>	<b>Power steering pump, hydraulic pipes and hoses, fluid reservoir - vehicles with 6-cylinder petrol engine, biturbo .....</b>	<b>416</b>
14.1	Exploded view - vehicles with 6-cyl. petrol engine, biturbo .....	416
14.2	Checking delivery pressure of power steering pump - vehicles with 6-cyl. petrol engine, biturbo .....	419
14.3	Exploded view of power steering pump - vehicles with 6-cyl. petrol engine, biturbo .....	420
14.4	Removing and installing power steering pump - vehicles with 6-cyl. petrol engine, biturbo .....	422
<b>15</b>	<b>Power steering pump, hydraulic pipes and hoses, fluid reservoir - vehicles with 8-cylinder petrol engine .....</b>	<b>426</b>
15.1	Exploded view - vehicles with 8-cyl. petrol engine .....	426
15.2	Checking delivery pressure of power steering pump - vehicles with 8-cyl. petrol engine ..	429
15.3	Exploded view of power steering pump - vehicles with 8-cyl. petrol engine .....	431
15.4	Removing and installing power steering pump - vehicles with 8-cyl. petrol engine .....	433
<b>16</b>	<b>Power steering pump, hydraulic pipes and hoses, fluid reservoir - vehicles with 8-cylinder petrol engine with chain drive .....</b>	<b>440</b>
16.1	General notes .....	440
16.2	Removing and installing power steering pump .....	440
<b>17</b>	<b>Power steering pump, hydraulic pipes and hoses, fluid reservoir - vehicles with 8-cylinder petrol engine, biturbo .....</b>	<b>446</b>

17.1	Exploded view - vehicles with 8-cyl. petrol engine, biturbo . . . . .	446
17.2	Checking delivery pressure of power steering pump - vehicles with 8-cyl. petrol engine, biturbo . . . . .	449
17.3	Exploded view of power steering pump - vehicles with 8-cyl. petrol engine, biturbo . . . . .	451
17.4	Removing and installing power steering pump - vehicles with 8-cyl. petrol engine, biturbo . . . . .	453