

Contents

01 - Self-diagnosis	1
1 Self Diagnosis	1
1.1 Self Diagnosis	1
1.2 Basic information on self-diagnosis of pneumatic suspension system, two-wheel and four-wheel systems	1
1.3 Connection of V.A.G 1551 Fault Reader and selection of the address word	2
1.4 Clear fault memory and terminate output	4
1.5 Select functions	5
1.6 Technical information material needed	5
2 Can Bus	6
2.1 Can Bus	6
2.2 Function of the CAN bus	6
2.3 Testing of a "Two-wire bus system"	6
2.4 Fault messages in the CAN bus system	8
3 Function of the two-wheel pneumatic suspension system	10
3.1 Function of the two-wheel pneumatic suspension system	10
3.2 Function of two-wheel self-levelling suspension system	10
3.3 J197 self-levelling suspension system control unit	10
3.4 G84 self-levelling suspension system sender	10
3.5 N150, N151 suspension-strut valves	10
3.6 N111 self-levelling suspension system release valve	11
3.7 V66 self-levelling suspension system compressor motor	11
3.8 J403 relay for self-levelling suspension system compressor	11
4 Two-wheel self-levelling suspension system: Self-diagnosis	11
4.1 Two-wheel self-levelling suspension system: Self-diagnosis	11
4.2 General notes	11
4.3 J197 self-levelling suspension system control unit	12
4.4 G84 self-levelling suspension system sender	12
4.5 N150, N151 suspension-strut valves	12
4.6 N111 self-levelling suspension system release valve	12
4.7 V66 self-levelling suspension system compressor motor	13
4.8 J403 self-levelling suspension system compressor relay	13
4.9 Fault indication via indicator light K134	13
4.10 Function of self-diagnosis system	13
4.11 Poll control-unit version	15
4.12 Final control diagnosis	15
4.13 Read measured value block	17
4.14 Measured value block overview	17
4.15 Basic setting	20
4.16 Adaption: Activate and deactivate self-levelling suspension system	21
5 Electrical testing	23
5.1 Electrical testing	23
6 Fault table	30
6.1 Fault table	30
6.2 Poll fault memory	30
6.3 Fault table for self-levelling suspension system	31
7 Function of the four-wheel pneumatic suspension system	36
7.1 Function of the four-wheel pneumatic suspension system	36
7.2 Function of four-wheel self-levelling suspension system	36
7.3 J197 self-levelling suspension system control unit	36
7.4 Vehicle-level sender G76, G77, G78, G289	36
7.5 Suspension-strut valves N148, N149, N150, N151	37
7.6 Self-levelling suspension system pressure accumulator valve N311	37



7.7	N111 self-levelling suspension system release valve	37
7.8	V66 self-levelling suspension system compressor motor	37
7.9	J403 relay for self-levelling suspension system compressor	37
7.10	Self-levelling suspension system compressor temperature sender G290	38
7.11	Self-levelling suspension system operating unit E281	38
8	Four-wheel self-levelling suspension system: Self-diagnosis	38
8.1	Four-wheel self-levelling suspension system: Self-diagnosis	38
8.2	General notes	38
8.3	Fault indication via indicator light K134	38
8.4	Function of self-diagnosis system	39
8.5	Poll control unit version	40
8.6	Encoding of the control unit	41
8.7	Final control diagnosis	41
8.8	Read measured value block	44
8.9	Measured value block overview	45
8.10	Basic settings	48
8.11	Adaption: Activate and deactivate self-levelling suspension system	52
9	Electrical check on four-wheel pneumatic system	54
9.1	Electrical check on four-wheel pneumatic system	54
10	Fault table 4 Wheel self-levelling suspension system	61
10.1	Fault table 4 Wheel self-levelling suspension system	61
10.2	Poll fault memory	61
10.3	Fault table	61
11	Tyre-pressure monitoring system self diagnosis	72
11.1	Tyre-pressure monitoring system self diagnosis	72
11.2	System description	72
11.3	Description of components	72
11.4	Safety precautions	73
11.5	Poll control unit version	73
11.6	Encode control unit function	74
11.7	Safety Precautions	75
11.8	Poll fault memory	76
11.9	Read measured value block	76
11.10	Adaption	83
12	Fault table for tyre-pressure monitoring system	85
12.1	Fault table for tyre-pressure monitoring system	85
12.2	Setting-up of the tyre-pressure monitoring system	89