

Contents

01 - Self-diagnosis	1
1 Self-diagnosis of radio systems	1
1.1 General notes and safety precautions	1
1.2 Initiating self-diagnosis	1
1.3 Interrogating control unit version	3
1.4 Interrogating fault memory	3
1.5 Fault table	4
1.6 Erasing fault memory	9
1.7 End of output	10
1.8 Final control diagnosis	10
1.9 Control unit coding	11
1.10 Reading measured value block	14
1.11 Adaption	18
2 Self-diagnosis of navigation system II	25
2.1 General notes and safety precautions	25
2.2 Initiating self-diagnosis	26
2.3 Interrogating control unit version	27
2.4 Interrogating fault memory	27
2.5 Fault table	28
2.6 Erasing fault memory	29
2.7 End of output	30
2.8 Final control diagnosis	30
2.9 Reading measured value block	31
2.10 Adaption	33
3 Self-diagnosis of navigation system II-D (Navigation System Plus RNS 4.1)	37
3.1 General notes and safety precautions	37
3.2 Fault messages on navigation system display	38
3.3 Initiating self-diagnosis	39
3.4 Interrogating control unit version	40
3.5 Interrogating fault memory	41
3.6 Fault table	42
3.7 Erasing fault memory	44
3.8 End of output	45
3.9 Final control diagnosis	45
3.10 Read measured value block	45
3.11 Function status register	49
3.12 Adaption	49
4 Self-diagnosis of navigation system III	60
4.1 General notes and safety precautions	60
4.2 Initiating self-diagnosis	61
4.3 Interrogating control unit version	62
4.4 Interrogating fault memory	62
4.5 Fault table	63
4.6 Erasing fault memory	65
4.7 End of output	65
4.8 Final control diagnosis	66
4.9 Reading measured value block	66
4.10 Function status register	70
4.11 Adaption	70
5 Self-diagnosis of navigation system IV (BNS 4.0)	76
5.1 General notes and safety precautions	76
5.2 Initiating self-diagnosis	76



5.3	Interrogating control unit version	77
5.4	Interrogating fault memory	78
5.5	Fault table	79
5.6	Erasing fault memory	81
5.7	End of output	82
5.8	Final control diagnosis	82
5.9	Reading measured value block	83
5.10	Function status register	86
5.11	Adaption	87
6	Self-diagnosis of navigation system RNS-E	95
6.1	General notes and safety precautions	95
6.2	On-screen fault messages	95
6.3	Initiating self-diagnosis	96
6.4	Interrogating fault memory	97
6.5	Fault table	98
6.6	Erasing fault memory	104
6.7	End of output	105
6.8	Final control diagnosis	106
6.9	Control unit coding	109
6.10	Reading measured value block	111
6.11	Adaption	123
7	Self-diagnosis of multi-function steering wheel	136
7.1	General notes and safety precautions	136
7.2	Initiating self-diagnosis	137
7.3	Interrogating control unit version	138
7.4	Interrogating fault memory	138
7.5	Fault table	139
7.6	Erasing fault memory	140
7.7	End of output	141
7.8	Final control diagnosis	141
7.9	Control unit coding	142
7.10	Reading measured value block	145
8	Self-diagnosis of telematics system	147
8.1	General notes and safety precautions	147
8.2	Notes on enabling system	147
8.3	Initiating self-diagnosis	148
8.4	Interrogating control unit version	149
8.5	Interrogating fault memory	149
8.6	Fault table	150
8.7	Erasing fault memory	154
8.8	End of output	154
8.9	Final control diagnosis	155
8.10	Control unit coding	155
8.11	Reading measured value block	157
8.12	Adaption	161
9	Self-diagnosis of Voice Control System	168
9.1	General notes and safety precautions	168
9.2	Initiating self-diagnosis	168
9.3	Interrogating control unit version	170
9.4	Interrogating fault memory	170
9.5	Fault table	171
9.6	Erasing fault memory	172
9.7	End of output	173
9.8	Final control diagnosis	173
9.9	Coding control unit	174

9.10	Reading measured value block	175
10	Self-diagnosis of telephone	178
10.1	General notes and safety precautions	178
10.2	Initiating self-diagnosis	178
10.3	Interrogating control unit version	179
10.4	Interrogating fault memory	180
10.5	Fault table	181
10.6	Erasing fault memory	183
10.7	End of output	184
10.8	Final control diagnosis	184
10.9	Coding control unit	185
10.10	Reading measured value block	186
10.11	Adaption	189
11	Self-diagnosis of navigation system tuner for TV (TV tuner)	191
11.1	General notes and safety precautions	191
11.2	Initiating self-diagnosis	191
11.3	Interrogating control unit version	192
11.4	Interrogating fault memory	193
11.5	Fault table	194
11.6	Erasing fault memory	195
11.7	End of output	196
11.8	Final control diagnosis	196
11.9	Coding control unit	197
11.10	Reading measured value block	198
12	Connecting vehicle diagnostic, testing and information system VAS 5051 or fault reader V.A.G 1551 and selecting functions	201
12.1	Test conditions	201
12.2	Procedure	201