

Contents

68	Interior equipment	1
	1 Shelves / trim panels	1
	1.1 Removing and installing glove box	1
	1.2 Removing and installing glove box lock	2
	1.3 Removing and installing glove box lid	2
	1.4 Removing cushioning mechanism for glove box lid	3
	1.5 Removing storage compartment (driver side)	4
	1.6 Removing cover for instrument cluster	5
	1.7 Removing and installing centre console (rear)	5
	1.8 Removing and installing gear lever boot and gear knob, model year 2002>	7
	1.9 Removing side trim, rear trim and storage compartment	8
	1.10 Removing and installing handbrake lever trim	10
	1.11 Removing handbrake trim	11
	1.12 Removing and installing handbrake mounting trim	11
	1.13 Removing handbrake lever grip	12
	1.14 Removing rear vent and rear air duct connecting piece	12
	1.15 Removing rear vent trim	12
	1.16 Removing and installing centre armrest	12
	1.17 Removing support bracket for centre armrest	13
	1.18 Retrofitting centre armrest	14
	1.19 Removing and installing lift mechanism for car telephone/ mobile phone in centre armrest	14
	1.20 Removing hinge side trim	16
	1.21 Removing wire and electrical connector for telephone	16
	1.22 Removing and installing centre console (front)	16
	1.23 Removing centre section of dash panel (vehicles with "chorus" and "concert" radio)	18
	1.24 Removing centre section of dash panel (vehicles with "symphony" radio and "radio/navigation system plus")	18
	1.25 Removing cup holder and storage compartment	19
	1.26 Removing insert for centre console	19
	1.27 Removing radio cover panel	20
	1.28 Removing cover and trim for switch module	21
	1.29 Removing and installing front ashtray (vehicles with "chorus" and "concert" radio)	21
	1.30 Removing and installing front ashtray (vehicles with "symphony" radio and "radio/navigation system plus")	22
	1.31 Removing trim for ashtray (front)	23
	1.32 Removing and installing cigarette lighter (front)	23
	2 Interior mirror	25
	2.1 Removing and installing interior mirror with rigid base	25
	2.2 Removing interior mirror (automatic anti-dazzle interior mirror, interior mirror with compass)	25
	2.3 Checking operation of automatic anti-dazzle interior mirror	26
	2.4 Calibrating interior mirror with compass (only applies to USA)	26
	2.5 Bonding in retaining plate for interior mirror	30
69	Passenger protection	33
	1 Seat belts	33
	1.1 Safety requirements for handling pyrotechnic belt tensioners	33
	1.2 Disposal of pyrotechnic belt tensioners	33
	1.3 Overview of seat belt anchorage points	34
	1.4 Removing and installing three-point seat belt with belt height adjuster and belt tensioner	35
	1.5 Belt buckle anchorage point	36
	1.6 Removing and installing belt buckle on Recaro seat	37



1.7	Outer floor panel anchorage point	38
1.8	Removing and installing three-point seat belt (rear)	38
1.9	Removing belt adjuster (rear)	39
1.10	Removing and installing third rear three-point seat belt (folding backrest, rear)	40
1.11	5 - Removing and installing third rear three-point seat belt (fixed backrest, rear)	42
1.12	6 - Centre belt end fittings	43
2	Seat belts, rear (Avant)	44
2.1	Overview of seat belt anchorage points	44
2.2	Removing and installing three-point seat belt (rear) - Avant	46
2.3	Removing and installing three-point seat belt (rear) for child seat - Avant	47
2.4	Removing and installing outer anchorage point (rear)	48
2.5	Removing and installing centre belt buckle for child seat	48
3	Checking seat belts	49
3.1	Checking belt	49
3.2	Checking locking function of retractor mechanism for securing child safety seats (does not apply to driver's seat belt)	51
3.3	Checking belt-fastened sensor for three-point seat belts (rear) with belt tensioner	52
4	Children's bench - Avant	53
4.1	Removing and installing belt guides	53
5	Safety requirements for airbags	54
5.1	Safety precautions when working on airbag	54
5.2	Side airbag safety regulations	54
5.3	Additional safety regulations for curtain airbags	55
5.4	Additional safety regulations for curtain airbags (from week 36.02 onwards)	56
5.5	Disposal of airbag units	57
5.6	Renewing airbag units following an accident	57
6	Servicing airbags	60
6.1	Overview of fitting locations	60
6.2	Removing and installing airbag control unit -J 234- up to week 35.99	61
6.3	Removing and installing airbag control unit -J 234- from week 36.99 onwards	61
6.4	Removing and installing ISOFIX retainer	62
7	Servicing airbag (driver side)	64
7.1	Removing and installing airbag unit (driver side) up to 08.97	64
7.2	Removing and installing steering wheel up to 08.97	66
7.3	Removing and installing airbag unit (driver side) from 08.97 onwards	67
7.4	Removing and installing steering wheel from 08.97 onwards	69
7.5	Removing and installing airbag unit (driver side) on vehicles with sports steering wheel	70
7.6	Removing and installing sports steering wheel	71
7.7	Removing and installing return ring with slip ring	72
8	Servicing airbag (front passenger side)	74
8.1	Removing and installing airbag (front passenger side)	74
8.2	Removing and installing key-operated switch for front passenger's airbag	75
8.3	Removing warning lamp for airbag deactivated on front passenger side	76
9	Servicing side airbags	77
9.1	Removing and installing side airbag	77
9.2	Removing and installing side airbag (Recaro seat)	78
9.3	Removing and installing side airbag, rear (folding backrest)	80
9.4	Removing and installing side airbag, rear (fixed backrest)	81
9.5	Removing and installing lateral acceleration sender	82
9.6	Removing and installing lateral acceleration sender, MY 2002>	83
9.7	Removing and installing crash sensor for rear side airbag (curtain airbag), model year 2003>	84
10	Servicing curtain airbags	86
10.1	Removing and installing curtain airbag (saloon)	86
10.2	Removing and installing curtain airbag (Avant)	89

10.3	Removing and installing curtain airbag guide at B-pillar	93
10.4	Removing and installing curtain airbag guide at C-pillar	95
11	Servicing curtain airbag (from week 36.02 onwards)	96
11.1	Removing and installing curtain airbag on saloon (from week 36.02 onwards)	96
11.2	Removing and installing curtain airbag (Avant, from week 36.02 onwards)	98
11.3	Removing and installing curtain airbag guide at B-pillar (from week 36.02 onwards)	101
11.4	Removing and installing curtain airbag guide at C-pillar (Avant, from week 36.02 onwards)	102
12	Deactivating side airbag (rear)	103
12.1	Deactivating	103
12.2	Activating	103
12.3	Sticker for deactivated side airbag (rear)	104
70	Trim, insulation	105
1	Door trim (front)	105
1.1	Overview of fitting locations	105
1.2	Removing and installing door trim (front)	106
1.3	Removing and installing window regulator switch (driver side)	107
1.4	Removing and installing window regulator switch (front passenger side)	108
1.5	Removing and installing insulation for door trim (front)	109
1.6	Adjusting locking knob	109
1.7	Overview of wiring in door trim	109
1.8	Removing and installing door warning light and footwell light	110
1.9	Removing and installing treble loudspeaker	110
1.10	Removing bass loudspeaker	111
1.11	Removing and installing hinged pocket assembly	111
1.12	Diagram of hinged pocket with memory switch unit and pre-selection clock for auxiliary heater	111
1.13	Removing and installing memory switch unit	112
1.14	Removing and installing cover for memory switch unit	113
1.15	Removing and installing pre-selection clock for auxiliary heater	113
1.16	Removing and installing switch for pre-selection clock	114
1.17	Removing and installing hinged pocket	114
1.18	Removing central locking switch	116
1.19	Removing trim panel in door trim	116
1.20	Removing interior door handle	116
2	Door trim (rear)	118
2.1	Overview of fitting locations	118
2.2	Removing and installing door trim (rear)	119
2.3	Removing and installing window regulator switch unit	120
2.4	Removing and installing insulation for door trim (rear)	121
2.5	Adjusting locking knob	121
2.6	Overview of wiring in door trim	121
2.7	Removing and installing door warning light and footwell light	122
2.8	Removing bass loudspeaker	122
2.9	Removing and installing treble loudspeaker	123
2.10	Removing trim panel in door trim	123
2.11	Removing interior door handle	123
2.12	Removing and installing hinged pocket assembly	124
2.13	Removing and installing hinged pocket	124
2.14	Removing and installing sun blind for side window	126
2.15	Removing and installing retaining hook for sun blind	127
3	Dash panel	128
3.1	Overview of fitting locations	128
3.2	Removing dash panel	128
3.3	Removing dash panel cover	134

4	Removing and installing central tube	135
4.1	Overview of fitting locations	135
4.2	Removing and installing central tube for dash panel	135
5	Roof trim	141
5.1	Removing and installing moulded headliner and sun visors	141
5.2	Routing of wiring on back of moulded headliner	143
6	Roof trim for curtain airbag (saloon)	145
6.1	Removing and installing moulded headliner and sun visors	145
6.2	Routing of wiring on back of moulded headliner	147
6.3	Moulded headliner with deformation elements (USA vehicles, from week 36.02 onwards)	149
7	Roof trim (Avant)	150
7.1	Removing and installing moulded headliner and sun visors (Avant)	150
7.2	Routing of wiring on back of moulded headliner (Avant)	152
8	Roof trim for curtain airbag (Avant)	154
8.1	Removing and installing moulded headliner and sun visors (Avant)	154
8.2	Routing of wiring on back of moulded headliner (Avant)	157
8.3	Moulded headliner with deformation elements (USA Avant vehicles, from week 36.02 onwards)	158
9	Trim panels	160
9.1	Removing and installing A-pillar trim (top)	160
9.2	Removing and installing A-pillar trim (bottom)	161
9.3	Removing and installing foot rest and foot rest bracket	161
9.4	Removing sill panel trims	162
9.5	Removing and installing B-pillar trim (top)	162
9.6	Removing and installing B-pillar trim (bottom)	164
9.7	Removing and installing C/D-pillar trim (top)	165
9.8	Removing and installing sill/pillar trim (rear)	166
9.9	Removing and installing rear shelf (vehicles with folding backrest, rear)	167
9.10	Removing and installing rear shelf (vehicles with fixed backrest, rear)	168
9.11	Removing and installing electric sun blind for rear window	169
9.12	Removing and installing rear lid trim	171
9.13	Removing and installing rear cross panel trim	172
9.14	Luggage compartment side trim (vehicles with fixed seat, rear)	173
9.15	Luggage compartment side trim (with split rear seat)	174
9.16	Removing and installing back panel trim	175
9.17	Removing and installing floor covering	175
10	Trim panels for curtain airbag	178
10.1	Removing and installing A-pillar trim (top)	178
10.2	Removing and installing intermediate piece for B-pillar and coat hook	181
10.3	Removing and installing B-pillar trim (top)	181
10.4	Removing and installing C-pillar trim (top)	185
10.5	Removing and installing D-pillar trim	186
10.6	Removing and installing roof grab handle for trim panels for curtain airbag	189
11	Trim panels for curtain airbag (saloon, from week 36.02 onwards)	190
11.1	Removing and installing A-pillar trim, top (from week 36.02 onwards)	190
11.2	Removing and installing A-pillar trim (top) without curtain airbag (from week 36.02 onwards)	191
11.3	Removing and installing B-pillar trim, top (from week 36.02 onwards)	192
11.4	Removing and installing C-pillar trim, top (from week 36.02 onwards)	194
11.5	Removing and installing D-pillar trim (from week 36.02 onwards)	195
11.6	Coat hook and joint at A/D-pillar (from week 36.02 onwards)	196
11.7	Removing and installing roof grab handle (from week 36.02 onwards)	197
11.8	Removing and installing deformation element for trim panels with curtain airbag (from week 36.02 onwards)	198

12	Trim panels - Avant	199
12.1	Removing and installing C-pillar trim (top)	199
12.2	Removing and installing D-pillar trim (top)	201
12.3	Luggage compartment side trim	202
12.4	Removing electric socket (rear)	203
12.5	Removing and installing load guard	203
12.6	Removing and installing rear lid trim	205
12.7	Removing and installing rear lid trim (with sun blind)	206
12.8	Removing and installing sun blind for rear lid - Avant	209
12.9	Roof end trim	210
12.10	Removing and installing rear cross panel trim	210
12.11	Removing and installing support for spare wheel cover	211
12.12	Removing and installing luggage compartment floor covering and support for luggage compartment floor covering - Avant	211
12.13	Removing and installing luggage compartment floor covering and supports for luggage compartment floor covering - vehicles with children's bench	212
12.14	Bracket for fastening rings	213
13	Trim panels for curtain airbag (Avant)	214
13.1	Removing and installing intermediate piece for B-pillar and coat hook	214
13.2	Removing roof frame trim	215
13.3	Removing and installing C-pillar trim (top)	217
13.4	Removing and installing D-pillar trim	218
13.5	Removing and installing roof grab handle for trim panels for curtain airbag	221
14	Trim panels for curtain airbag (Avant, from week 36.02 onwards)	222
14.1	Removing and installing A-pillar trim, top (from week 36.02 onwards)	222
14.2	Removing and installing A-pillar trim (top) without curtain airbag (from week 36.02 onwards)	223
14.3	Removing and installing B-pillar trim, top (from week 36.02 onwards)	224
14.4	Removing roof frame trim (from week 36.02 onwards)	226
14.5	Removing and installing C-pillar trim, top (from week 36.02 onwards)	227
14.6	Removing and installing D-pillar trim (from week 36.02 onwards)	228
14.7	Retainers for load guard and joint at A-pillar/roof frame (from week 36.02 onwards)	230
14.8	Removing and installing roof grab handle (from week 36.02 onwards)	231
14.9	Removing and installing deformation element for trim panels (from week 36.02 onwards)	232
72	Seat frames	233
1	Front seats	233
1.1	Removing and installing seat trim cover (front)	233
1.2	Removing and installing seat trim cover (front) - seat with seat memory/electric adjustment	234
1.3	Removing and installing front seat rail cover (rear, sill side)	235
1.4	Removing and installing front seat rail cover (rear, tunnel side)	236
1.5	Removing and installing seat	236
1.6	Connecting airbag adapter VAS 5094	239
1.7	Removing and installing front seat backrest	241
1.8	Removing backrest adjuster	244
1.9	Converting front seat backrest of sports seat for installation with standard seat	244
1.10	Removing and installing seat adjustment switch	245
1.11	Removing and installing seat adjustment switch - seat with seat memory/electric adjustment	246
1.12	Removing and installing switch for four-way lumbar support	246
1.13	Removing and installing seat memory control unit	246
1.14	Dismantling drawer (storage compartment)	247
1.15	Removing drawer frame	247
1.16	Servicing seat longitudinal adjuster - standard seat	247

1.17	Removing and installing longitudinal seat adjuster - seat with seat memory, electric adjustment	248
1.18	Wiring adapters for electric motors	250
1.19	Removing rear slides	250
1.20	Removing and installing seat height adjustment motor - seat with seat memory, electric adjustment	250
1.21	Removing and installing seat height adjustment motor	251
1.22	Overview of seat height adjustment motor versions	254
1.23	Checking mounting on seat frame for seat height adjustment motor	254
1.24	Removing and installing seat rake adjustment motor - seat with seat memory/electric adjustment	255
1.25	Removing and installing seat longitudinal adjustment motor - seat with seat memory/electric adjustment	255
1.26	Removing and installing backrest adjustment motor - seats with seat memory/electric adjustment	256
1.27	Removing and installing four-way lumbar support	259
1.28	Routing of wiring on seat	260
1.29	Removing head restraints with slide-in locking mechanism	268
1.30	Removing seat base cover (inside)	269
1.31	Removing seat base cover (outside)	269
2	Recaro seat	270
2.1	Removing and installing seat	270
2.2	Connecting airbag adapter VAS 5094	273
2.3	Removing and installing backrest	275
2.4	Removing and installing backrest cover panel	277
2.5	Removing and installing seat cushion	278
2.6	Removing and installing seat cushion extension	279
2.7	Removing and installing seat side trim	280
2.8	Removing and installing bracket for seat side trim	281
2.9	Removing and installing switch unit	281
2.10	Removing and installing trim covers for fittings	283
2.11	Removing and installing spring cover	285
2.12	Removing and installing two-way lumbar support	286
2.13	Removing and installing lumbar support motor with gearing	287
2.14	Removing and installing backrest motor with gearing	287
2.15	Removing and installing seat height adjustment motor	289
2.16	Removing and installing head restraint	289
2.17	Removing and installing head restraint guide	290
2.18	Removing and installing console	291
2.19	Routing of wiring for Recaro seat pan	292
2.20	Routing of wiring for Recaro backrest	297
3	Rear seats	298
3.1	Removing and installing seat bench	298
3.2	Removing and installing seat bench with integrated child seat	300
3.3	Retrofitting integrated child seat	302
3.4	Removing and installing foot rest for seat bench with integrated child seat	303
3.5	Removing and installing 1/3 section of backrest (left-side)	303
3.6	Removing and installing 2/3 section of backrest (right-side)	305
3.7	Removing and installing side padding for rear seat	307
3.8	Removing and installing retainer for side padding	308
3.9	Removing and installing centre bracket	308
3.10	Removing and installing outer fitting for rear seat backrest	308
3.11	Removing head restraints	308
3.12	Removing head restraints with slide-in locking mechanism	309
3.13	Removing and installing fixed rear seat backrest	310
4	Child seat - Avant	312

4.1	Removing and installing children's bench - Avant	312
4.2	Removing and installing base frame of child seat - Avant	313
4.3	Removing and installing backrest	314
4.4	Removing and installing head restraints	315
4.5	Removing and installing stop sleeves	315
4.6	Removing and installing grip moulding	317
4.7	Removing and installing locking mechanisms	318
74	Seat - padding, covers	320
1	Seat covers and padding for front seats	320
1.1	Removing and installing seat cover and padding	320
1.2	Overview of seat padding versions (two-piece)	321
1.3	Removing and installing backrest cover and padding	322
1.4	Removing footwell light (rear)	324
1.5	Overview of seat heating	324
1.6	Removing and installing seat heating element	326
1.7	Removing and installing backrest heating element	327
1.8	Removing and installing seat cover and padding (sports seat)	327
1.9	Removing and installing backrest cover and padding (sports seat)	328
1.10	Removing seat heater (sports seat)	333
1.11	Removing backrest heater (sports seat)	334
1.12	Removing and installing head restraint cover and padding	335
1.13	Removing and installing cover and padding for head restraint with slide-in locking mechanism	335
2	Covers and padding (Recaro seat)	337
2.1	Removing and installing seat cover and padding	337
2.2	Removing and installing cover and padding for seat cushion extension	338
2.3	Removing and installing backrest cover and padding	339
2.4	Removing and installing head restraint cover and padding	340
2.5	Removing and installing seat heating element	341
2.6	Removing and installing heating element for seat cushion extension	342
2.7	Removing and installing backrest heating element	343
3	Rear seat covers and padding	344
3.1	Removing and installing rear seat bench cover and padding	344
3.2	Removing and installing rear seat bench cover and padding - seat bench with moulded seats (4+1)	345
3.3	Removing cup holder trim and cup holder	345
3.4	Detaching seat cover in area of cup holder	346
3.5	Removing and installing cover and padding for split rear seat backrest	346
3.6	Removing and installing split backrest cover and padding - moulded seats (4+1)	351
3.7	Removing and installing cover and padding for fixed backrest (rear)	355
3.8	Removing guides for outer head restraints	357
3.9	Removing guides for centre head restraint (fixed backrest, rear)	357
3.10	Removing centre armrest for fixed backrest (rear)	357
3.11	Removing frame for load-through hatch (fixed backrest)	358
3.12	Removing load-through hatch (fixed backrest)	358
3.13	Retrofitting load-through hatch (fixed backrest)	358
3.14	Removing and installing load-through hatch (folding rear seat)	359
3.15	Making opening for load-through hatch in new seat cover (folding rear seat)	359
3.16	Overview of heating element versions (rear)	359
3.17	Removing and installing seat heating element	360
3.18	Removing and installing backrest heating element	361
3.19	Removing and installing cover and padding for head restraint with slide-in locking mechanism	363
4	Children's bench - Avant	365
4.1	Removing and installing head restraint cover	365



4.2	Removing head restraint guides	365
4.3	Removing and installing folding support trim	365
4.4	Removing and installing closure mouldings	367
4.5	Removing and installing grip moulding	368
4.6	Removing and installing seat bench cover	369
4.7	Removing and installing Bowden cable	370