

Contents

50 - Body - front	1
1 Body - front	1
1.1 Removing and installing lock carrier with attachments	1
1.2 Lock carrier service position	3
1.3 Exploded view of front wing	5
1.4 Exploded view of noise insulation	6
55 - Bonnet, rear lid	8
1 Bonnet	8
1.1 Contact corrosion	8
1.2 Removing, installing and adjusting bonnet	8
1.3 Removing and installing gas-filled strut	11
1.4 Removing and installing radiator grille	11
1.5 Removing and installing catch	12
1.6 Bonnet lining	12
1.7 Removing and installing bottom part of bonnet lock	12
1.8 Removing and installing cable for bonnet	12
2 Rear lid	14
2.1 Removing and installing rear lid and rear lid lock	14
2.2 Removing and installing rear lid lock and handle mechanism	15
2.3 Adjusting rear lid	16
2.4 Removing and installing remote release motor	17
2.5 Removing and installing rear lid actuator	17
2.6 Removing and installing rear lid hinge	18
2.7 Removing and installing gas-filled strut	18
2.8 Installing rear lid seal	19
2.9 Adjusting buffer stops	19
3 Avant rear lid	20
3.1 Removing and installing rear lid	20
3.2 Adjusting rear lid	20
3.3 Removing and installing rear lid hinge	22
3.4 Removing and installing rear lid seal	23
3.5 Removing and installing rear lid lock and handle mechanism	23
3.6 Removing and installing rear lid actuator	25
57 - Front doors, door components, central locking	26
1 Front door	26
1.1 Removing and installing front door and door subframe	26
1.2 Removing and installing door hinges	27
1.3 Removing and installing window lifter and door window	28
1.4 Removing and installing window lifter motor	29
1.5 Adjusting front door window	30
1.6 Adjusting front door	30
1.7 Removing and installing door seal	32
1.8 Exploded view of front door handle and door lock	32
1.9 Removing and installing door lock	33
1.10 Exploded view of door handle removal and installation	34
1.11 Removing and installing door handle	35
1.12 Front door handle pre-assembly	36
1.13 Servicing central locking system	38
1.14 Removing actuator for filler neck compartment lid	39
1.15 Removing and installing rear lid actuator	39



58 - Rear doors, door components	41
1 Rear door	41
1.1 Removing and installing rear door and door subframe	41
1.2 Removing and installing door hinges	43
1.3 Removing and installing window lifter and door window	43
1.4 Removing and installing window lifter motor	45
1.5 Adjusting rear door window	46
1.6 Adjusting rear door	46
1.7 Removing and installing door seal	48
1.8 Exploded view of rear door handle and door lock	48
1.9 Removing and installing door lock	50
1.10 Removing door handle	50
1.11 Removing and installing door handle	51
1.12 Rear door handle pre-assembly	52
60 - Sunroof	53
1 Servicing sunroof	53
1.1 Exploded view of sunroof	53
1.2 Removing and installing wind deflector	53
1.3 Exploded view of sunroof panel removal and installation	54
1.4 Removing and installing trim	55
1.5 Removing and installing sunroof panel	56
1.6 Adjusting sunroof panel	56
1.7 Replacing panel seal	57
1.8 Adjusting zero position (motor)	57
1.9 Checking and adjusting zero position (guide plate)	57
2 Water drain hoses	58
2.1 Cleaning water drain hoses	58
63 - Bumpers	59
1 Front bumper	59
1.1 Exploded view of front bumper removal and installation	59
1.2 Removing and installing air inlet grille	60
1.3 Removing and installing RS6 air inlet grille	60
1.4 Attaching cover to wing	61
1.5 Attaching bumper to impact absorber	62
1.6 Removing and installing guide	63
1.7 Removing cross member from cover/installing	63
1.8 Removing and installing impact absorber	64
2 Saloon rear bumper	65
2.1 Exploded view of rear bumper removal and installation	65
2.2 Exploded view of RS6 rear bumper removal and installation	66
2.3 Removing and installing guide	67
2.4 Removing and installing impact absorber	67
2.5 Attaching cover to side panel	67
3 Avant rear bumper	68
3.1 Exploded view of rear bumper removal and installation	68
3.2 Exploded view of RS6 rear bumper removal and installation	69
3.3 Removing and installing guide	70
3.4 Removing and installing impact absorber	70
3.5 Attaching cover to side panel	71
64 - Glazing	72
1 Windows bonded flush with bodywork	72
1.1 General information on removing and installing windows bonded flush with bodywork	72

1.2	Windscreen repair using repair resin, Talon VAS 1993/2	74
1.3	Materials	74
1.4	Minimum setting times	75
1.5	Cleaning off adhesive sealing material	75
1.6	Re-sealing windows	75
2	Windscreen	76
2.1	Exploded view of windscreen removal and installation	76
2.2	Removing windscreen	77
2.3	Preparation for windscreen installation	79
2.4	Installing windscreen	80
3	Side window	82
3.1	Exploded view of side window removal and installation	82
3.2	Removing intact side window	82
3.3	Removing shattered side window	83
3.4	Installing intact window	83
3.5	Installing new window	84
4	Avant side window	85
4.1	Removing and installing Avant side window	85
4.2	Removing intact side window	86
4.3	Removing shattered side window	89
4.4	Installing side window	89
5	Rear window	91
5.1	Exploded view of rear window removal and installation	91
5.2	Removing intact rear window	92
5.3	Removing shattered rear window	94
5.4	Installing rear window	95
6	Avant rear window	96
6.1	Exploded view of Avant rear window removal and installation	96
6.2	Removing intact rear window	97
6.3	Removing shattered rear window	99
6.4	Preparation for window installation	99
6.5	Installation instructions	101
66	Exterior equipment	102
1	Roof mouldings	102
1.1	Removing and installing roof joint moulding	102
1.2	Removing and installing Avant roof joint moulding	103
1.3	Removing and installing decorative roof trim	104
1.4	Removing and installing Avant decorative roof trim	105
2	Roof rail	106
2.1	Removing and installing roof rail	106
3	Protective mouldings	107
3.1	Replacing protective side mouldings	107
3.2	Removing and installing trim cover for sill panel	107
3.3	Removing and installing trim cover for sill panel (Allroad)	109
4	Trim panels	111
4.1	Removing and installing B-pillar trim	111
5	Rear lid decorative trim	113
5.1	Replacing rear lid decorative trim	113
6	Rear view mirror	114
6.1	Removing and installing rear view mirror	114
6.2	Replacing housing for exterior mirror	115
6.3	Replacing electric mirror adjustment unit	115
7	Protective sheeting for side panel	116



7.1	Bonding protective sheeting onto side panel	116
8	Outer sill moulding	117
8.1	Replacing outer sill moulding	117
9	Trim	118
9.1	Removing and installing sill panel trim	118
9.2	Removing and installing sill panel trim (Allroad)	119
9.3	Removing and installing sill panel trim (RS6)	121
9.4	Removing and installing sill moulding	123
10	Wheel housing liner	124
10.1	Removing and installing front wheel housing liner	124
10.2	Removing and installing rear wheel housing liner	125
11	Covers	126
11.1	Removing and installing cover for front wheel housing (Allroad and RS6)	126
11.2	Removing and installing cover for rear wheel housing (Allroad)	127
12	RS6 rear spoiler	129
12.1	Removing and installing Saloon rear spoiler	129
12.2	Removing rear spoiler	129
12.3	Removing and installing Avant rear spoiler	131