

## Contents

<b>01 - Self-diagnosis, Electrical check . . . . .</b>	<b>1</b>
1 <b>Self-diagnosis of heating system . . . . .</b>	<b>1</b>
1.1    Self-diagnosis of heating system . . . . .	1
1.2    Function . . . . .	1
1.3    Technical data for self diagnosis . . . . .	2
1.4    Test requirements for self-diagnosis . . . . .	3
1.5    Safety notes . . . . .	3
2 <b>Connecting vehicle diagnostic, measuring and information system VAS 5051 or fault reader V.A.G 1551 and selecting function . . . . .</b>	<b>3</b>
2.1    Connecting vehicle diagnostic, measuring and information system VAS 5051 or fault reader V.A.G 1551 and selecting function . . . . .	3
3 <b>Interrogating fault memory . . . . .</b>	<b>6</b>
3.1    Interrogating fault memory . . . . .	6
4 <b>Fault table . . . . .</b>	<b>7</b>
4.1    Fault table . . . . .	7
5 <b>Final control diagnosis . . . . .</b>	<b>9</b>
5.1    Final control diagnosis . . . . .	9
6 <b>Basic setting . . . . .</b>	<b>11</b>
6.1    Basic setting . . . . .	11
7 <b>Erasing fault memory, ending output . . . . .</b>	<b>13</b>
7.1    Erasing fault memory, ending output . . . . .	13
8 <b>Reading measured value block . . . . .</b>	<b>14</b>
8.1    Reading measured value block . . . . .	14
9 <b>Electrical test of heater controls . . . . .</b>	<b>18</b>
9.1    Electrical test of heater controls . . . . .	18
10 <b>Electrical test of rear window heating . . . . .</b>	<b>24</b>
10.1   Electrical test of rear window heating . . . . .	24
11 <b>Electrical test of additional heater . . . . .</b>	<b>25</b>
11.1   Electrical test of additional heater . . . . .	25
<b>80 - Heating . . . . .</b>	<b>27</b>
1 <b>Heater components on vehicle exterior . . . . .</b>	<b>27</b>
1.1    Heater components on vehicle exterior . . . . .	27
1.2    Checking vent frame . . . . .	30
1.3    Removing and installing dust and pollen filter . . . . .	30
2 <b>Heater components in vehicle interior . . . . .</b>	<b>31</b>
2.1    Heater components in vehicle interior . . . . .	31
2.2    Removing and installing heater controls . . . . .	37
2.3    Removing and installing Bowden cable for left-hand temperature flap . . . . .	39
2.4    Remoiving and installing Bowden cable for right-hand temperature flap . . . . .	41
2.5    Removing and installing series resistor -N24 for fresh air blower . . . . .	42
2.6    Removing and installing fresh air blower -V2 . . . . .	42
2.7    Removing and installing defrost flap positioning motor -V107 . . . . .	43
2.8    Removing and installing central flap positioning motor -V70 . . . . .	43
2.9    Removing and installing fresh/recirculated air flap positioning motor -V154 . . . . .	44
2.10   Making special tool for removing dash-panel vents . . . . .	44
2.11   Removing and installing centre dash-panel vent . . . . .	45
2.12   Removing and installing left-hand dash-panel vent . . . . .	46
2.13   Removing and installing windscreen defroster vent . . . . .	47
2.14   Removing and installing right-hand dash-panel vent . . . . .	47
2.15   Removing and installing left-hand and right-hand side window defroster vents . . . . .	48
2.16   Removing and installing heater element for additional heater -Z35 . . . . .	48

2.17	Removing and installing heat exchanger . . . . .	49
<b>3</b>	<b>Changes to the heating system since 09.98 . . . . .</b>	<b>54</b>
3.1	Changes to the heating system since 09.98 . . . . .	54
3.2	Visible differences between heater types "1" and "2" . . . . .	55
<b>4</b>	<b>Dismantling and assembling heater controls . . . . .</b>	<b>57</b>
4.1	Dismantling and assembling heater controls . . . . .	57
<b>5</b>	<b>Air duct in heater and in vehicle interior . . . . .</b>	<b>59</b>
5.1	Air duct in heater and in vehicle interior . . . . .	59
5.2	Air duct in heater . . . . .	59
5.3	Air ducts in vehicle interior . . . . .	63
<b>6</b>	<b>Removing and installing heater (complete) . . . . .</b>	<b>66</b>
6.1	Removing and installing heater (complete) . . . . .	66
<b>7</b>	<b>Dismantling and assembling heater . . . . .</b>	<b>69</b>
7.1	Dismantling and assembling heater . . . . .	69
<b>8</b>	<b>Dismantling and assembling air distributor housing . . . . .</b>	<b>72</b>
8.1	Dismantling and assembling air distributor housing . . . . .	72
<b>9</b>	<b>Dismantling and assembling air duct with intake housing . . . . .</b>	<b>78</b>
9.1	Dismantling and assembling air duct with intake housing . . . . .	78